CITIZEN

FALL 2019 CITIZEN CATALOG






PROFESSIONAL-GRADE TIMEPIECE INSTRUMENTS







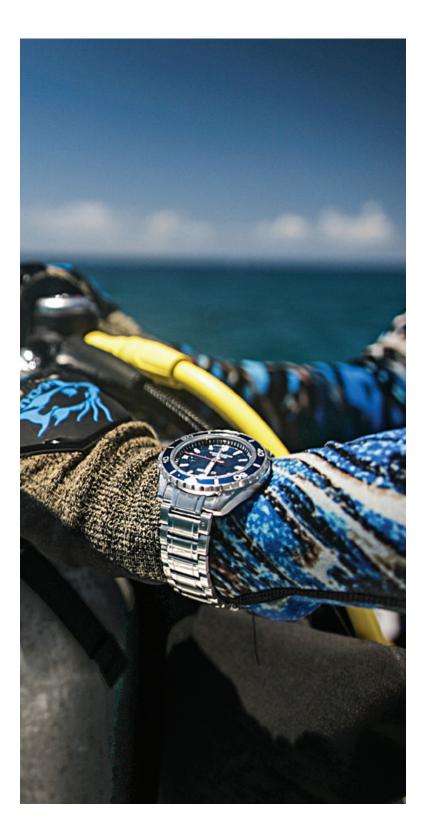



CELEBRATING THE 30TH ANNIVERSARY OF

PROMASTER

CITIZEN's PROMASTER collection captures the admiration of adventurers around the world. Whether your adventure starts on sand, snow, or 50,000 feet above the planet, CITIZEN's PROMASTER collection of pro-grade timepiece instruments are engineered to go with you.

№ PROMASTER

30 YEARS OF CREATING TOOLS FOR THE EXTREME

For 30 years, CITIZEN's PROMASTER collection has captured the passion and admiration of sports enthusiasts around the world. We're celebrating this milestone by launching three commemorative PROMASTER models, AIR, LAND, and SEA, designed to take adventurers to higher heights and greater depths than anything before them. Through a partnership with the History Channel, we've released a campaign to celebrate activists with a passion for environmental wellness — those unsung heroes who actively protect the environment every day.

The series highlights their ongoing efforts to save the world's most pristine environments and the animals that call them home.









1990 PROMASTER ALTICHRON 1994 PROMASTER AIR DIVER'S 200M

PROMASTER
TITANIUM AIR DIVER'S 200M

2017
PROMASTER
PROFESSIONAL
DIVER'S 1000M





ANGELA LINDVALL

AND CITIZEN

CITIZEN IS PROUD TO ANNOUNCE THAT MODEL AND ACTRESS ANGELA LINDVALL WILL BE THE FACE OF OUR NEW LADIES' CAMPAIGN.

"I am so grateful to align with a brand who shares my vision to spread light into the world and inspire change for the better," she says. We couldn't agree more.

Throughout the collaboration, Angela will align herself with CITIZEN's ongoing *Get a Light, Give a Light* program, which donates a portion of all proceeds to bringing solar-powered lights to disaster-stricken communities.

WATCHES POWERED BY ANY LIGHT

It started with a simple, yet revolutionary concept: a watch that never needs a battery. CITIZEN Eco-Drive technology harnesses the power of light — from any natural or artificial light source — and converts it into energy which is stored in a permanently rechargeable lithium-ion cell. It recharges continuously in any kind of light to run forever.

Never Needs a Battery

Eco-Drive.



HOW IT WORKS

Converts any light into energy

Energy is stored in a power cell

Keeps most watches working, for at least 6 months, even if stored in the dark

CITIZEN


BETTER STARTS NOW

It is a synthesis of our brand voice. The guide for everything we do.

How we invent and manufacture our product. The stories and beliefs we share with our customers. How we act and work as individuals every day. It can tell the whole world who we are in 3 words.

CONTENTS

	ECO-DRIVE	90	Brycen
10	Promaster Aqualand	92	Paradigm
12	Promaster Diver	96	CITIZEN Garrison
14	Promaster Aqualand 200M Depth Meter	101	Brycen
15	Promaster 1000M Professional Diver	104	Nighthawk
15	Promaster Professional Diver	105	Avion
16	Promaster Navihawk	106	Primo
18	Promaster Skyhawk A•T	107	Endeavor
19	Limited Edition Promaster Skyhawk A•T	107	Ecosphere
20	Promaster Blue Angels Skyhawk A•T	110	Silhouette Crystal
22	Promaster Blue Angels World Chronograph	116	Crystal
A•T			
23	Promaster Blue Angels Navihawk		DRIVE
23	Promaster Blue Angels Nighthawk	120	Men's Drive
24	Promaster Altichron	132	Ladies' Drive
26	Promaster Tough		
28	Promaster SST		DISNEY
30	Promaster Tsuno Chrono Racer	142	Disney Mickey Mouse
31	Limited Edition Promaster Tsuno Chrono Racer	148	Marvel Watches By CITIZEN
34	Satellite Wave GPS Freedom		
36	PCAT	152 '	Index
37	World Chronograph A∙T		
40	Capella		Technical Appendix
44	CITIZEN Ceci	176	Why CITIZEN
47	Bianca	181	FAQ's
48	CITIZEN $\mathscr L$ Sunrise	192	Eco-Drive Recharge Guide
49	CITIZEN ${\mathscr L}$ Ambiluna	194	Watch Care
49	Jolie	196	Bracelet Sizing Guide
50	Calendrier	199	Watch Setting Instructions
54	Ladies' World Time Perpetual	217	Bracelet Sizing Tools
55	Men's World Time Perpetual	218	Warranty
56	Corso	219	Caseback Markings
62	Corso Diamond	220	Setting Instructions
64	Corso	220	United States Service Centers
67	Corso Diamond		
67	Chandler		Inside Back
73	Paradigm		Specifications and Model Codes
76	Stiletto		
80	Axiom		

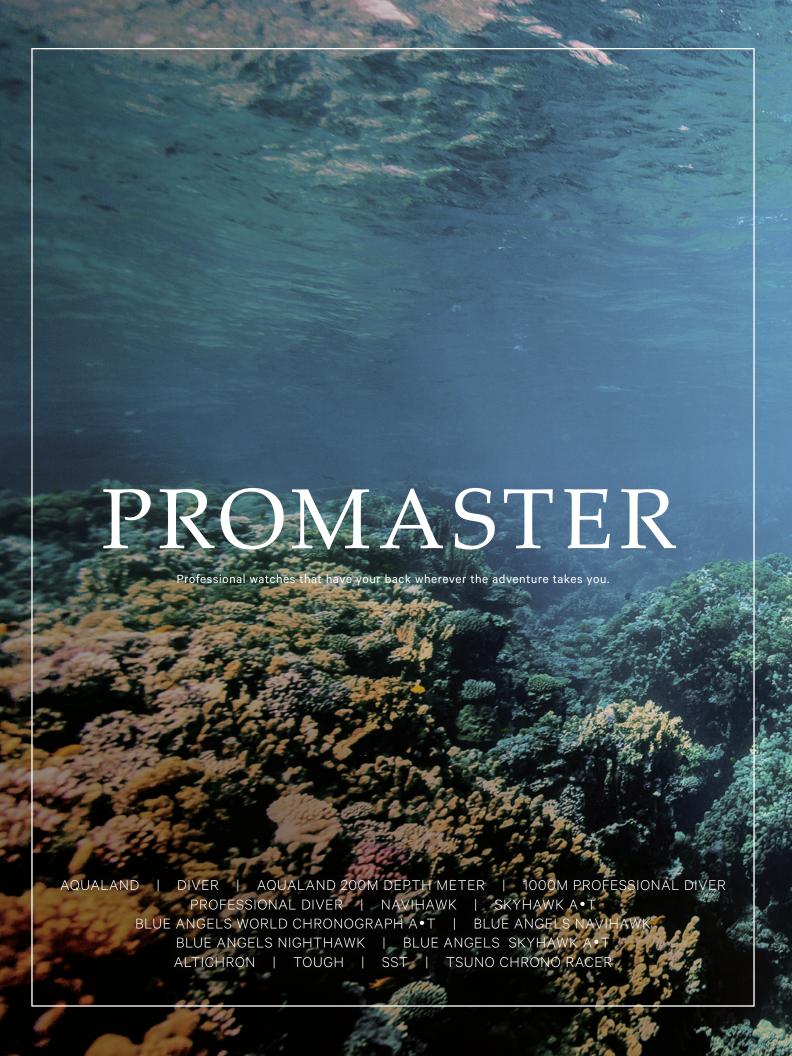



PROMASTER

AQUALAND COLLECTION

- ISO Compliant Diver
- Maximum Depth Memory
- Rapid Ascent Alarm
- · Auto-Start Dive Mode
- Anti-Shock Movement
- · Anti-Magnetic Movement
- Power Reserve Indicator
- Luminous Hands and Markers
- Movement: Caliber J250

BN2038-01L & BN2037-03E Feature:

• Strap Extender



BN2038-01L \$695.00 46mm SS MC PU BKL - 200M



Carrying case includes wetsuit strap extension



BN2039-59E \$695.00 46mm SS MC SS SCP PC 200M



30TH ANNIVERSARY LIMITED EDITION 6,000 PIECES



BN2037-03E \$775.00 46mm TIC MC PU BKL - 200M



Carrying case includes wetsuit strap extension

Go Deeper

Ready, Set, Dive. An iconic name with a reinvented construction, the CITIZEN Promaster Aqualand. You won't want anything else when headed to the ocean.

- ISO Compliant Diver
- One-Way Rotating Elapsed-Time Bezel
- * Screw-Back Case and Screw-Down Crown
- 1/5-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time
- Anti-Shock Movement
- Anti-Magnetic Movement
- Anti-Reflective Mineral Crystal
- Luminous Hands, Markers and Bezel Accents
- Movement: Caliber B612



CA0715-03E, CA0719-53E and BN2039-59E come in this Promaster Tank.



CA0719-53E \$495.00 45mm SS CM SS SCP PC 200M



CA0715-03E \$450.00 45mm SS CM PU BKL - 200M

PROMASTER DIVER

- ISO Compliant Diver
- One-Way Rotating Elapsed-Time Bezel
- Screw-Back Case and Screw-Down Crown
- Anti-Shock Movement
- Anti-Magnetic Movement
- Luminous Hands and Indices on Dial and "60" Reference Marker on Bezel
- Movement: Caliber E168

BN02* Feature:

• Super Titanium™ – 5x Harder and 40% Lighter than Stainless Steel

SUPER TITANIUM™



BN0200-56E \$495.00 44mm TIC MC TIC SCP PC 200M



BN0191-55L \$395.00 45mm SS MC SS SCP PC 200M

- ISO Compliant Diver
- One-Way Rotating Elapsed-Time Bezel
- Screw-Back Case and Screw-Down Crown
- Anti-Shock Movement
- Anti-Magnetic Movement
- Luminous Hands and Indices on Dial and "60" Reference Marker on Bezel
- Movement: Caliber E168



BN0195-54E \$450.00 45mm SSP MC SSP SCP PC 200M



BN0198-56H \$395.00 45mm SS MC SS SCP PC 200M

PROMASTER DIVER

- ISO Compliant Diver
- Anti-Shock Movement
- Anti-Magnetic Movement
- One-Way Rotating Elapsed-Time Bezel
- Screw-Back Case and Screw-Down Crown
- Anti-Reflective Mineral Crystal

- Luminous Hands and Indices on Dial and "60" Reference Marker on Bezel
- Movement: Caliber E168



BN0085-01E \$350.00 48mm SS CM PU BKL - 300M



BN0150-28E \$350.00 48mm SS CM PU BKL - 200M



BN0151-09L \$350.00 48mm SS CM PU BKL - 200M

♠ PROMASTER AQUALAND 200M DEPTH METER

- ISO Compliant Diver
- Depth Display to 70 Meters
- · Maximum Depth Memory
- · Rapid Ascent Alarm
- · Auto-Start Dive Mode
- Anti-Shock Movement
- Anti-Magnetic Movement
- Power Reserve Indicator
- One-Way Rotating Elapsed-Time Bezel
- Diamond-Like Carbon (DLC) Coated Bezel
- Screw-Back Case and Screw-Down Crown
- Reinforced Polyurethane Strap
- 6mm Anti-Reflective Mineral Crystal
- Luminous Hands and Indices on Dial and "60" Reference Marker on Bezel
- Movement: Caliber J250



BN2029-01E \$950.00 53mm SSP CM PU BKL - 200M





All watches on page 14 come in a Promaster Tank



PROMASTER 1000M PROFESSIONAL DIVER

- ISO Compliant Diver
- Super Titanium™ 5x Harder and 40% Lighter than Stainless Steel
- Helium Release Valve
- Power Reserve Indicator
- Anti-Shock Movement
- · Anti-Magnetic Movement
- One-Way Rotating Elapsed-Time Bezel with Lock
- Diamond-Like Carbon (DLC) + MRK Coated Case and Bezel Accents
- Carrying Case Includes Wetsuit Strap Extension
- Screw-Back Case and Screw-Down Crown
- Anti-Reflective Sapphire Crystal
- Strap Extender
- Luminous Hands and Indices on Dial and "60" Reference Marker on Bezel
- Movement: Caliber J210





BN7020-17E \$2,300.00 53mm TIC CS PU BKL - 1000M



Carrying case includes wetsuit strap extension

↑ PROMASTERPROFESSIONAL DIVER

- ISO Compliant Diver
- For Mixed Gas Diving
- · Anti-Shock Movement
- Anti-Magnetic Movement
- One-Way Rotating Elapsed-Time Bezel
- Screw-Back Case and Screw-Down Crown
- Carrying Case Includes Wetsuit Strap Extension
- 6mm Anti-Reflective Curved Crystal
- Reinforced Polyurethane Band and Extender
- Strap Extender
- Luminous Hands and Indices on Dial and "60" Reference Marker on Bezel
- Movement: Caliber B873



BJ8050-08E \$495.00 48mm SS CM PU BKL - 300M



Carrying case includes wetsuit strap extension

APROMASTER

NAVIHAWK

- Radio Control
- World Time 43 Cities
- Perpetual Calendar
- 1/1-Second Chronograph
- Anti-Shock Movement
- Anti-Magnetic Movement
- Navigational Rotating Bezel
- Anti-Reflective Sapphire Crystal
- Luminous Hands and Markers
- Movement: Caliber E660



CB5841-05E \$625.00 46mm SS SC LTHR BKL - WR200



CB5848-57L \$695.00 46mm SSP SC SS DCP - WR200











↑ PROMASTER SKYHAWK A•T

- Synchronized to Atomic Clock for Superior Accuracy
- Atomic Timekeeping Technology with Synchronized Time Adjustment Available in 43 World Cities
- 1/100-Second Chronograph Measures up to 24 Hours
- Perpetual Calendar
- Dual Time (Second Time Zone)
- 2 Alarms

- 99-Minute Countdown Timer
- Digital Backlight Display
- Universal Coordinated Time (UTC) Display
- Power Reserve Indicator
- Pilot's Rotating Slide Rule Bezel
- Anti-Reflective Sapphire Crystal
- Luminous Hands and Markers
- Movement: Caliber U680

JY81* Feature:

• Super Titanium™ – 5x Harder and 40% Lighter than Stainless Steel



JY8070-54E \$695.00 46mm SS CS SS HDP SP WR200



JY8108-53E \$895.00 45mm TIC CS TIC HDP SP WR200



JY8075-51E \$695.00 46mm SSP CS SSP HDP PC WR200

A PROMASTER | SKYHAWK A•T

LIMITED EDITION A PROMASTER SKYHAWK A • T

- Production Limited to 2,500 Pieces Globally
- Synchronized to Atomic Clock for Superior Accuracy
- Atomic Timekeeping Technology with Synchronized Time Adjustment Available in 43 World Cities
- 1/100-Second Chronograph Measures up to 24 Hours

- Diamond-Like Carbon (DLC) Coated Bezel
- Perpetual Calendar
- Dual Time (Second Time Zone)
- 2 Alarms
- 99-Minute Countdown Timer
- · Digital Backlight Display

- Universal Coordinated Time (UTC) Display
- Power Reserve Indicator
- Pilot's Rotating Slide Rule Bezel
- · Anti-Reflective Sapphire Crystal
- Luminous Hands and Markers
- Movement: Caliber U680





JY8076-07E \$750.00 46mm SSP CS LTHR BKL - WR200



JY8077-04H \$750.00 46mm SSP CS LTHR BKL - WR200



Each limited edition timepiece comes in this handsome presentation box.

PROMASTER

BLUE ANGELS SKYHAWK A·T

COLLECTION

- Synchronized to Atomic Clock for Superior Accuracy
- Atomic Timekeeping Technology with Synchronized Time Adjustment Available in 43 World Cities
- 1/100-Second Chronograph Measures up to 24 Hours
- Perpetual Calendar
- Dual Time (Second Time Zone)
- 2 Alarms

- 99-Minute Countdown Timer
- Digital Backlight Display
- Universal Coordinated Time (UTC) Display
- Power Reserve Indicator
- Pilot's Rotating Slide Rule Bezel
- Anti-Reflective Sapphire Crystal
- Luminous Hands and Markers
- Movement: Caliber U680



JY8078-01L \$650.00 46mm SS CS LTHR BKL - WR200



The official Blue Angels insignia appears on the watch caseback.









Chilip Tolling Tolling

The Blue Angels are the Navy's elite flight demonstration squadron renowned for their precision and grace showcased in each of their flight maneuvers. This precision and grace is exhibited in the CITIZEN Promaster Blue Angels watches.



JY8078-52L \$695.00 46mm SS CS SS HDP PC WR200

↑ PROMASTER BLUE ANGELS WORLD CHRONOGRAPH A•T

- Synchronized to Atomic Clock for Superior Accuracy
- Atomic Timekeeping Technology with Synchronized Time Adjustment Available in 26 Time Zones
- 1/20-Second Chronograph Measures up to 60 Minutes
- Perpetual Calendar
- 12/24-Hour Time
- Power Reserve Indicator
- Blue Ion Plated Bezel
- Pilot's Rotating Slide Rule Dial Ring
- Anti-Reflective Sapphire Crystal
- Day/Date
- Luminous Hands and Markers
- Movement: Caliber H800



AT8020-54L \$695.00 43mm SSP CS SS HDP SP WR200



AT8020-03L \$650.00 43mm SSP CS LTHR BKL - WR200

PROMASTER BLUE ANGELS NAVIHAWK

- Radio Control
- World Time 43 Cities
- Perpetual Calendar
- 1/1-Second Chronograph
- Anti-Shock Movement
- Anti-Magnetic Movement
- Navigational Rotating Bezel
- Anti-Reflective Sapphire Crystal
- Luminous Hands and Markers
- Movement: Caliber E660



CB5848-57L \$695.00 46mm SSP SC SS DCP - WR200

↑ PROMASTER **BLUE ANGELS NIGHTHAWK**

- Dual Time (Second Time Zone)
- Pilot's Rotating Slide Rule Dial Ring
- Screw-Back Case and Screw Down-Crown
- Anti-Reflective Crystal
- Luminous Hands and Markers
- Movement: Caliber B877



BJ7006-56L \$475.00 42mm SSP MC SS SCP SP WR200



BJ7007-02L \$425.00 42mm SSP MC LTHR BKL - WR200

Go Higher

Climb to new heights with Promaster Altichron. Designed with CITIZEN's light-powered technology, the sky is the limit when wearing this innovative and sporty timepiece.



BN5055-05E \$595.00 47mm SSP CM NYLN BKL - WR200

- Altimeter Measures a Range of -1,000 Feet to 32,000 Feet
- Electronic Compass
- Power Reserve Indicator
- Screw-Back Case
- Rotating Compass Bezel
- Anti-Reflective Mineral Crystal
- Luminous Hands and Markers
- Movement: Calibre J290



BN5058-07E \$575.00 46mm SS CM PU BKL - WR200



BN5050-09X \$595.00 47mm SS CM NYLN BKL - WR200

↑ PROMASTER

ALTICHRON COLLECTION

- · Altimeter Measures a Range of -1,000 Feet to 32,000 Feet
- Electronic Compass
- CORDURA® and Leather Combination Strap
- Power Reserve Indicator
- Screw-Back Case









↑ PROMASTER TOUGH

- Case and Bracelet Coated in CITIZEN's Proprietary Hardening Technology (Duratect α)
- Genuine CORDURA® Ballistic Fabric Strap
- 5x Harder than Untreated Stainless Steel
- Shock Resistant Movement
- Anti-Magnetic Movement
- Anti-Reflective Sapphire Crystal
- Monocoque Case
- Luminous Hands and Markers
- Movement: Caliber E168



BN0211-50E \$495.00 42mm SSC CS SSC SCP SP WR200



BN0211-09X \$425.00 42mm SSC CS NYPU BKL - WR200



BN0217-02E \$450.00 42mm SSC CS NYPU BKL - WR200

- Case and Bracelet Coated in CITIZEN's Proprietary Hardening Technology (Duratect (1)
- Genuine CORDURA® Ballistic Fabric Strap
- 1/5-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time
- Shock Resistant Movement
- Anti-Magnetic Movement
- Anti-Reflective Mineral Crystal
- Movement: Caliber B612



CA0720-54H \$595.00 44mm SSC CS SSTI SCP SP WR200

DIAMOND-LIKE CARBON (DLC) COATED CASE



CA0727-12E \$550.00 44mm SSP CS NYPU BKL - WR200

AVAILABLE AT SELECTED ACCOUNTS DIAMOND-LIKE CARBON (DLC) COATED CASE



CA0727-04E \$550.00 44mm SSP CS NYPU BKL - WR200

A PROMASTER

SSTcollection

- Time Adjustment in 43 Cities
- 1/1000-Second Chronograph Measures up to 24 Hours
- Month/Day/Date
- Sounds Signal When Time is Up
- Split Lap Time
- Recalls Up to 20 Laps
- Average Speed Calculation
- 99-Minute Countdown Timer
- Analog/Digital Displays
- Race Chronograph
- Anti-Reflective Sapphire Crystal
- Movement: Caliber U700



JW0137-51E \$795.00 46mm SSP SC SSP SCP PC WR200



JW0138-08L \$725.00 46mm SS SC LTHR BKL - WR200









↑ PROMASTER TSUNO CHRONO RACER

- Hand Assembled Movement
- 1/5-Second Flyback Chronograph Measures up to 12 Hours
- Alarm
- Power Reserve Indicator
- Tachymeter
- Anti-Reflective Spherical Sapphire Crystal
- Luminous Hands and Markers
- Movement: Caliber E210



AV0071-03A \$795.00 45mm SS CS LTHR DCP - WR200



AV0070-57L \$895.00 45mm SS CS SS HDP PC WR200

LIMITED EDITION **PROMASTER** TSUNO CHRONO RACER

- Production Limited to 1,973 Pieces Globally
- Hand Assembled Movement
- 1/5-Second Flyback Chronograph Measures up to 12 Hours
- Power Reserve Indicator
- Tachymeter
- Anti-Reflective Spherical Sapphire Crystal
- Luminous Hands and Markers
- Movement: Caliber E210



AV0079-01A \$895.00 45mm SS CS LTHR DCP - WR200



AV0078-04X \$895.00 45mm SS CS LTHR DCP - WR200

CHNOLOGY rld on time and in style with CITIZEN's precise timekeeping technologies on your wrist.	
SATELLITE PCAT WORLD CHRONOGRAPH A•T	



- Satellite GPS Timekeeping System with Worldwide Reception Area
- World's Fastest* Timekeeping Signal Reception Speed from GPS Navigation Satellites – as Quick as 3 Seconds**
- World Time in 27 Cities (40 Time Zones)
- Perpetual Calendar
- Daylight Saving Time Indicator
- Power Reserve Indicator
- Light Level Power Indicator
- Day/Date
- Edge to Edge Spherical Mineral Crystal
- Luminous Hands
- Movement: Caliber F150



CC3038-51E \$795.00 44mm SSP MC SSP FCP SP WR100



CC3035-50E \$795.00 44mm SSP MC SSP FCP SP WR100



CC3039-08E \$795.00 44mm SSP MC PU BKL - WR100





*As of March 2015 according to CITIZEN Watch Co., LTD.
**Reception Speed in as quick as 30 seconds when receiving global positioning information.



TECHNOLOGY | SATELLITE WAVE GPS FREEDOM

SATELLITE WAVE

GPS FREEDOM

COLLECTION

- Super Titanium™ 5x Harder and 40% Lighter than Stainless Steel
- Power Reserve Indicator
- Satellite Timekeeping Technology with Synchronized Time Adjustment Available in 39 Time Zones
- 1/1-Second Chronograph Measures up to 24 Hours
- Perpetual Calendar
- Alarm

- · Light Level Indicator
- Dual Time (Second Time Zone)
- 12/24-Hour Time
- · Daylight Saving Time Indicator
- Day/Date
- Sapphire Crystal
- Movement: Caliber F990

30TH ANNIVERSARY LIMITED EDITION 3,000 PIECES SUPER TITANIUM™



CC7015-55E \$2,500.00 47mm TIC SC TIC SCP PC WR200

Time Follows Where I Lead

Bolder and brighter. Enhanced technical and architectural design. The CITIZEN Satellite Wave collection is the leader of the pack with the world's fastest timekeeping signal reception speed from GPS navigation.



PCAT

- Synchronized to Atomic Clock for Superior Accuracy
- Atomic Timekeeping Technology with Synchronized Time Adjustment Available in 5 Time Zones
- User Defined Time in 15-Minute Increments (A-TM)
- 1-Second Chronograph Measures up to 60 Minutes
- Perpetual Calendar
- 12/24-Hour Time
- Alarm
- Power Reserve Indicator
- Tachymeter
- Anti-Reflective Sapphire Crystal
- Day/Date
- Luminous Hands and Markers
- Movement: Caliber E650

GRANITE ION PLATING



AT4127-52H \$675.00 43mm SSP CS SSP HDP SP WR200

ROSE GOLD-TONE BROWN ION PLATED BEZEL



AT4004-52E \$675.00 42mm SSP CS SSP HDP SP WR200



AT4106-52X \$675.00 42mm SSP CS SSP HDP SP WR200

WORLD CHRONOGRAPH A•T

- Synchronized to Atomic Clock for Superior Accuracy
- Atomic Timekeeping Technology with Synchronized Time Adjustment Available in 26 Time Zones
- 1/20-Second Chronograph Measures up to 60 Minutes
- Perpetual Calendar

- 12/24-Hour Time
- Power Reserve Indicator
- Sapphire Crystal
- Day/Date
- Movement: Caliber H804



AT8110-53E \$650.00 43mm SS SC SS DCP PC WR100





AT8116-57E \$675.00 43mm SSP SC SSP DCP PC WR100

ROSE GOLD-TONE



AT8113-04H \$595.00 43mm SSP SC LTHR DCP - WR100

SOPHISTICATED CLASSIC

Timeless styling that gracefully takes you from work to play.



CAPELLA COLLECTION

- 52 Diamonds
- Spherical Sapphire Crystal
- Movement: Caliber B023



EX1500-01E \$775.00 34mm SS SC LTHR DCP - WR50











EX1503-54A \$875.00 34mm SSP SC SSP DCP PC WR50





CAPELLA

- 10 Diamonds
- Spherical Sapphire Crystal
- Movement: Caliber B023

MOTHER-OF-PEARL



EX1510-59D \$550.00 34mm SS SC SS DCP PC WR50

PINK GOLD-TONE



EX1516-52E \$550.00 34mm SSP SC SSP DCP PC WR50



EX1512-53A \$575.00 34mm SSP SC SSP DCP PC WR50

TAUPE MOTHER-OF-PEARL PINK GOLD-TONE



EX1513-00Y \$525.00 34mm SSP SC LTHR DCP - WR50



CITIZEN CECI

COLLECTION

- 12 Diamonds
- Mother-of-Pearl
- Simulated Blue Spinel Cabochon Crown
- Spherical Sapphire Crystal
- Movement: Caliber E031



EM0790-55N \$450.00 32mm SS SC SS DCP SP WR50



EM0794-54D \$495.00 32mm SSP SC SSP DCP SP WR50







CITIZEN CECI

- 4 Diamonds
- Mother-of-Pearl
- Spherical Sapphire Crystal
- Movement: Caliber E031

PINK GOLD-TONE



EM0796-59Y \$395.00 32mm SSP SC SS DCP SP WR50



EM0794-03Y \$375.00 32mm SSP SC LTHR DCP - WR50

PINK GOLD-TONE



EM0796-08Y \$375.00 32mm SSP SC LTHR DCP - WR50

BIANCA

- Mother-of-Pearl
- Beveled Crystal
- Beveled Sapphire Crystal
- Movement: Caliber B035



EW5551-56N \$350.00 22x28mm SS SC SS DCP SP WR50



EW5552-53D \$375.00 22x28mm SSP SC SSP DCP SP WR50



8 DIAMONDS

EW5553-51D \$450.00 22x28mm SSP SC SSP DCP SP WR50





EW5554-58D \$425.00 22x28mm SSP SC SSP DCP SP WR50

ROSE GOLD-TONE



EW5556-52D \$375.00 22x28mm SSP SC SSP DCP SP WR50

$\operatorname{CITIZEN} \mathscr{L} \operatorname{SUNRISE}$

- Mother-of-Pearl
- Spherical Sapphire Crystal
- Movement: Caliber E031

EM032* Feature:

- Case Accented with 3 Floating Diamonds
- Dial Accented with 7 Diamonds



EM0337-56D \$395.00 30mm SSP SC SSP DCP PC WR50





EM0320-59D \$795.00 29mm SS SC SS DCP PC WR50

10 DIAMONDS ROSE GOLD-TONE



EM0323-51N \$895.00 29mm SSP SC SSP DCP PC WR50

CITIZEN \mathscr{L} AMBILUNA

- 1 Diamond
- Moon-Glazed Spherical Sapphire Crystal
- Movement: Caliber E031



EM0640-58D \$375.00 32mm SS SC SS SLC - WR50



EM0642-52P \$395.00 32mm SSP SC SSP SLC - WR50



EM0643-50X \$395.00 32mm SSP SC SSP SLC - WR50

JOLIE

- Spherical Sapphire Crystal
- Movement: Caliber E031



MOTHER-OF-PEARL

EM0710-54Y \$395.00 30mm SS SC SS DCP SP WR50



EM0716-58A \$450.00 30mm SSP SC SSP DCP SP WR50

CALENDRIER

- 3 Hand with Analog
- Spherical Mineral Crystal
- · Month/Day/Date
- Movement: Caliber 8730




BU0054-52L \$525.00 44mm SSP MC SSP DCP SP WR100



BU0050-02L \$425.00 44mm SS MC LTHR DCP - WR100



BU0056-57A \$525.00 44mm SSP MC SSP DCP SP WR100

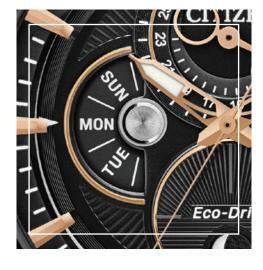







CALENDRIER

- Rotating Inner Dial Ring with World Time in 24 Time Zones
- 12/24-Hour Time
- Screw-Back Case
- Day/Date
- Luminous Hands
- Movement: Caliber 8729

BU2020-70E & BU2025-76E Feature:

• Anti-Reflective Spherical Crystal



BU2020-70E \$495.00 44mm SS CM SS DCP SP WR100



BU2025-76E \$525.00 44mm SSP CM SSP DCP SP WR100



BU2021-51L \$495.00 44mm SS MC SS DCP SP WR100



BU2021-51H \$495.00 44mm SS MC SS DCP SP WR100



BU2020-29X \$425.00 44mm SS MC LTHR DCP - WR100

- 32 Diamonds
- Rotating Inner Dial Ring with World Time in 24 Time Zones
- 12/24-Hour Time
- Screw-Back Case
- Anti-Reflective Mineral Crystal
- Day/Date
- Luminous Hands
- Movement: Calibre 8729



BU2082-56E \$695.00 44mm SSP CM SSP DCP SP WR100



BU2088-50E \$695.00 44mm SSP CM SSP DCP SP WR100

LADIES' WORLD TIME PERPETUAL

- Mother-of-Pearl
- World Time in 26 Time Zones
- Perpetual Calendar
- Sapphire Crystal
- Luminous Hands
- Movement: Caliber E784



FC8000-55D \$375.00 36mm SS SC SS FCP SP WR50



FC8004-54D \$395.00 36mm SSP SC SSP FCP SP WR50



FC8003-06D \$350.00 36mm SSP SC LTHR BKL - WR50

MEN'S WORLD TIME PERPETUAL

- World Time in 26 Time Zones
- Perpetual Calendar
- Screw-Back Case
- Sapphire Crystal
- Luminous Hands and Markers
- Movement: Caliber E784



BX1000-57E \$425.00 41mm SS SC SS FCP SP WR50



BX1000-06L \$375.00 41mm SS SC LTHR BKL - WR50



BX1003-08E \$395.00 41mm SSP SC LTHR BKL - WR50



CORSO COLLECTION

- 1/20-Second Chronograph Measures up to 60 Minutes
- Perpetual Calendar
- Dual Time (Second Time Zone)
- 12/24-Hour Time
- Alarm
- Luminous Hands
- Movement: Caliber E820



BL5567-57E \$495.00 44mm SSP MC SSP HDP SP WR100





BL5563-58E \$495.00 44mm SSP MC SSP HDP SP WR100







CORSO

- 12/24-Hour Time
- Screw-Back Case
- Analog Day/Date
- Luminous Hands
- Movement: Calibre 8729

BU207* Feature:

• Sapphire Crystal

BU201* Feature:

• Luminous Hands and Markers



BU2070-04A \$325.00 44mm SS SC LTHR BKL - WR100



BU2070-12L \$325.00 44mm SS SC LTHR BKL - WR100



BU2010-57L \$375.00 44mm SS MC SS FCP SP WR100



BU2013-08E \$350.00 44mm SSP MC LTHR BKL - WR100

• Screw-Back Case

AT* Feature:

- 1-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time
- Sapphire Crystal
- Luminous Hands and Markers
- Movement: Calibre H504

CA* Feature:

- 1/5-Second Chronograph Measures up to 60 Minutes
- Movement: Calibre B642



BL8144-54H \$575.00 42mm SSP SC SSP HDP SP WR100



AT2146-59E \$425.00 42mm SSP SC SSP FCP SP WR100





CA7003-06E \$350.00 43mm SSP MC LTHR BKL - WR100

CORSO

AO* Feature:

- Screw-Back Case
- Spherical Crystal
- Day/Date
- Luminous Hands
- Movement: Calibre 8635

BM* Feature:

- Boxed Crystal
- Movement: Caliber E111

AU* Feature:

- Luminous Hands
- Movement: Caliber J165

ROSE GOLD-TONE



AO9020-84E \$275.00 42mm SS MC SS FCP SP WR100



AO9003-08E \$275.00 42mm SSP MC LTHR BKL - WR



ROSE GOLD-TONE

BM7193-07B \$250.00 40mm SSP MC LTHR BKL - WR



AU1044-58E \$295.00 40mm SSP MC SSP FCP SP WR



AU1040-08E \$195.00 40mm SS MC LTHR BKL - WR



AU1043-00E \$225.00 40mm SSP MC LTHR BKL - WR

- Spherical Crystal
- FE* Movement: Caliber J710
- AW* Movement: Caliber J810



FE1082-05A \$225.00 29mm SSP MC LTHR BKL - WR



AW1236-03A \$195.00 40mm SS MC LTHR BKL - WR



AW1232-04A \$225.00 40mm SSP MC LTHR BKL - WR

CORSO DIAMOND

- 8 Diamonds
- Screw-Back Case
- Sapphire Crystal
- Movement: Caliber E111



BM7100-59H \$395.00 41mm SS SC SS FCP SP WR100



BM7107-50E \$425.00 41mm SSP SC SSP FCP SP WR100



BM7103-51L \$425.00 41mm SSP SC SSP FCP SP WR100

- Diamond Dial
- Screw-Back Case
- Movement: Caliber E111

BM72* Feature:

- Sapphire Crystal
- Luminous Hands

11 DIAMONDS



BM7344-54E \$395.00 39mm SSP MC SSP FCP SP WR100

11 DIAMONDS



BM7342-50A \$395.00 39mm SSP MC SSP FCP SP WR100

12 DIAMONDS



BM7258-54H \$450.00 41mm SSP SC SSP FCP SP WR100

12 DIAMONDS



BM7252-51G \$450.00 41mm SSP SC SSP FCP SP WR100

CORSO

- Screw-Back Case
- Sapphire Crystal
- Luminous Hands
- Movement: Caliber E111



BM7251-53L \$325.00 41mm SS SC SS FCP SP WR100



BM7251-53H \$325.00 41mm SS SC SS FCP SP WR100



BM7252-51E \$350.00 41mm SSP SC SSP FCP SP WR100



BM7256-50E \$350.00 41mm SSP SC SSP FCP SP WR100

- Screw-Back Case
- Luminous Hands
- BM* Movement: Caliber E111
- EW* Movement: Caliber E011



EW2290-54L \$295.00 28mm SS MC SS FCP SP WR100



EW2294-53L \$325.00 28mm SSP MC SSP FCP SP WR100



BM7330-59L \$295.00 40mm SS MC SS FCP SP WR100



BM7334-58L \$325.00 40mm SSP MC SSP FCP SP WR100



BM7332-53P \$325.00 40mm SSP MC SSP FCP SP WR100

CORSO

- EW1* Movement: Caliber E011
- EW9* Movement: Caliber B023
- EW3* Movement: Caliber E001
- BM* Movement: Caliber E101

EW12* Feature:

• Luminous Hands

EW3* & BM* Feature:

- Screw-Back Case
- Luminous Hands
- Day/Date



EW1264-50A \$295.00 25mm SSP MC SSP FCP SP WR



EW9334-52E \$265.00 21mm SSP MC SSP JLP SP WR



EW3144-51A \$295.00 27mm SSP MC SSP FCP SP WR100



BM8434-58A \$295.00 37mm SSP MC SSP FCP SP WR100

CORSO DIAMOND

- 6 Diamonds
- Spherical Crystal
- Movement: Caliber J730



FE2100-51E \$295.00 29mm SS MC SS FCP SP WR



FE2104-50A \$325.00 29mm SSP MC SSP FCP SP WR



FE2102-55A \$325.00 29mm SSP MC SSP FCP SP WR

CHANDLER

- Mother-of-Pearl
- Luminous Hands and Markers
- Movement: Caliber E011



EW1670-59D \$275.00 26mm SS MC SS FCP SP WR100

ROSE GOLD-TONE



EW1676-52D \$295.00 26mm SSP MC SSP FCP SP WR100

CHANDLER COLLECTION

- 1-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time
- Movement: Caliber H504



FB1444-56D \$325.00 32mm SSP MC SSP FCP PC WR



SS FCP PC WR




PINK GOLD-TONE

FB1443-08A \$295.00 32mm SSP MC LTHR BKL - WR







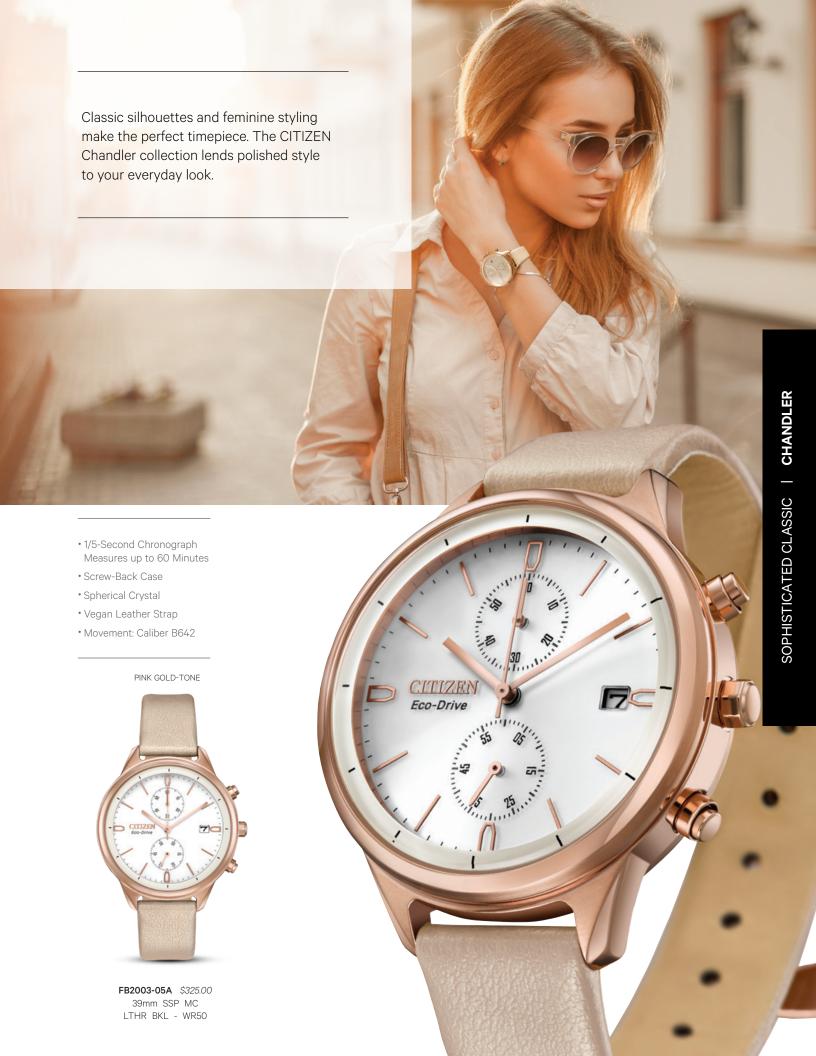

CHANDLER | Casual weekend timepieces

EM* Feature:

- Ceramic Accented Bezel
- Ceramic Inner Links
- Movement: Caliber E031

EW* Feature:

- Mother-of-Pearl
- Luminous Hands
- Movement: Caliber E013

ROSE GOLD-TONE MOTHER-OF-PEARL



EM0743-55D \$350.00 36mm SSP MC SSCP FCP SP WR100



EM0741-51E \$325.00 36mm SSP MC SSCR FCP SP WR100



EW2520-56Y \$275.00 30mm SS MC SS FCP SP WR50



EW2524-55N \$295.00 30mm SSP MC SSP FCP SP WR50



EW2522-51D \$295.00 30mm SSP MC SSP FCP SP WR50

- Spherical Crystal
- Movement: Caliber E011



EW2440-53A \$225.00 31mm SS MC SS FCP SP WR50



ROSE GOLD-TONE

EW2443-55X \$250.00 31mm SSP MC SSP FCP SP WR50

CHANDLER

- Curved Crystal
- Movement: Caliber E031



EM0492-02A \$195.00 32mm SSP MC LTHR BKL - WR



EM0490-08A \$175.00 32mm SS MC LTHR BKL - WR

- Luminous Hands
- EW* Movement: Caliber E011
- BM* Movement: Caliber E111



EW1410-50E \$275.00 25mm SS MC SS DCP SP WR



BM6550-58E \$275.00 33mm SS MC SS DCP SP WR



BM6552-52E \$295.00 33mm SSP MC SSP DCP SP WR



MODERN

Clean lines and simplicity are key elements to this CITIZEN collection.

STILETTO | AXIOM

STILETTO COLLECTION

- 4.71mm thin (with .25 varience in production tolerance)
- Sapphire Crystal
- Movement: Caliber G870

ROSE GOLD-TONE



AR3076-08A \$375.00 39mm SSP SC LTHR BKL - WR









STILETTO

- 4.71mm thin (with .25 variance in production tolerance)
- Sapphire Crystal
- Movement: Caliber G872



AR3070-04L \$350.00 38mm SS SC LTHR BKL - WR

ROSE GOLD-TONE



AR3073-06E \$375.00 38mm SSP SC LTHR BKL - WR

- 4.71mm thin (with .25 variance in production tolerance)
- Sapphire Crystal
- Movement: Caliber G870



AR3070-55E \$475.00 38mm SS SC SS DCP PC WR



AR3074-54E \$495.00 38mm SSP SC SSP DCP PC WR



AR3075-51E \$495.00 38mm SSP SC SSP DCP PC WR

AXIOM | Modern design with edge to edge crystal

• Movement: Caliber E031



BJ6510-51L \$295.00 41mm SS MC SS FCP SP WR



BJ6512-56P \$325.00 41mm SSP MC SSP FCP SP WR



BJ6517-52E \$325.00 41mm SSP MC SSP FCP SP WR

- 11 Diamonds on the Dial
- GA* Movement: Caliber J015
- AU* Movement: Caliber J165

PINK GOLD-TONE



GA1058-59Q \$395.00 30mm SSP MC SSP FCP SP WR



AU1060-51G \$375.00 40mm SS MC SS FCP SP WR



AU1062-56G \$395.00 40mm SSP MC SSP FCP SP WR



AU1065-58G \$395.00 40mm SSP MC SSP FCP SP WR

AXIOM

• Movement: Caliber J165



AU1060-51E \$295.00 40mm SS MC SS FCP SP WR



AU1062-56E \$325.00 40mm SSP MC SSP FCP SP WR



AU1065-58E \$325.00 40mm SSP MC SSP FCP SP WR

• Movement: Caliber B023

BL6000 & BL6008 Feature:

• 4 Diamonds



BL6005-01E \$225.00 26mm SSP MC LTHR BKL - WR



BL6000-55E \$275.00 26mm SS MC SS SLC - WR



BL6008-53E \$295.00 26mm SSP MC SSP SLC - WR

AXIOM

EG* Feature:

- 1 Diamond
- Movement: Caliber G620

EM* Feature:

- 4 Diamonds
- Movement: Caliber E031



EG7050-54A \$295.00 14x28mm SS MC SS FCP SP WR



EG7055-51E \$325.00 14x28mm SSP MC SSP FCP SP WR

MOTHER-OF-PEARL



EM0734-56D \$350.00 28mm SSP MC SSP FCP SP WR



EM0732-51P \$350.00 28mm SSP MC SSP FCP SP WR

PINK GOLD-TONE



EM0733-08A \$295.00 28mm SSP MC LTHR BKL - WR

- GA* Movement: Caliber J015
- AU* Movement: Caliber J165

ROSE GOLD-TONE



GA1053-01A \$250.00 30mm SSP MC LTHR BKL - WR

PINK GOLD-TONE



GA1058-16E \$250.00 30mm SSP MC LTHR BKL - WR



GA1052-04E \$250.00 30mm SSP MC LTHR BKL - WR



GA1055-06E \$250.00 30mm SSP MC LTHR BKL - WR



AU1062-05E \$250.00 40mm SSP MC LTHR BKL - WR



AU1065-07E \$250.00 40mm SSP MC LTHR BKL - WR

AXIOM

• Movement: Caliber E031

MOTHER-OF-PEARL



EM0630-51D \$250.00 28mm SS MC SS FCP SP WR



EM0638-50P \$275.00 28mm SSP MC SSP FCP SP WR





EM0633-53A \$275.00 28mm SSP MC SSP FCP SP WR

- Swarovski® Crystal Accents
- Movement: Caliber B023



EX1420-50E \$250.00 23mm SS MC SS JLP SP WR



EX1422-54E \$275.00 23mm SSP MC SSP JLP SP WR



EX1410-53A \$250.00 24x18mm SS MC SS JLP SP WR



EX1320-54E \$250.00 23mm SS MC SS JLP SP WR

TITANIUM

Merging form and function, the Titanium collection accessorizes even the most rugged lifestyle.

BRYCEN | PARADIGM



BRYCEN | Sport casual timepieces with decorative bezels

- Super Titanium™ 5x Harder and 40% Lighter than Stainless Steel
- 1/20-Second Chronograph Measures up to 60 Minutes
- Perpetual Calendar
- Dual Time (Second Time Zone)
- 12/24-Hour Time
- Tachymeter
- Alarm
- · Screw-Back Case
- Luminous Hands



43mm TIC MC LTHR BKL - WR100

- Super Titanium™ 5x Harder and 40% Lighter than Stainless Steel
- 1/20-Second Chronograph Measures up to 60 Minutes
- Perpetual Calendar
- Dual Time (Second Time Zone)
- 12/24-Hour Time
- Tachymeter
- Alarm
- Screw-Back Case
- Sapphire Crystal
- Luminous Hands

BM692* Feature:

• Movement: Caliber E111

CA034* Feature:

- 1/5-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time
- Movement: Caliber B612





BM6929-56L \$450.00 42mm TIC SC TIC FCP PC WR100

SUPER TITANIUM™



CA0349-51L \$495.00 43mm TIC SC TIC FCP PC WR100

PARADIGM | Modern design timepieces with integrated case and bracelets

- Super Titanium™ 5x Harder and 40% Lighter than Stainless Steel
- Screw-Back Case
- Sapphire Crystal
- Luminous Hands and Markers
- Movement: Caliber E111



- Super Titanium™ 5x Harder and 40% Lighter than Stainless Steel
- Screw-Back Case
- Sapphire Crystal
- Luminous Hands and Markers
- Movement: Caliber E111

SUPER TITANIUM™



BM7431-51H \$450.00 43mm TIC SC TIC FCP PC WR100



WEEKENDER

A must when you are expanding your watch collection. Something to wear here, there, and everywhere.

CITIZEN GARRISON | BRYCEN | NIGHTHAWK AVION | PRIMO | ENDEAVOR | ECOSPHERE

CITIZEN GARRISON

COLLECTION

BM6* Feature:

- 3 Hand
- Luminous Hands
- Movement: Caliber E111



BM6838-09X \$225.00 42mm SS MC LTHR BKL - WR100



BM6835-15E \$250.00 42mm SSP MC LTHR BKL - WR100




BM6838-17L \$225.00 42mm SS MC LTHR BKL - WR100









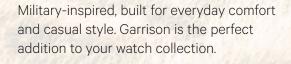



BM8471-01E \$225.00 42mm SS MC LTHR BKL - WR100



BM8475-00F \$250.00 42mm SSP MC NYLN BKL - WR100



BM8478-01L \$250.00 42mm SSP MC LTHR BKL - WR100

CITIZEN GARRISON

- Screw-Back Case
- Luminous Hands and Markers

BM* Feature

- Day/Date
- Movement: Caliber E100

AT* Feature

- 1-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time
- Movement: Caliber H500



BM8180-03E \$225.00 37mm SS MC NYLN BKL - WR100



AT0200-05E \$275.00 39mm SS MC NYLN BKL - WR100



AT0200-21L \$275.00 39mm SS MC NYLN BKL - WR100



AT0200-13A \$275.00 39mm SS MC NYLN BKL - WR100

- 12/24-Hour Time
- Screw-Back Case
- Spherical Crystal
- Luminous Hands and Markers

CA* Feature:

- 1/5-Second Chronograph Measures up to 60 Minutes
- Movement: Caliber B612

BU* Feature:

- Genuine CORDURA® Fabric Strap
- Analog Day/Date
- Movement: Caliber B729



CA0621-05L \$325.00 42mm SS MC LTHR BKL - WR100



BU2055-08X \$295.00 43mm SSP MC NYLN BKL - WR100



BU2055-16E \$295.00 43mm SSP MC NYLN BKL - WR100

CITIZEN GARRISON

AW1* Feature:

- Screw-Back Case
- Luminous Hands
- Movement: Caliber J810

AWO* Feature:

- 12/24-Hour Time
- Screw-Back Case
- Luminous Hands and Markers
- Day/Date
- Movement: Caliber J800

AT* Feature:

- 1-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time
- Screw-Back Case
- Luminous Hands and Markers
- Movement: Caliber H500



AW1430-86A \$225.00 43mm SS MC SS FCP SP WR100



AW1430-86E \$225.00 43mm SS MC SS FCP SP WR100



AW0050-82E \$250.00 43mm SS MC SS FCP SP WR100



AT0550-11X \$350.00 42mm SS MC LTHR BKL - WR100

- 1/5-Second Chronograph Measures up to 60 Minutes
- Domed Crystal
- Luminous Hands
- Movement: Caliber B642



CA7020-58L \$395.00 43mm SS MC SS SLC - WR100



CA7027-08E \$395.00 43mm SSP MC LTHR BKL - WR100



CA7020-07A \$375.00 43mm SS MC LTHR BKL - WR100

BRYCEN

• Luminous Hands

AW* Feature:

- Day/Date
- Domed Mineral Crystal
- Luminous Hands and Markers
- Movement: Caliber J800

CA* Feature:

- 1/5-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time
- Tachymeter
- Screw-Back Case
- Spherical Crystal
- Movement: Caliber B612

ROSE GOLD-TONE



AW0076-03X \$295.00 44mm SSP MC LTHR BKL - WR100



AW0078-08L \$295.00 44mm SS MC LTHR BKL - WR100



CA0649-06X \$325.00 44mm SS MC LTHR BKL - WR100



CA0648-09L \$325.00 44mm SS MC LTHR BKL - WR100



CA0649-14E \$325.00 44mm SS MC LTHR BKL - WR100

BU* Feature:

- Screw-Back Case
- Spherical Crystal
- Analog Day/Date
- Luminous Hands
- Movement: Caliber 8725

AW* Feature:

- Spherical Crystal
- Luminous Hands and Markers
- Movement: Caliber J810



BU4010-05L \$250.00 44mm SS MC LTHR BKL - WR100





BU4013-07H \$275.00 44mm SSP MC LTHR BKL - WR100



AW1598-70X \$325.00 43mm SS MC SS FCP SP WR100



AW1591-01L \$295.00 43mm SS MC LTHR BKL - WR100



AW1593-06X \$295.00 43mm SSP MC LTHR BKL - WR100

NIGHTHAWK

- 1/5-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time
- Screw-Back Case
- Tachymeter
- Luminous Hands and Markers
- CA4* Movement: Caliber B620
- CAO* Movement: Caliber B612

GRANITE ION PLATING



CA4377-53H \$525.00 43mm SSP MC SSP HDP SP WR200



CA0295-58E \$525.00 42mm SSP MC SSP SCP SP WR200

BX* Feature:

- World Time in 26 Time Zones
- Perpetual Calendar
- Luminous Hands and Markers
- Movement: Caliber E784

CA* Feature:

- 1/5-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time
- Screw-Back Case

- Spherical Crystal
- Luminous Hands
- Movement: Caliber B620



BX1010-11L \$395.00 44mm SS MC LTHR BKL - WR200

BX1010-02E \$395.00 44mm SS MC LTHR BKL - WR200



CA4210-24E \$325.00 45mm SS MC LTHR BKL - WR100



CA4215-21H \$350.00 45mm SSP MC LTHR BKL - WR100



CA4213-18L \$350.00 45mm SSP MC LTHR BKL - WR100

PRIMO

- 1/5-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time
- Luminous Hands

CAO* Feature:

- Tachymeter
- Screw-Back Case
- Luminous Hands and Markers
- Movement: Calibre B612

CA4* Feature:

• Movement: Caliber B620

ROSE GOLD-TONE



CA0681-03E \$375.00 45mm SS MC LTHR BKL - WR100



CA0683-08E \$395.00 45mm SSP MC LTHR BKL - WR100



CA4430-01X \$375.00 44mm SSP MC LTHR BKL - WR100



CA4435-08L \$395.00 44mm SS MC LTHR BKL - WR100



CA4438-00L \$375.00 44mm SS MC LTHR BKL - WR100

ENDEAVOR

- 1/5-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time
- Rotating Elapsed-Time Inner Dial Ring
- Screw-Back Case and Screw-Down Crown
- Anti-Reflective Mineral Crystal
- Luminous Hands and Markers
- Movement Caliber: B612



CA0444-50L \$495.00 46mm SSP CM SSP HDP SP WR200

ECOSPHERE

• 1/5-Second Chronograph Measures up to 60 Minutes

- 12/24-Hour Time
- Tachymeter
- Screw-Back Case
- Proprietary Chroma Finishing
- Luminous Hands and Markers
- Movement: Caliber B620



CA4184-81E \$475.00 48mm SSP MC SSP HDP SP WR100



CA4155-12L \$450.00 48mm SSP MC PU BKL - WR100

CRYSTAL

Add a touch of sparkle to your world and your wrist.

SILHOUETTE CRYSTAL | CRYSTAL



SILHOUETTE CRYSTAL

- Swarovski® Crystal
- 12/24-Hour Time
- Spherical Crystal
- Day/Date
- Luminous Hands
- Movement: Calibre 8729

MOTHER-OF-PEARL



FD1030-56Y \$325.00 32mm SS MC SS FCP SP WR

PINK GOLD-TONE



FD2016-51A \$375.00 37mm SSP MC SSP FCP SP WR

PINK GOLD-TONE



FD2013-50A \$375.00 37mm SSP MC SSP FCP SP WR

- Swarovski® Crystal Accents
- Movement: Caliber E031

GRAY MOTHER-OF-PEARL



EM0770-52Y \$325.00 31mm SS MC SS FCP SP WR50

MOTHER-OF-PEARL



EM0774-51D \$350.00 31mm SSP MC SSP FCP SP WR50

ROSE GOLD-TONE MOTHER-OF-PEARL



EM0773-54D \$350.00 31mm SSP MC SSP FCP SP WR50

SILHOUETTE CRYSTAL

- Swarovski® Crystal
- Spherical Crystal
- Movement: Caliber J710



FE1190-53E \$325.00 31mm SS MC SS FCP SP WR50

ROSE GOLD-TONE



FE1196-57A \$350.00 31mm SSP MC SSP FCP SP WR50



FE1192-58A \$350.00 31mm SSP MC SSP FCP SP WR50

- Swarovski® Crystal Accents
- Movement: Caliber J830



FE7040-53E \$325.00 36mm SS MC SS FCP SP WR50

MOTHER-OF-PEARL



FE7042-07D \$295.00 36mm SSP MC LTHR BKL - WR50

ROSE GOLD-TONE



FE7043-55A \$350.00 36mm SSP MC SSP FCP SP WR50

SILHOUETTE CRYSTAL

FE* Feature:

- Swarovski® Crystal Accents
- Luminous Hands
- Spherical Crystal
- Movement: Caliber J710

EX* Feature:

- Swarovski® Crystal
- Sapphire Crystal
- Movement: Caliber B023



FE1140-86X \$250.00 29mm SS MC SS FCP SP WR50



FE1140-86L \$250.00 29mm SS MC SS FCP SP WR50



EX1480-58L \$275.00 29mm SS SC SS FCP SP WR50





EX1484-57D \$295.00 29mm SSP SC SSP FCP SP WR50

ROSE GOLD-TONE MOTHER-OF-PEARL



EX1483-50D \$295.00 29mm SSP SC SSP FCP SP WR50

- EW1* Feature:
- Swarovski® Crystal
- Luminous Hands
- Movement: Caliber E011

EW2* Feature:

- Swarovski® Crystal Accents
- Movement: Caliber E013

PINK GOLD-TONE MOTHER-OF-PEARL



EW1228-53D \$375.00 29mm SSP MC SSP FCP SP WR



EW2340-58A \$350.00 28mm SS MC SS FCP SP WR



EW2344-57A \$375.00 28mm SSP MC SSP FCP SP WR





EW2348-56A \$375.00 28mm SSP MC SSP FCP SP WR

CRYSTAL

- Swarovski® Crystal
- 1/5-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time
- Screw-Back Case
- Unisex
- Luminous Hands
- Movement: Caliber B612



FB3002-53P \$495.00 42mm SSP MC SSP FCP SP WR200



FB3008-57E \$495.00 42mm SSP MC SSP FCP SP WR200

- Swarovski® Crystal Accents
- 1-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time
- Movement: Caliber H500



AT2452-52E \$495.00 42mm SSP MC SSP FCP SP WR50



AT2450-58E \$475.00 42mm SS MC SS FCP SP WR50

DRIVE

Shine bright with color wearing your light-powered Drive watch.

MEN'S DRIVE | LADIES' DRIVE



COLLECTION

• Movement: Caliber J810



AW1607-03H \$250.00 45mm SSP MC PU BKL - WR100



AW1605-09E \$250.00 45mm SSP MC PU BKL - WR100



AW1608-01E \$250.00 45mm SSP MC PU BKL - WR100







- Screw-Back Case
- Proprietary Chroma Finishing
- Luminous Hands and Markers
- Movement: Caliber J810



AW1158-05L \$225.00 45mm SS MC PU BKL - WR100



AW1150-07E \$225.00 45mm SS MC PU BKL - WR100



AW1151-04E \$225.00 45mm SS MC PU BKL - WR100



- Screw-Back Case
- Proprietary Chroma Finishing
- Luminous Hands and Markers
- Movement: Caliber J810

PINK GOLD-TONE



FE6136-01A \$250.00 38mm SSP MC PU BKL - WR100



AW1157-08H \$250.00 45mm SSP MC PU BKL - WR100



- Screw-Back Case
- Luminous Hands and Markers
- Movement: Caliber J810



AW1588-57E \$250.00 45mm SS MC SS FCP SP WR100



AW1585-55L \$275.00 45mm SSP MC SSP FCP SP WR100



AW1585-04E \$250.00 45mm SSP MC LTHR BKL - WR100

- 1-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time
- Luminous Hands and Markers
- Movement: Caliber H500



AT2440-51L \$325.00 45mm SS MC SS FCP SP WR100



AT2441-08X \$295.00 45mm SS MC LTHR BKL - WR100



AT2447-01E \$325.00 45mm SSP MC LTHR BKL - WR100

- Day/Date
- Movement: Caliber J800



AW0080-57A \$250.00 42mm SS MC SS FCP SP WR100





AW0083-08X \$225.00 42mm SSP MC LTHR BKL - WR100



AW0087-58H \$275.00 42mm SSP MC SSP FCP SP WR100

- Screw-Back Case
- BM* Movement: Caliber E111
- AW* Movement: Caliber J810

AW* Feature:

- Spherical Crystal
- Luminous Hands



BM7410-51X \$250.00 42mm SS MC SS FCP SP WR100



BM7410-51L \$250.00 42mm SS MC SS FCP SP WR100



AW1350-83M \$225.00 43mm SS MC SS FCP SP WR100



AW1354-82E \$250.00 43mm SSP MC SSP FCP SP WR100

- Screw-Back Case
- Day/Date
- Luminous Hands
- Movement: Calibre 8725

ROSE GOLD-TONE



BU4023-54E \$295.00 42mm SSP MC SSP FCP SP WR100



BU4025-59E \$295.00 42mm SSP MC SSP FCP SP WR100



BU4020-01L \$250.00 42mm SS MC LTHR BKL - WR100



BU4025-08E \$275.00 42mm SSP MC LTHR BKL - WR100

- Screw-Back Case
- Movement: Caliber E111



BM6991-52H \$250.00 42mm SS MC SS FCP SP WR100



BM6980-08E \$195.00 42mm SS MC LTHR BKL - WR100



BM6985-55E \$275.00 42mm SSP MC SSP FCP SP WR100





BM6983-00H \$225.00 42mm SSP MC LTHR BKL - WR100





BM6983-51H \$275.00 42mm SSP MC SSP SLC SP WR100



BM6988-57E \$275.00 42mm SSP MC SSP SLC SP WR100

- Screw-Back Case
- Luminous Hands and Markers

AW* Feature:

• Movement: Caliber J810

CA* Feature:

- 1/5-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time

CA4* Feature:

- Tachymeter
- Movement: Caliber B620

CAO* Feature:

• Movement: Caliber B612





AW1146-55H \$250.00 40mm SSP MC SSP FCP SP WR100



AW1147-52L \$275.00 41mm SSP MC SSP FCP SP WR100



AW1148-09E \$225.00 41mm SSP MC LTHR BKL - WR100



CA4190-54E \$295.00 45mm SS MC SS FCP SP WR100



CA0435-51E \$295.00 40mm SSP MC SSP FCP SP WR100

- Spherical Crystal
- Sub-Sweep Second Hand
- Luminous Hands
- Movement: Caliber B690



BV1110-51L \$250.00 40mm SS MC SS SLC - WR50



BV1112-56E \$275.00 40mm SSP MC SSP SLC - WR50



BV1112-05A \$225.00 40mm SSP MC LTHR BKL - WR50



• Movement: Caliber J830



FE7070-52A \$275.00 37mm SS MC SSPU FCP SP WR100

PINK GOLD-TONE



FE7073-71A \$295.00 37mm SSP MC SSPU FCP SP WR100

LADIES' DRIVE

COLLECTION

• Movement: Caliber J830





FE7053-51X \$250.00 35mm SSP MC SSP FCP SP WR100

MOTHER-OF-PEARL ROSE GOLD-TONE



FE7056-02D \$225.00 35mm SSP MC PU BKL - WR100







LADIES' DRIVE

• Movement: Caliber E031

PINK GOLD-TONE



EM0763-07A \$225.00 38mm SSP MC LTHR BKL SP WR100





EM0766-50A \$250.00 38mm SSP MC SSP FCP SP WR100

ROSE GOLD-TONE



EM0768-54E \$250.00 38mm SSP MC SSP FCP SP WR100

- FE* Movement: Caliber J810
- EM* Movement: Caliber E031



FE6140-03A \$175.00 34mm SS MC LTHR BKL - WR



FE6142-08A \$195.00 34mm SSP MC LTHR BKL - WR

ROSE GOLD-TONE





EM0756-53A \$250.00 35mm SSP MC SSP FCP PC WR50



EM0753-01A \$225.00 35mm SSP MC LTHR BKL - WR50

LADIES' DRIVE

• Movement: Caliber J810



FE6080-71X \$225.00 36mm SS MC SS FCP SP WR



FE6086-74A \$250.00 36mm SSP MC SSP FCP SP WR



FE6081-51A \$225.00 36mm SS MC SS BKL - WR



FE6083-72A \$250.00 36mm SSP MC SSP BKL - WR

- Beveled Mineral Crystal
- Movement: Caliber J810



FE6082-08P \$225.00 36mm SSP MC LTHR BKL - WR





FE6083-05P \$225.00 36mm SSP MC LTHR BKL - WR

ROSE GOLD-TONE



FE6083-13E \$225.00 36mm SSP MC LTHR BKL - WR

LADIES' DRIVE

EM* Feature:

- Spherical Crystal
- Movement: Caliber J810

FD* Feature:

- Swarovski® Crystal Accents
- 12/24-Hour Time
- · Analog Day/Date
- Luminous Hands
- Movement: Caliber 8729

FE* Feature:

- Swarovski® Crystal Accents
- Luminous Hands
- Movement: Caliber J810

MOTHER-OF-PEARL



EM0680-53D \$225.00 27mm SS MC SS SLC - WR



EM0682-58P \$250.00 27mm SSP MC SSP SLC - WR

PINK GOLD-TONE



FD2050-53L \$275.00 38mm SS MC SS FCP SP WR



FE6113-57X \$295.00 37mm SSP MC SSP FCP SP WR

- Swarovski® Crystal Accents
- EM* Movement: Caliber E031
- FD* Movement: Caliber 8723

FD* Feature:

- 12/24-Hour Time
- Spherical Crystal
- Analog Date
- Luminous Hands

MOTHER-OF-PEARL



EM0234-59D \$275.00 34mm SSP MC SSP FCP SP WR

PINK GOLD-TONE



EM0233-51A \$275.00 34mm SSP MC SSP FCP SP WR

PINK GOLD-TONE



FD3003-58E \$295.00 33mm SSP MC SSP FCP SP WR

PINK GOLD-TONE



FD3003-58X \$295.00 33mm SSP MC SSP FCP SP WR



DISNEY COLLECTION

CITIZEN partners with Disney to launch an introductory collection this spring kicking off CITIZEN's new long-term alliance. CITIZEN's assortment of Mickey Mouse watches features best-selling CITIZEN silhouettes and the mouse that started it all. These watch collections are packaged in specially designed themed boxes featuring exclusive artwork.



DISNEY MICKEY MOUSE COLLECTION





GA1051-58W \$450.00 30mm SS MC SS FCP SP WR50

12 DIAMONDS ROSE GOLD-TONE



GA1056-54W \$475.00 30mm SSP MC SSP FCP SP WR50

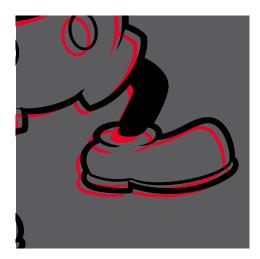

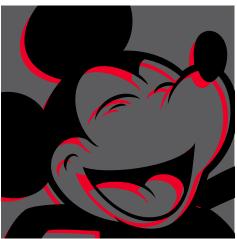



- GA* Movement: Caliber J015
- AU* Movement: Caliber J165





AU1069-06W \$295.00 40mm SSP MC LTHR BKL - WR50








FE7060-56W \$325.00 40mm SS MC SS SLC - WR50



FE7065-52W \$350.00 40mm SSP MC SSP SLC - WR50

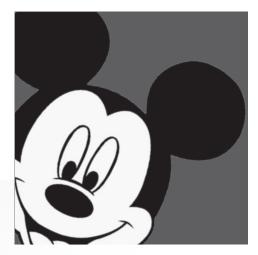

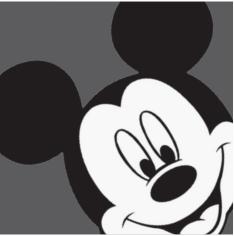

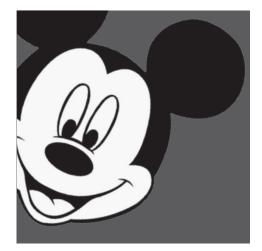











CA0297-52W \$550.00 42mm SSP MC SSP SCP SP WR200



AW1615-05W \$395.00 47mm SSP MC PU BKL - WR100

- Luminous Hands and Markers
- CA* Movement: Caliber B612
- AW* Movement: Caliber J810

CA* Feature:

- 1/5-Second Chronograph Measures up to 60 Minutes
- 12/24-Hour Time



CA0429-53W \$395.00 44mm SS MC SS FCP SP WR100



AW1156-01W \$350.00 44mm SSP MC PU BKL - WR100



MARVEL WATCHES BY CITIZEN

COLLECTION



FE6101-05W \$275.00 37mm SS MC PU BKL - WR50



EM0596-58W \$350.00 37mm SS MC SS FCP SP WR50



FE7062-51W \$375.00 40mm SSP MC SSP SLC - WR50



FE6* Movement: Caliber J810
EM* Movement: Caliber E031
FE7* Movement: Caliber J830





AW1431-24W \$225.00 45mm SS MC LTHR BKL - WR10

- Luminous Hands
- Movement: Caliber J810

AW2* Feature:

• Luminous Markers




AW2037-04W \$295.00 43mm SSP MC NYLN BKL - WR100



AW1367-05W \$325.00 45mm SSP MC PUL BKL - WR100



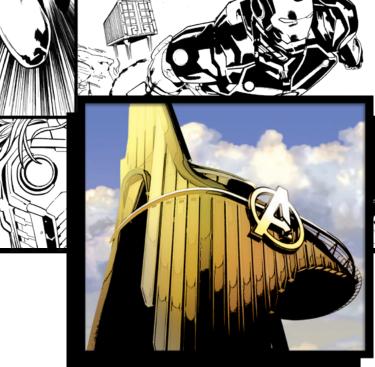



- Luminous Hands and Markers
- Movement: Caliber J830



AW1155-03W \$350.00 45mm SSP MC PU BKL - WR100





AO9003-08E \$275.00 Pg 60



AO9020-84E \$275.00 Pg 60



AR3070-04L \$350.00 Pg 78



AR3070-55E \$475.00 Pg 79



AR3072-09A \$375.00 Pg 77



AR3073-06E \$375.00 Pg 78



AR3074-54E \$495.00 Pg 79



AR3075-51E \$495.00 Pg 79



AR3076-08A \$375.00 Pg 76



AT0200-05E \$275.00 Pg 98



AT0200-13A \$275.00 Pg 98



AT0200-21L \$275.00 Pg 98



AT0550-11X \$350.00 Pg 100



AT2146-59E \$425.00 Pg 59 *111 C 1*



AT2450-58E \$475.00 Pg 117



AT2452-52E \$495.00 Pg 117



AT4004-52E \$675.00 Pg 36



AT4106-52X \$675.00 Pg 36



AT4127-52H \$675.00 Pg 36



AT8020-03L \$650.00 Pg 22



AT8020-54L \$695.00 Pg 22



AT8110-53E \$650.00 Pg 37



AT8113-04H \$595.00 Pg 37



AT8116-57E \$675.00 Pg 37



AU1040-08E \$195.00 Pg 60



AU1043-00E \$225.00 Pg 60



AU1044-58E \$295.00 Pg 60



AU1060-51E \$295.00 Pg 82



AU1060-51G \$375.00 Pg 81



AU1062-05E \$250.00 Pg 85



AU1062-56E \$325.00 Pg 82



AU1062-56G \$395.00 Pg 81



AU1065-07E \$250.00 Pg 85



AU1065-58E \$325.00 Pg 82



AU1065-58G \$395.00 Pg 81



AV0070-57L \$895.00 Pg 30



AV0071-03A \$795.00 Pg 30



AV0078-04X \$895.00 Pg 31



AV0079-01A \$895.00 Pg 31



AW0050-82E \$250.00 Pg 100



AW0076-03X \$295.00 Pg 102



AW0078-08L \$295.00 Pg 102



AW1232-04A \$225.00 Pg 61



AW1236-03A \$195.00 Pg 61



AW1430-86A \$225.00 Pg 100



AW1430-86E \$225.00 Pg 100



AW1591-01L \$295.00 Pg 103



AW1593-06X \$295.00 Pg 103



AW1598-70X \$325.00 Pg 103



BJ6510-51L \$295.00 Pg 80



BJ6512-56P \$325.00 Pg 80



BJ6517-52E \$325.00 Pg 80



BJ7006-56L \$475.00 Pg 23



BJ7007-02L \$425.00 Pg 23



BJ8050-08E \$495.00 Pg 15



BL5551-14H \$450.00 Pg 90



BL5558-58L \$495.00 Pg 90



BL5563-58E \$495.00 Pg 57



BL5567-57E \$495.00 Pg 57



BL5568-54L \$475.00 Pg 56



BL6000-55E \$275.00



BL6005-01E \$225.00 Pg 83



BL6008-53E \$295.00 Pg 83



BL8144-54H \$575.00 Pg 59



BM6550-58E \$275.00 Pg 73



BM6552-52E \$295.00 Pg 73



BM6835-15E \$250.00 Pg 96



BM6838-09X \$225.00 Pg 96



BM6838-17L \$225.00 Pg 96



BM6929-56L \$450.00 Pg 91



BM7100-59H \$395.00 Pg 62



BM7103-51L \$425.00 Pg 62



BM7107-50E \$425.00 Pg 62



BM7193-07B \$250.00 Pg 60



BM7251-53H \$325.00 Pg 64



BM7251-53L \$325.00 Pg 64



BM7252-51E \$350.00 Pg 64



BM7252-51G \$450.00 Pg 63



BM7256-50E \$350.00 Pg 64



BM7258-54H \$450.00 Pg 63



BM7330-59L \$295.00 Pg 65



BM7332-53P \$325.00 Pg 65



BM7334-58L \$325.00 Pg 65



BM7342-50A \$395.00 Pg 63



BM7344-54E \$395.00 Pg 63



BM7431-51H \$450.00 Pg 93



BM7431-51L \$450.00 Pg 92



BM7431-51X \$450.00 Pg 92



BM8180-03E \$225.00 Pg 98



BM8434-58A \$295.00 Pg 66



BM8471-01E \$225.00 Pg 97



BM8475-00F \$250.00 Pg 97



BM8478-01L \$250.00 Pg 97



BN0085-01E \$350.00 Pg 14



BN0150-28E \$350.00 Pg 14



BN0151-09L \$350.00 Pg 14



BN0191-55L \$395.00 Pg 12



BN0195-54E \$450.00 Pg 13



BN0198-56H \$395.00 Pg 13



BN0200-56E \$495.00 Pg 12



BN0211-09X \$425.00 Pg 26



BN0211-50E \$495.00 Pg 26



BN0217-02E \$450.00 Pg 26



BN2029-01E \$950.00 Pg 14



BN2037-03E \$775.00 Pg 10



BN2038-01L \$695.00 Pg 10



BN2039-59E \$695.00 Pg 10



BN5050-09X \$595.00 Pg 24



BN5055-05E \$595.00 Pg 24



BN5058-07E \$575.00 Pg 24



BN7020-17E \$2,300.00 Pg 15 *11055*



BU0050-02L \$425.00 Pg 50



BU0054-52L \$525.00 Pg 50



BU0056-57A \$525.00 Pg 50



BU0057-54E \$525.00 Pg 51



BU2010-57L \$375.00 Pg 58



BU2013-08E \$350.00 Pg 58



BU2020-29X \$425.00 Pg 52



BU2020-70E \$495.00 Pg 52



BU2021-51H \$495.00 Pg 52



BU2021-51L \$495.00 Pg 52



BU2025-76E \$525.00 Pg 52



BU2055-08X \$295.00 Pg 99



BU2055-16E \$295.00 Pg 99



BU2070-04A \$325.00 Pg 58



BU2070-12L \$325.00 Pg 58



BU2082-56E \$695.00 Pg 53



BU2088-50E \$695.00 Pg 53



BU4010-05L \$250.00 Pg 103



BU4013-07H \$275.00 Pg 103



BX1000-06L \$375.00 Pg 55



BX1000-57E \$425.00 Pg 55



BX1003-08E \$395.00 Pg 55



BX1010-02E \$395.00 Pg 105



BX1010-11L \$395.00 Pg 105



CA0295-58E \$525.00 Pg 104



CA0349-51L \$495.00 Pg 91



CA0444-50L \$495.00 Pg 107



CA0621-05L \$325.00 Pg 99



CA0648-09L \$325.00 Pg 102



CA0649-06X \$325.00 Pg 102



CA0649-14E \$325.00 Pg 102



CA0681-03E \$375.00 Pg 106



CA0683-08E \$395.00 Pg 106



CA0715-03E \$450.00 Pg 11



CA0719-53E \$495.00 Pg 11



CA0720-54H \$595.00 Pg 27



CA0727-04E \$550.00 Pg 27



CA0727-12E \$550.00 Pg 27



CA4155-12L \$450.00 Pg 107





CA4210-24E \$325.00 Pg 105



CA4213-18L \$350.00 Pg 105



CA4215-21H \$350.00 Pg 105



CA4377-53H \$525.00 Pg 104



CA4430-01X \$375.00 Pg 106



CA4435-08L \$395.00 Pg 106



CA4438-00L \$375.00 Pg 106



CA7003-06E \$350.00 Pg 59



CA7020-07A \$375.00 Pg 101



CA7020-58L \$395.00 Pg 101



CA7027-08E \$395.00 Pg 101



CB5840-59E \$650.00 Pg 17



CB5841-05E \$625.00 Pg 16



CB5848-57L \$695.00 Pg 16, 23



CC3035-50E \$795.00 Pg 34



CC3038-51E \$795.00 Pg 34



CC3039-08E \$795.00 Pg 34



CC7015-55E \$2,500.00 Pg 35



EG7050-54A \$295.00 Pg 84



EG7055-51E \$325.00 Pg 84



EM0320-59D \$795.00 Pg 48



EM0323-51N \$895.00 Pg 48



EM0337-56D \$395.00 Pg 48



EM0490-08A \$175.00 Pg 72



EM0492-02A \$195.00 Pg 72



EM0630-51D \$250.00 Pg 86



EM0633-53A \$275.00 Pg 86



EM0638-50P \$275.00 Pg 86



EM0640-58D \$375.00 Pg 49











EM0642-52P \$395.00 EM0643-50X \$395.00 Pg 49 Pg 49

EM0710-54Y \$395.00 Pg 49

EM0716-58A \$450.00 Pg 49

EM0732-51P \$350.00 Pg 84

EM0733-08A \$295.00 Pg 84



EM0734-56D \$350.00 Pg 84



EM0741-51E \$325.00 Pg 70



EM0743-55D \$350.00 Pg 70



EM0770-52Y \$325.00 Pg 111



EM0773-54D \$350.00 Pg 111



EM0774-51D \$350.00 Pg 111



EM0790-55N \$450.00 Pg 45



EM0794-03Y \$375.00 Pg 46



EM0794-54D \$495.00 Pg 45



EM0796-08Y \$375.00 Pg 46



EM0796-59Y \$395.00 Pg 46



EM0796-75D \$495.00 Pg 44



EW1228-53D \$375.00 Pg 115



EW1264-50A \$295.00 Pg 66



EW1410-50E \$275.00 Pg 73



EW1670-59D \$275.00 Pg 67



EW1676-52D \$295.00 Pg 67



EW2290-54L \$295.00 Pg 65



EW2294-53L \$325.00 Pg 65



EW2340-58A \$350.00 Pg 115



EW2344-57A \$375.00 Pg 115



EW2348-56A \$375.00 Pg 115



EW2440-53A \$225.00 Pg 71



EW2443-55X \$250.00 Pg 71





FC8000-55D \$375.00



FC8003-06D \$350.00 Pg 54



FC8004-54D \$395.00 Pg 54



FD1030-56Y \$325.00 Pg 110



FD2013-50A \$375.00 Pg 110



FD2016-51A \$375.00 Pg 110



FE1082-05A \$225.00 Pg 61



FE1140-86L \$250.00 Pg 114



FE1140-86X \$250.00 Pg 114



FE1190-53E \$325.00 Pg 112



FE1192-58A \$350.00 Pg 112



FE1196-57A \$350.00 Pg 112



FE2100-51E \$295.00 Pg 67



FE2102-55A \$325.00 Pg 67



FE2104-50A \$325.00 Pg 67



FE7040-53E \$325.00 Pg 113



FE7042-07D \$295.00 Pg 113



FE7043-55A \$350.00 Pg 113



GA1052-04E \$250.00 Pg 85



GA1053-01A \$250.00 Pg 85



GA1055-06E \$250.00 Pg 85



GA1058-16E \$250.00 Pg 85



GA1058-59Q \$395.00 Pg 81



JW0137-51E \$795.00 Pg 28



JW0138-08L \$725.00 Pg 28



JW0139-05L \$725.00 Pg 29



JY8070-54E \$695.00 Pg 18



JY8075-51E \$695.00 Pg 18



JY8076-07E \$750.00 Pg 19



JY8077-04H \$750.00 Pg 19



JY8078-01L \$650.00 Pg 20



JY8078-52L \$695.00 Pg 21



JY8108-53E \$895.00 Pg 18



AT2440-51L \$325.00 Pg 125



AT2441-08X \$295.00 Pg 125



AT2447-01E \$325.00 Pg 125



AW0080-57A \$250.00 Pg 126



AW0083-08X \$225.00 Pg 126



AW0087-58H \$275.00 Pg 126



AW1146-55H \$250.00 Pg 130



AW1147-52L \$275.00 Pg 130



AW1148-09E \$225.00 Pg 130



AW1150-07E \$225.00 Pg 122



AW1151-04E \$225.00 Pg 122



AW1157-08H \$250.00 Pg 123



AW1158-05L \$225.00 Pg 122



AW1350-83M \$225.00 Pg 127



AW1354-82E \$250.00 Pg 127



AW1585-04E \$250.00 Pg 124



AW1585-55L \$275.00 Pg 124



AW1588-57E \$250.00 Pg 124



AW1605-09E \$250.00 Pg 120



AW1607-03H \$250.00 Pg 120



AW1608-01E \$250.00 Pg 120



BM6980-08E \$195.00 Pg 129



BM6983-00H \$225.00 Pg 129



BM6983-51H \$275.00 Pg 129



BM6985-55E \$275.00 Pg 129



BM6988-57E \$275.00 Pg 129



BM6991-52H \$250.00 Pg 129



BM7410-51L \$250.00 Pg 127



BM7410-51X \$250.00 Pg 127



BU4020-01L \$250.00 Pg 128



BU4023-54E \$295.00 Pg 128



BU4025-08E \$275.00 Pg 128



BU4025-59E \$295.00 Pg 128



BV1110-51L \$250.00 Pg 131



BV1112-05A \$225.00 Pg 131



BV1112-56E \$275.00 Pg 131



CA0435-51E \$295.00 Pg 130



CA4190-54E \$295.00 Pg 130



EM0233-51A \$275.00 Pg 139



EM0234-59D \$275.00 Pg 139



EM0680-53D \$225.00 Pg 138



EM0682-58P \$250.00 Pg 138



EM0753-01A \$225.00 Pg 135



EM0756-53A \$250.00 Pg 135



EM0763-07A \$225.00 Pg 134



EM0766-50A \$250.00 Pg 134



EM0768-54E \$250.00 Pg 134



FD2050-53L \$275.00 Pg 138



FD3003-58E \$295.00 Pg 139



FD3003-58X \$295.00 Pg 139



FE6080-71X \$225.00 Pg 136



FE6081-51A \$225.00 Pg 136



FE6082-08P \$225.00 Pg 137



FE6083-05P \$225.00 Pg 137



FE6083-13E \$225.00 Pg 137



FE6083-72A \$250.00 Pg 136



FE6086-74A \$250.00 Pg 136



FE6113-57X \$295.00 Pg 138



FE6136-01A \$250.00 Pg 123



FE6140-03A \$175.00 Pg 135







FE7053-51X \$250.00 Pg 133



FE7056-02D \$225.00 Pg 133



FE7070-52A \$275.00 Pg 132



FE7073-54A \$295.00 Pg 132



FE7073-71A \$295.00 Pg 132



AU1068-50W \$375.00 Pg 143



AU1069-06W \$295.00 Pg 143



AU1069-57W \$375.00 Pg 143



AW1155-03W \$350.00 Pg 151



AW1156-01W \$350.00 Pg 148



AW1367-05W \$325.00 Pg 150



AW1431-24W \$225.00 Pg 150



AW1615-05W \$395.00 Pg 148



AW2037-04W \$295.00 Pg 150



CA0297-52W \$550.00 Pg 148



CA0429-53W \$395.00 Pg 148



EM0596-58W \$350.00 Pg 149



FE6101-05W \$275.00 Pg 149



FE7060-05W \$295.00 Pg 145



FE7060-56W \$325.00 Pg 144



FE7062-51W \$375.00 Pg 149



FE7065-52W \$350.00 Pg 144



GA1051-58W \$450.00 Pg 142



GA1056-54W \$475.00 Pg 142

Model Number Pag	e Number	Retail	Model Number	Page Number	Retail	
ECO-DRIVE			AU1043-00E	60	\$225.00	
A09003-08E	60	\$275.00	AU1044-58E	60	\$295.00	
AO9020-84E	60	\$275.00	AU1060-51E	82	\$295.00	
AR3070-04L	78	\$350.00	AU1060-51G	81	\$375.00	
AR3070-55E	79	\$475.00	AU1062-05E	85	\$250.00	
AR3072-09A	77	\$375.00	AU1062-56E	82	\$325.00	
AR3073-06E	78	\$375.00	AU1062-56G	81	\$395.00	
AR3074-54E	79	\$495.00	AU1065-07E	85	\$250.00	
AR3075-51E	79	\$495.00	AU1065-58E	82	\$325.00	
AR3076-08A	76	\$375.00	AU1065-58G	81	\$395.00	
AT0200-05E	98	\$275.00	AV0070-57L	30	\$895.00	
AT0200-13A	98	\$275.00	AV0071-03A	30	\$795.00	
AT0200-21L	98	\$275.00	AV0078-04X	31	\$895.00	
AT0550-11X	100	\$350.00	AV0079-01A	31	\$895.00	
AT2146-59E	59	\$425.00	AW0050-82E	100	\$250.00	
AT2450-58E	117	\$475.00	AW0076-03>	(102	\$295.00	
AT2452-52E	117	\$495.00	AW0078-08L	102	\$295.00	
AT4004-52E	36	\$675.00	AW1232-04A	61	\$225.00	
AT4106-52X	36	\$675.00	AW1236-03A	61	\$195.00	
AT4127-52H	36	\$675.00	AW1430-86A	100	\$225.00	
AT8020-03L	22	\$650.00	AW1430-86E	100	\$225.00	
AT8020-54L	22	\$695.00	AW1591-01L	103	\$295.00	
AT8110-53E	37	\$650.00	AW1593-06X	103	\$295.00	
AT8113-04H	37	\$595.00	AW1598-70X	103	\$325.00	
AT8116-57E	37	\$675.00	BJ6510-51L	80	\$295.00	
AU1040-08E	60	\$195.00	BJ6512-56P	80	\$325.00	

Model Number	Page Number	Retail	 Model Number	Page Number	Retail
BJ6517-52E	80	\$325.00	BM7252-51G	63	\$450.00
BJ7006-56L	. 23	\$475.00	BM7256-50E	64	\$350.00
BJ7007-02L	. 23	\$425.00	BM7258-54H	63	\$450.00
BJ8050-08E	15	\$495.00	BM7330-59L	65	\$295.00
BL5551-14H	90	\$450.00	BM7332-53P	65	\$325.00
BL5558-58L	90	\$495.00	BM7334-58L	65	\$325.00
BL5563-58E	57	\$495.00	BM7342-50A	63	\$395.00
BL5567-57E	57	\$495.00	BM7344-54E	63	\$395.00
BL5568-54L	56	\$475.00	BM7431-51H	93	\$450.00
BL6000-55E	83	\$275.00	BM7431-51L	92	\$450.00
BL6005-01E	83	\$225.00	BM7431-51X	92	\$450.00
BL6008-53E	83	\$295.00	BM8180-03E	98	\$225.00
BL8144-54H	59	\$575.00	BM8434-58A	66	\$295.00
BM6550-58E	Ē 73	\$275.00	BM8471-01E	97	\$225.00
BM6552-52E	73	\$295.00	BM8475-00F	97	\$250.00
BM6835-15E	96	\$250.00	BM8478-01L	97	\$250.00
BM6838-09)	X 96	\$225.00	BN0085-01E	14	\$350.00
BM6838-17L	96	\$225.00	BN0150-28E	14	\$350.00
BM6929-56L	_ 91	\$450.00	BN0151-09L	14	\$350.00
BM7100-59F	H 62	\$395.00	BN0191-55L	12	\$395.00
BM7103-51L	62	\$425.00	BN0195-54E	13	\$450.00
BM7107-50E	62	\$425.00	BN0198-56H	13	\$395.00
BM7193-07B	60	\$250.00	BN0200-56E	12	\$495.00
BM7251-53H	64	\$325.00	BN0211-09X	26	\$425.00
BM7251-53L	64	\$325.00	BN0211-50E	26	\$495.00
BM7252-51E	64	\$350.00	BN0217-02E	26	\$450.00

Model Number	Page Number	Retail	 Model Number	Page Number	Retail
BN2029-01E	14	\$950.00	BU4013-07H	103	\$275.00
BN2037-03E	10	\$775.00	BX1000-06L	55	\$375.00
BN2038-01L	10	\$695.00	BX1000-57E	55	\$425.00
BN2039-59E	10	\$695.00	BX1003-08E	55	\$395.00
BN5050-09X	24	\$595.00	BX1010-02E	105	\$395.00
BN5055-05E	24	\$595.00	BX1010-11L	105	\$395.00
BN5058-07E	24	\$575.00	CA0295-58E	104	\$525.00
BN7020-17E	15	\$2,300.00	CA0349-51L	91	\$495.00
BU0050-02L	50	\$425.00	CA0444-50L	107	\$495.00
BU0054-52L	50	\$525.00	CA0621-05L	99	\$325.00
BU0056-57A	50	\$525.00	CA0648-09L	102	\$325.00
BU0057-54E	51	\$525.00	CA0649-06X	102	\$325.00
BU2010-57L	58	\$375.00	CA0649-14E	102	\$325.00
BU2013-08E	58	\$350.00	CA0681-03E	106	\$375.00
BU2020-29X	52	\$425.00	CA0683-08E	106	\$395.00
BU2020-70E	52	\$495.00	CA0715-03E	11	\$450.00
BU2021-51H	52	\$495.00	CA0719-53E	11	\$495.00
BU2021-51L	52	\$495.00	CA0720-54H	27	\$595.00
BU2025-76E	52	\$525.00	CA0727-04E	27	\$550.00
BU2055-08X	99	\$295.00	CA0727-12E	27	\$550.00
BU2055-16E	99	\$295.00	CA4155-12L	107	\$450.00
BU2070-04A	58	\$325.00	CA4184-81E	107	\$475.00
BU2070-12L	58	\$325.00	CA4210-24E	105	\$325.00
BU2082-56E	53	\$695.00	CA4213-18L	105	\$350.00
BU2088-50E	53	\$695.00	CA4215-21H	105	\$350.00
BU4010-05L	103	\$250.00	CA4377-53H	104	\$525.00

Model I	Number	Page Number	Retail	 Model Number	Page Number	Retail
CA44	30-01×	(106	\$375.00	EM0642-52F	49	\$395.00
CA44	35-08L	106	\$395.00	EM0643-50>	4 9	\$395.00
CA44	38-00L	_ 106	\$375.00	EM0710-54Y	49	\$395.00
CA70	03-06E	59	\$350.00	EM0716-58A	49	\$450.00
CA70	20-07 <i>A</i>	101	\$375.00	EM0732-51P	84	\$350.00
CA70	20-58L	101	\$395.00	EM0733-08A	A 84	\$295.00
CA70	27-08E	101	\$395.00	EM0734-56D	84	\$350.00
CB58	40-59E	17	\$650.00	EM0741-51E	70	\$325.00
CB58	41-05E	16	\$625.00	EM0743-55D	70	\$350.00
CB58	48-57L	16	\$695.00	EM0770-52Y	′ 111	\$325.00
CB58	48-57L	23	\$695.00	EM0773-54D) 111	\$350.00
CC30	35-50E	34	\$795.00	EM0774-51D	111	\$350.00
CC30	38-51E	34	\$795.00	EM0790-55N	V 45	\$450.00
CC30	39-08E	34	\$795.00	EM0794-03Y	46	\$375.00
CC70	15-55E	35	\$2,500.00	EM0794-540) 45	\$495.00
EG70	50-54 <i>A</i>	A 84	\$295.00	EM0796-08\	46	\$375.00
EG70	55-51E	84	\$325.00	EM0796-59Y	46	\$395.00
EM03	320-59[O 48	\$795.00	EM0796-75D) 44	\$495.00
EM03	323-51N	48	\$895.00	EW1228-53D	115	\$375.00
EM03	37-560) 48	\$395.00	EW1264-50A	66	\$295.00
EM04	·90-08	A 72	\$175.00	EW1410-50E	73	\$275.00
EM04	·92-02 <i>/</i>	A 72	\$195.00	EW1670-59D	67	\$275.00
EM06	30-51E	86	\$250.00	EW1676-52D	67	\$295.00
EM06	833-53 <i>F</i>	A 86	\$275.00	EW2290-54L	65	\$295.00
EM06	38-50F	> 86	\$275.00	EW2294-53L	65	\$325.00
EM06	840-581	D 49	\$375.00	EW2340-58A	A 115	\$350.00

Model Number	Page Number	Retail	 Model Number	Page Number	Retail
EW2344-57A	115	\$375.00	EX1513-00Y	43	\$525.00
EW2348-56A	. 115	\$375.00	EX1516-52E	42	\$550.00
EW2440-53A	71	\$225.00	FB1440-57L	68	\$295.00
EW2443-55X	71	\$250.00	FB1443-08A	68	\$295.00
EW2520-56Y	70	\$275.00	FB1444-56D	68	\$325.00
EW2522-51D	70	\$295.00	FB2003-05A	69	\$325.00
EW2524-55N	70	\$295.00	FB3002-53P	116	\$495.00
EW3144-51A	66	\$295.00	FB3008-57E	116	\$495.00
EW5551-56N	47	\$350.00	FC8000-55D	54	\$375.00
EW5552-53D	47	\$375.00	FC8003-06D	54	\$350.00
EW5553-51D	47	\$450.00	FC8004-54D	54	\$395.00
EW5554-58D	47	\$425.00	FD1030-56Y	110	\$325.00
EW5556-52D	47	\$375.00	FD2013-50A	110	\$375.00
EW9334-52E	66	\$265.00	FD2016-51A	110	\$375.00
EX1320-54E	87	\$250.00	FE1082-05A	61	\$225.00
EX1410-53A	87	\$250.00	FE1140-86L	114	\$250.00
EX1420-50E	87	\$250.00	FE1140-86X	114	\$250.00
EX1422-54E	87	\$275.00	FE1190-53E	112	\$325.00
EX1480-58L	114	\$275.00	FE1192-58A	112	\$350.00
EX1483-50D	114	\$295.00	FE1196-57A	112	\$350.00
EX1484-57D	114	\$295.00	FE2100-51E	67	\$295.00
EX1500-01E	40	\$775.00	FE2102-55A	67	\$325.00
EX1500-52A	41	\$825.00	FE2104-50A	67	\$325.00
EX1503-54A	40	\$875.00	FE7040-53E	113	\$325.00
EX1510-59D	42	\$550.00	FE7042-07D	113	\$295.00
EX1512-53A	43	\$575.00	FE7043-55A	113	\$350.00

Model Number	r Page Number	Retail	 Model Number	Page Number	Retail	
GA1052-04	E 85	\$250.00	DRIVE			
GA1053-01/	A 85	\$250.00	AT2440-51L	125	\$325.00	
GA1055-06	E 85	\$250.00	AT2441-08X	125	\$295.00	
GA1058-16E	E 85	\$250.00	AT2447-01E	125	\$325.00	
GA1058-59	Q 81	\$395.00	AW0080-57	A 126	\$250.00	
JW0137-51E	28	\$795.00	AW0083-08	X 126	\$225.00	
JW0138-08	L 28	\$725.00	AW0087-58H	H 126	\$275.00	
JW0139-05	L 29	\$725.00	AW1146-55H	130	\$250.00	
JY8070-54	E 18	\$695.00	AW1147-52L	130	\$275.00	
JY8075-51E	18	\$695.00	AW1148-09E	130	\$225.00	
JY8076-07	E 19	\$750.00	AW1150-07E	122	\$225.00	
JY8077-04	H 19	\$750.00	AW1151-04E	122	\$225.00	
JY8078-01l	_ 20	\$650.00	AW1157-08H	123	\$250.00	
JY8078-52I	_ 21	\$695.00	AW1158-05L	122	\$225.00	
JY8108-53E	E 18	\$895.00	AW1350-83N	127	\$225.00	
			AW1354-82E	127	\$250.00	
			AW1585-04E	124	\$250.00	
			AW1585-55L	124	\$275.00	
			AW1588-57E	124	\$250.00	
			AW1605-09E	120	\$250.00	
			AW1607-03H	H 120	\$250.00	
			AW1608-01E	120	\$250.00	
			BM6980-08	E 129	\$195.00	
			BM6983-00H	H 129	\$225.00	
			BM6983-51H	l 129	\$275.00	
			BM6985-55E	129	\$275.00	

Model Number	Page Number	Retail	 Model Number	Page Number	Retail	
BM6988-57E	129	\$275.00	FE6081-51A	136	\$225.00	
BM6991-52H	l 129	\$250.00	FE6082-08P	137	\$225.00	
BM7410-51L	127	\$250.00	FE6083-05P	137	\$225.00	
BM7410-51X	127	\$250.00	FE6083-13E	137	\$225.00	
BU4020-01L	128	\$250.00	FE6083-72A	136	\$250.00	
BU4023-54E	128	\$295.00	FE6086-74A	136	\$250.00	
BU4025-08E	128	\$275.00	FE6113-57X	138	\$295.00	
BU4025-59E	128	\$295.00	FE6136-01A	123	\$250.00	
BV1110-51L	131	\$250.00	FE6140-03A	135	\$175.00	
BV1112-05A	131	\$225.00	FE6142-08A	135	\$195.00	
BV1112-56E	131	\$275.00	FE7053-51X	133	\$250.00	
CA0435-51E	130	\$295.00	FE7056-02D	133	\$225.00	
CA4190-54E	130	\$295.00	FE7070-52A	132	\$275.00	
EM0233-51A	139	\$275.00	FE7073-54A	132	\$295.00	
EM0234-59D) 139	\$275.00	FE7073-71A	132	\$295.00	
EM0680-53E) 138	\$225.00				
EM0682-58F	138	\$250.00				
EM0753-01A	135	\$225.00				
EM0756-53A	135	\$250.00				
EM0763-07A	134	\$225.00				
EM0766-50A	134	\$250.00				
EM0768-54E	134	\$250.00				
FD2050-53L	138	\$275.00				
FD3003-58E	139	\$295.00				
FD3003-58X	139	\$295.00				
FE6080-71X	136	\$225.00				

Model Number P	age Numbe	r Retail
DISNEY		
AU1068-50W	143	\$375.00
AU1069-06W	143	\$295.00
AU1069-57W	143	\$375.00
AW1155-03W	151	\$350.00
AW1156-01W	148	\$350.00
AW1367-05W	150	\$325.00
AW1431-24W	150	\$225.00
AW1615-05W	148	\$395.00
AW2037-04W	150	\$295.00
CA0297-52W	148	\$550.00
CA0429-53W	148	\$395.00
EM0596-58W	149	\$350.00
FE6101-05W	149	\$275.00
FE7060-05W	145	\$295.00
FE7060-56W	144	\$325.00
FE7062-51W	149	\$375.00
FE7065-52W	144	\$350.00
GA1051-58W	142	\$450.00
GA1056-54W	142	\$475.00

CONTENTS

Technical Appendix 176 Why Citizen 181 FAQ's Eco-Drive Recharge Guide 192 194 Watch Care 196 Bracelet Sizing Guide Watch Setting Instructions 199 Bracelet Sizing Tools 217 218 Warranty 219 Caseback Markings 220 **Setting Instructions** 220 United States Service Centers

Inside Back

Specifications and Model Codes

1. ECO-DRIVE

It starts with a simple, yet revolutionary concept:

a watch that never needs a battery

CITIZEN Eco-Drive technology harnesses the power of light — from any natural or artificial light source — and converts it into energy which is stored in a permanently rechargeable lithium-ion cell. It recharges continuously in any kind of light to run forever.



FEATURES	BENEFITS
Never needs a battery.	The ultimate convenience—no battery to replace, ever!
Powered by any kind of light, so it can run and recharge continuously.	Under normal conditions indoor and outdoor, there is ample exposure to light to keep the watch running—forever.
Power reserve can last from 6 months to 5 years (depends on model).	Keeps running reliably, even in the dark.
Low charge warning; quick start function (most models).	Instant feedback when charging is needed; just seconds to start up after exposure to light.



2. TECHNOLOGY

CITIZEN offers a tradition of bringing new technologies to watch manufacturing.

- Satellite GPS timekeeping technology with synchronized time adjustment
- Super Titanium™ 5x harder and 40% lighter than untreated stainless steel
- Atomic Timekeeping technology, atomic clock synchronization for superior accuracy
- Proximity, a perpetual calendar chronograph with Bluetooth® powered by Eco-Drive technology no charging needed



3. PRODUCT SEGMENTATION

CITIZEN is a Disney corporate alliance partner marketing co-branded watches and participating in activations around the Disney Parks, Marvel, Star Wars and more.

As the official timepiece of both Walt Disney World and Disneyland, CITIZEN has branded clocks in both theme parks.

Association with the most widely viewed sporting events generates awareness of CITIZEN as a world-class brand.



4. BRAND PARTNERSHIPS

Association with the **world's most widely viewed and attended sporting events** as well as the prestigious **National Merit Scholarship Program*** generates awareness of CITIZEN as a world class brand.



5. ADVERTISING LEADERSHIP

Annually CITIZEN has a competitive advertising program that includes TV, print, digital and out-of-home. #1 network TV advertiser amoung competition*.


*Kantar Watch Competative 2018



1. WHAT TOOLS ARE AVAILABLE TO HELP ME LEARN MORE ABOUT CITIZEN?

- The CITIZEN website citizenwatch.com, which includes:
 - Collections with images, prices, and model numbers
 - General technical information
 - Interactive, full, and abbreviated setting instructions
 - Eco-Drive recharge guide
- Enlighten Multilingual Training Website
- My CITIZEN App
- CITIZEN Brand Assets
- CITIZEN YouTube Channel
 - Interactive setting instructions
 - CITIZEN TV commercials
 - CITIZEN product videos
- Seasonal "One Pager"
- Sales Ring
- Technical Services, which offers a toll-free number for additional questions that may arise:

800-321-1023, ext. **4234** (U.S.) | **800-263-7799** (Canada)

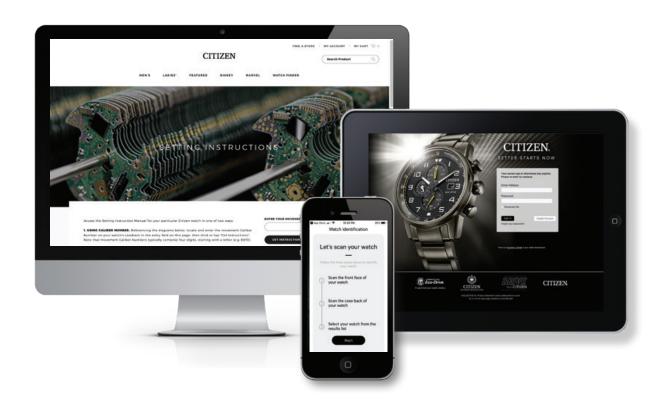



SATELLITE WAVE GPS

with time adjustment in 40 time zones.

WORLDWIDE RECEPTION.

quick as 3 seconds.

SATELLITE WAVE GPS offers the WORLD'S FASTEST SIGNAL RECEPTION TIME in as

SATELLITE WAVE GPS has the **QUICKEST CHARGING TIME**

of any light-powered satellite timekeeping watch.

SATELLITE WAVE GPS has the LONGEST POWER RESERVE

of any light-powered satellite timekeeping watch.

CITIZEN

ECO-DRIVE SATELLITE WAVE GPS

POWERED BY LIGHT, ANY LIGHT, NEVER NEEDS A BATTERY



2. WHAT IS SATELLITE WAVE GPS TIMEKEEPING TECHNOLOGY?

Telling you the precise time, everywhere.

Our goal of providing people with the correct time, regardless of where in the world they live and work, led to the development of Satellite Wave technology. When we started, there were no GPS chips designed specifically for watches to display the correct time. Undaunted, we set about establishing our own technologies to successfully open the door to the future of watches.

How does Satellite timekeeping work?

Satellite Wave GPS enables watches to receive time signals from GPS satellites and display precise time and date anywhere in the world.

Will I have precise time worldwide?

With coverage across 40 of the existing UTC standard time zones, watches with Satellite Wave technology will ensure the most accurate time you will find in any conventional watch. Whether you trek through the desert, cruise the oceans, or climb a snowy mountain, you never need to worry about having the correct time.

Does the watch automatically adjust time zones when you travel?

In order to conserve power, satellite reception must be manually activated. Time and calendar updating completes in as quick as three seconds, while GPS location updating completes in as fast as 30 seconds.

The world's fastest* satellite time reception in as guick as 3 seconds.**

Satellite Wave technology allows your watch to adjust to a new time zone with amazing speed and ease. Receiving a satellite signal in as quick as three seconds, Satellite Wave has the world's fastest signal reception speed from GPS satellites.







[†] Not all Satellite Wave models feature Satellite GPS location updating.

^{*} According to research data from CITIZEN WATCH CO., LTD (March 2015).

^{**} GPS location reception as quick as 30 seconds.



WHAT IS AN ATOMIC CLOCK?

A Cesium clock, also known as an "Atomic" clock is the most accurate clock in the world. It has an accuracy rate of 2 nano seconds per day, or within 1 second in 1,400,000 years. The atomic clock measures time based on the vibrations of the cesium atom while it is subjected to microwaves. Atomic time is used as the basis where high precision is required.

HOW DOES ATOMIC TIMEKEEPING WORK?

The signal is generated from a generating tower, received by the watch and then processed. Depending on your model, you may be able to receive signals from generating stations in North America, the United Kingdom, Europe, Japan, and China. The timepiece receives radio signals both automatically and on-demand at which time both the time and calendar are updated.

WHAT IS THE BEST PLACE TO GET RECEPTION FOR THE RADIO SIGNAL?

Signal strength will vary by physical location, geography, and distance from generating station as well as time of day. The strongest signal strength occurs between 2:00 and 4:00 in the morning. This is when the least atmospheric interference is present and when automatic updating occurs. During updating, whether automatic or on-demand, the watch must remain in a motionless state, such as on a table.

WILL A CITIZEN ECO-DRIVE A • T WATCH AUTOMATICALLY ADJUST TIME FOR DAYLIGHT SAVING TIME?


Provided automatic daylight saving time updating is activated (by default) and a signal is received, CITIZEN Eco-Drive A•T collection timepieces will automatically adjust for daylight saving time changes.


DOES THE WATCH AUTOMATICALLY ADJUST TIME ZONES WHEN YOU TRAVEL?

Our A•T watches draw time signals from atomic time transmitting stations. The information transmitted does not include location information, so you must tell the watch where it is when you change time zones. This can be as easy as pulling the crown out and pressing a button or rotating the crown (method depends on model).

CAN I GET A SIGNAL ANYWHERE?

Signal reception is subject to many variables such as distance from the generating station, building materials, geography, time of day, weather, trees, etc. Many commercial structures are made of concrete and steel with many electrical wires which may inhibit signal reception. Your instruction booklet will provide more details for your particular model.

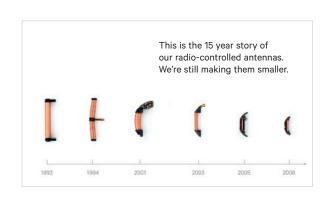

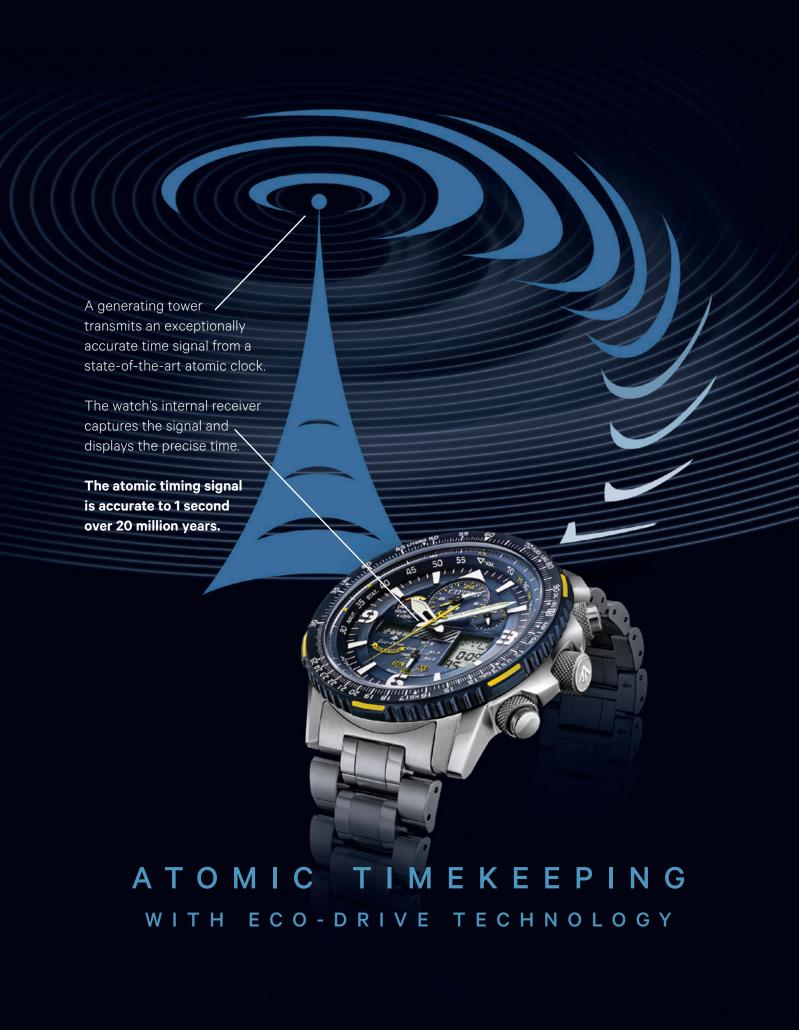

4. WHY IS CITIZEN PROXIMITY A SMARTER WATCH?

The CITIZEN Proximity is a perpetual calendar chronograph watch with Bluetooth®. Once paired to your compatible smartphone, this watch has the following features and it never needs a battery.

Bluetooth® Connectivity Features for iPhone® and Android™:

- Time/Date Sync sync to the GSM time and date set on your compatible smartphone
- Notification and Call Filtering manage alerts from selected contacts
- Smartphone Search locate your phone by simultaneously pushing the buttons on your watch
- Visual and Vibration Notification for:
 - Telephone Call
 - Email
 - SMS
 - Facetime®
 - Calendar Event
 - Social Media with Notification Filtering (Facebook®, Facebook Messenger® and Twitter®)
- Bluetooth® Connection Link Loss your watch will vibrate to let you know when you have moved out of range
- 1-Second Chronograph Measures up to 60 Minutes
- Perpetual Calendar
- Dual Time (Second Time Zone)
- 12/24-Hour Time
- Daily Alarm set-up by phone or manually
- Power Reserve Indicator
- Light Level Power Indicator
- Screw-Back Case
- Day/Date
- Movement: Caliber W770

For up to date specs, please visit citizenwatch.com







5. HOW IS A CERAMIC WATCH MADE?

- Zirconium Oxide Powder is homogenized and molded into links.
- These links are then sintered in a furnace at very high heat. This process reduces the size of the links and strengthens them.
- The links are polished by diamond files until they are smooth and then assembled into a watch bracelet.

What are the features and benefits of ceramic watches that make them so special?

- Durability On the Vickers scale of hardness, ceramic is harder than gold, platinum, and steel resulting in a product that is more scratch-resistant than these precious metals.
- Thermal Constancy Ceramic products are used to protect rockets for space travel. It benefits consumers by providing a product that adapts to your body temperature.
- Color Carrier The ceramic manufacturing process results in a colored link that will not fade or discolor.
- Hypoallergenic Ceramic products are used for surgical procedures because of their hypoallergenic properties. Wearing a ceramic watch is a benefit for those consumers who have skin allergies.

6. WHAT KIND OF CRYSTAL IS USED FOR CITIZEN WATCH DIALS?

The majority of CITIZEN watches have high quality mineral glass crystal which is 3 times harder than plain glass. In addition, many CITIZEN watches feature sapphire crystal which is surpassed only by diamonds in hardness. This synthetic sapphire ranks high in hardness, heat resistance, and corrosion.

Watches using synthetic sapphire are designated with the following codes in our product catalog.

SC = Sapphire Crystal

CS = Anti-Reflective Coated Sapphire Crystal



7. WHAT IS SUPER TITANIUM™?

The Apollo moon mission showed the potential of titanium as a material for commercial products. In 1970, CITIZEN launched the world's first watch using solid titanium. It was light-weight, hypo-allergenic, and resistant to rusting.

Titanium is the fourth most abundant structural metal on Earth. An incredible material that does not react to sunlight, salt water, or any body chemistry.

By treating solid titanium with CITIZEN's proprietary surface hardening technology, Duratect, Super Titanium™ is created.

What are the benefits of Super Titanium™?

Achieving more than 5 times the hardness of stainless steel and providing better wearing comforts, Super Titanium™ represents CITIZEN's pursuits for bringing something better to people's lives.

- 1. Super Titanium™ is approximately 40% lighter than stainless steel. So light that you might forget you are wearing a watch.
- 2. Super Titanium™ is 5x harder than stainless steel, making it more scratch-resistant than stainless steel.
- 3. Appreciate better comfort on your wrist, whatever you may do. Super Titanium™ reduces the risk of adverse skin reaction to metals thanks to the use of hypoallergenic solid titanium. Even people with sensitive skin do not have to be concerned about skin irritation when wearing CITIZEN Super Titanium™ watches.

Note: Super Titanium[™] does not prevent reaction to all metal allergies.

4. Keeping your watch scratch-free and undamaged doesn't mean you have to hide it away in your dresser. Super Titanium™ provides the ideal solution to the beauty vs. preservation dilemma. Thanks to CITIZEN's proprietary surface hardening technology, Duratect, Super Titanium™ makes your watch incredibly resistant to daily wear and tear.







8. WHAT DO THESE WATCH TERMS MEAN?

Alarm

A feature which provides a sound signal at a preset time within a 12 or 24 hour period.

Ana-Digi

A watch with combined analog and digital displays.

Analog

A watch with hands (hour, minute and sometimes second) to indicate the time.

Anti-Reflective Crystal

A special treatment applied to the crystal (sapphire or mineral) that reduces light reflection to enhance the clarity of the watch crystal.

Applied Markers

Small raised numerals, various shaped pieces of polished metal or in combination that have been attached to the surface of a watch dial.

Atomic Time (A • T)

Time measured through vibrations of atoms in a metal isotope that resembles mercury. The result is extremely accurate time that can be measured on instruments. Radio waves transmit this exact time. Atomic watches and clocks can receive the signal.

Atomic Timekeeping/Radio-Controlled

Radio signals are received both automatically and on-demand from 5 signal stations located in 4 regions across the world. Signal stations include: Fort Collins, Colorado, USA; Mainflingen, Frankfurt, Germany; Shangqiu, Henan, China; Fukushima, Japan; Kyushu, Japan. Signal stations will vary depending on the model.

Bar

Indicator of water resistance, measuring unit of static pressure. 1 bar = 10 meters

Bracelet

Usually refers to a metal watch band.

Cabochon

A term used to indicate a smooth round or oval convex shaped polished gemstone. Used with watches to describe a stone set crown. This may be of natural or man-made materials.

Calendar

A calendar watch may display one or more of: day of week, date, month, leap year and/or year. The watch can be analog, digital or an ana-digi.

Caliber

The type of movement in a watch. A series of numbers and letters are located on the caseback to indicate the exact identity of a watch movement.

Case and Caseback

The upper and lower outside enclosure for the watch movement, dial and hands and/or digital display, styled so as to appeal to the wearer.

Cell

A single complete unit for storage of electrical power. The power source for a watch.

Cermet

Composite material composed of ceramic and metallic materials. When joined together, the results are a product with the superior wear resistance of ceramic and the toughness and flexibility of metal.

Chronograph

A watch especially made to display elapsed time. A timing sequence can be started, stopped and reset by operating push buttons. Usually has minute and sometimes hour registers as well as seconds. Also referred to as a stopwatch.

Complication

Any function on a watch that tells something other than the time or date.

CORDURA®

CORDURA is the brand name of the nylon material that is used in many of our products, which is a versatile fabric suited for extreme use and provides endurance and rugged durability for watches exposed to extreme conditions and is resistant to cuts, tears and scuffs.

Depth Sensor

Usually an electro-mechanical device to measure how deep a diver is under water.

Dial

A thin metal or plastic plate attached to the watch movement and underneath the crystal, providing the color, time indications and other indications.

Diamond-Like Carbon (DLC)

An ion-plating treatment that provides enhanced hardness and wear resistance compared to other types of coatings. It is typically black in color.

Digital

Method of indicating time and related information on a liquid crystal or mechanical display using numbers, letters and symbols.

Diver's Watch

A specially designed watch engineered to meet the needs of divers. This type of watch has enhanced structure and sealing mechanisms to guard against the entrance of moisture.

Dual Time (Second Time Zone)

A watch complication adding display of time in two different time zones either simultaneously or on demand.

FREQUENTLY ASKED QUESTIONS

Elapsed-Time

A term applied to a rotating bezel usually marked in one minute increments. Used by divers and others to measure the passage of time from a given starting point.

Electro-Plating

The application of a thin coating of metal such as silver, gold, palladium or others applied to a metal case or bracelet through the use of electrochemical or other processes.

Ion Plating

A method by which a coating of various metals or alloys is applied to a metal case or bracelet. In the process, the molecules of metals or alloys used for plating enter the surface of the article being plated. This process allows for superior bonding and the color becomes integrated into the surface of the metal when finished.

Micron

One millionth of a meter, approximately forty millionths of an inch. A human hair is generally equivalent to 5 microns.

Mineral Crystal

A synthetic mineral crystal (MC). Three times harder and more scratch-resistant than plain glass.

Minute Repeater

A watch complication that chimes the hour, quarter hour and minutes on demand.

Mode

The operating mode of the watch where individual features may be activated through the push of a button, rotation of the crown or a combination of both. Some examples are setting mode, calendar mode, chronograph mode, etc.

Mode Indicator

A system using a row of boxes on a digital display or a sub-dial with an indicator hand to show which mode the watch is operating/displaying.

Module

A term commonly used to describe the complete timekeeping and display unit in a digital watch.

Moon Phase

A watch complication that depicts the phases of the moon as seen from Earth.

Mother-of-Pearl

A thin slice of sea shell that displays a rainbow of colors as it is exposed to light.

Movement

The engine of a watch.

N.D. Limits

The limit of safe dive time at specific depths for which No Decompression is necessary.

Perpetual Calendar

Adjusts month-end date automatically, even for leap years.

Sapphire Crystal

Watch crystal made of artificial sapphire, used primarily for watches. Sapphire crystal is extremely hard, making it highly scratch-resistant.

Satellite Timekeeping

With coverage ranging from 26 to 40 time zones, watches with Satellite technology will ensure the most accurate time.

Screw-Down Crown

A crown used on many high grade water resistant watches, including diver's watches, for a positive seal between case and crown.

Split Second Timing (SST)

Provides the ability when timing a car race or similar event with multiple competitors to record their individual split times.

Stainless Steel

An alloy of iron with chromium and some other metals combined to make a product that is resistant to rust and ordinary corrosion, making it the metal of preference for use in watch cases and bracelets.

Stem

A thin round metal pin or rod, threaded on its outer end for attaching the crown, with a groove for the setting lever and a square for the winding and/or setting pinions.

Strap

A watch band made of material such as leather, canvas, rubber, polyurethane, plastic or nylon.

Sub-Dial

A smaller dial or dials within the dial with an indicator hand for showing additional time-related information.

Super Titanium™

By treating CITIZEN's proprietary surface hardening technology, Duratect, to crafted solid titanium, we created Super Titanium $^{\text{TM}}$.

Tachymeter

An extra dial ring usually marked with numerals from 60 at the twelve position, increasing counter-clockwise around the dial up to the number 500. The tachymeter is usually found on chronograph watches. Its purpose is to give vehicles average speed in miles or kilometers per hour over a measured course of 1 mile or 1 kilometer without taking the time for calculation.

Vegan Leather

Vegan-friendly, synthetic leather strap

ECO-DRIVE RECHARGE GUIDE

LIGHT SOURCE/CHARGE TIME FROM STOP STATE

			INDOORS, OFFICE (500 LUX)	INCANDESCENT 20" (3,000 LUX)	OUTDOORS, CLOUDY (10,000 LUX)	OUTDOORS, SUNNY (100,000 LUX)		
MODEL NO.	MOVEMENT CALIBER	MAXIMUM POWER RESERVE AT FULL CHARGE	ONE DAY USE	FULL CHARGE	FULL CHARGE	FULL CHARGE	LOW CHARGE WARNING	QUICK START
A090** FD1***	8635	180 Days	4.0 Hours	150 Hours	45 Hours	13 Hours	4 Days	No
AP0***	787*	180 Days	1.0 Hour	40 Hours	12 Hours	3.5 Hours	3 Days	Yes
AP1***	8651	180 Days	4.0 Hours	120 Hours	35 Hours	12 Hours	4 Days	Yes
AP2*** AP5***	085* 087*	80 Days	2.5 Hours	34 Hours	10 Hours	3.0 Hours	5 Days	No
AP8***	E110	180 Days	1.5 Hours	125 Hours	35 Hours	11 Hours	4 Days	Yes
AR0***	G43*	180 Days	3.5 Hours	132 Hours	7.5 Hours	3.5 Hours	7 Days	Yes
AR1***	G820	180 Days	3.5 Hours	143 Hours	44 Hours	4.5 Hours	3 Days	Yes
AR3***	G870	180 Days	4.0 Hours	150 Hours	40 Hours	5.5 Hours	3 Days	No
AR50**	8826	10 Months	4.0 Hours	270 Hours	80 Hours	8.0 Hours	No	No
AT0*** AT1*** AT2*** FA2***	H50* H57*	150 Days	3.0 Hours	80 Hours	25 Hours	11 Hours	5 Days	Yes
AT4***	E65*	310 Days	4.0 Hours	210 Hours	70 Hours	35 Hours	3 Days	No
AT70**	W760	1 Year	9.5 Hours	90 Hours	30 Hours	13 Hours	10 Days	No
AT80**	H800	180 Days	4.0 Hours	130 Hours	40 Hours	30 Hours	2 Days	No
AT90** FC00**	H820	180 Days	4.0 Hours	130 Hours	40 Hours	30 Hours	2 Days	No
AU1***	J165	270 Days	4.0 Hours	190 Hours	60 Hours	11 Hours	7 Days	No
AV0***	E210	240 Days	3.5 Hours	150 Hours	45 Hours	8.5 Hours	7 Days	No
AW0***	J800	240 Days	4.0 Hours	240 Hours	120 Hours	30 Hours	5 Days	Yes
AW1*** FE6***	J810	240 Days	4.0 Hours	240 Hours	120 Hours	30 Hours	5 Days	Yes
AW702*	J850	8 Months	4.0 Hours	200 Hours	90 Hours	40 Hours	7 Days	No
BJ1***	A160	500 Days	2.0 Hours	216 Hours	64 Hours	22 Hours	20 Days	No
BJ2***	B74*	60 Days	2.0 Hours	18 Hours	5.0 Hours	2.5 Hours	2 Days	Yes
BJ6*** BW0*** EM0*** EF5*** EW0*** EW1*** EW2*** EW2***	E00* E01* E03*	180 Days	4.0 Hours	130 Hours	40 Hours	11 Hours	7 Days	Yes
BJ7*** BJ9***	B877 B876	180 Days	1.5 Hours	53 Hours	17 Hours	6.0 Hours	3 Days	Yes
	B872	180 Days	1.5 Hours	53 Hours	17 Hours	6.0 Hours	3 Days	Yes
BJ8***	B873	180 Days	3.0 Hours	105 Hours	33 Hours	9.0 Hours	3 Days	Yes
BL000*	E71*	180 Days 300 Days with Power Save	2.5 Hours	39 Hours	11 Hours	3.5 Hours	2 Days	No
through BL006*	E76*	180 Days 5 Years with Power Save	2.0 Hours	82 Hours	26 Hours	7.0 Hours	2 Days	No
BL009* BM**** EO1***	E10* E11*	180 Days	1.5 Hours	120 Hours	35 Hours	11 Hours	7 Days	Yes
BL1***	E76*	120 Days 5 Years with Power Save	2.0 Hours	82 Hours	26 Hours	7.0 Hours	2 Days	No
BL4***	F810	180 Days	5.0 Hours	230 Hours	72 Hours	24 Hours	11 Days	Yes
BL5***	E81* E82*	120 Days 270 Days with Power Save	2.0 Hours	43 Hours	12 Hours	4.0 Hours	5 Days	No
BL6*** BP4*** EP4*** EW8***	B020	150 Days	1.2 Hours	57 Hours	20 Hours	7.0 Hours	5 Days	No
EW8*** EW9*** EX1*** SY2***	B023	1 Year	1.0 Hour	75 Hours	30 Hours	7.0 Hours	14 Days	No
BL7***	E86*	165 Days 1 Year with Power Save	4.0 Hours	150 Hours	45 Hours	9.0 Hours	4 Days	No

LIGHT SOURCE/CHARGE TIME FROM STOP STATE

		INDOORS, OFFICE (500 LUX)* INCANDESCENT 20" (3,000 LUX)		OUTDOORS, CLOUDY (10,000 LUX)	OUTDOORS, SUNNY (100,000 LUX)	IY .		
MODEL NO.	MOVEMENT CALIBER	MAXIMUM POWER RESERVE AT FULL CHARGE	ONE DAY USE	FULL CHARGE	FULL CHARGE	FULL CHARGE	LOW CHARGE WARNING	QUICK START
BL8***	E87*	180 Days 1.5 Years with Power Save	4.0 Hours	150 Hours	45 Hours	8.0 Hours	3 Days	No
BL9***	G900	270 Days	4.0 Hours	180 Hours	60 Hours	9.5 Hours	5 Days	No
BN0***	E168	180 Days	4.0 Hours	120 Hours	35 Hours	11 Hours	4 Days	Yes
BN20**	J250	330 Days	4.0 Hours	280 Hours	80 Hours	35 Hours	4 Days	No
BN503*	J280 J290	11 Months	4.0 Hours	290 Hours	90 Hours	35 Hours	4 Days	No
BP5***	B033	135 Days	2.5 Hours	64 Hours	26 Hours	20 Hours	7 Days	No
EP7*** EW5***	B035	N/A	2.0 Hours	24 Hours	9 Hours	3.5 Hours	N/A	N/A
BR0***	J304	180 Days	4.0 Hours	130 Hours	40 Hours	8.0 Hours	3 Days	Yes
BT0***	E310	1 Year	4.0 Hours	230 Hours	70 Hours	35 Hours	3 Days	No
BU003*	8730	180 Days	4.0 Hours	150 Hours	90 Hours	19 Hours	3 Days	Yes
BU30**	8723		5.0 Hours	320 Hours	180 Hours	90 Hours		No
BV1***		180 Days					4 Days	
EV00**	B690	300 Days	4.0 Hours	230 Hours	70 Hours	10 Hours	7 Days	Yes
BY0***	H610	240 Days	4.0 Hours	170 Hours	60 Hours	30 Hours	6 Days	No
BZ1***	W770	18 Months ¹	7.5 Hours	200 Hours	70 Hours	30 Hours	10 Days	No
CA0***	B612	210 Days	3.5 Hours	150 Hours	45 Hours	8.5 Hours	7 Days	No
CA4***	B620	270 Days	3.5 Hours	180 Hours	60 Hours	9.0 Hours	8 Days	Yes
CB0***	H144 H145	180 Days 2 Years with Power Save	4.0 Hours	150 Hours	40 Hours	30 Hours	3 Days	No
CC10**	H909 H950	2 Years	8.0 Hours	1,360 Hours	340 Hours	150 Hours	10 Days	No
CC200*	F100	2 Years 7 Years with Power Save	7.0 Hours	1,269 Hours	290 Hours	30 Hours	5 Days	No
CC30**	F150	2 Years 7 Years with Power Save	7.5 Hours	1,040 Hours	300 Hours	30 Hours	3 Days	No
CC90**	F900	18 Months 5 Years with Power Save	8.0 Hours	770 Hours	230 Hours	25 Hours	5 Days	No
EG2*** EG7***	G620	240 Days	3.0 Hours	120 Hours	35 Hours	6.0 Hours	8 Days	No
EG3***	G670	240 Days	3.0 Hours	120 Hours				
EP0***	8512	60 Days	2.0 Hours	90 Hours	9.0 Hours	3.5 Hours	1 Day	Yes
EP6***	E068	180 Days	4.0 Hours	130 Hours	40 Hours	11 Hours	4 Days	Yes
EP8***	B232	100 Days	25 Hours	40 Hours	14 Hours	7.5 Hours	3 Days	Yes
EW7***	B110	90 Days 2 Years with Power Save	2.5 Hours	69 Hours	24 Hours	16 Hours	2 Days	No
FB1***	H504	180 Days	3.5 Hours	110 Hours	30 Hours	12 Hours	5 Days	No
FD20** BU20**	8729	180 Days	5.0 Hours	320 Hours	180 Hours	90 Hours	4 Days	No
GA1***	J015	270 Days	3.5 Hours	190 Hours	60 Hours	11 Hours	7 Days	No
JRO***	C605	70 Days	3.5 Hours	40 Hours	12 Hours	1.0 Hour	3 Days	Yes
JR3***	C65*	90 Days 4 Years with Power Save	2.5 Hours	29 Hours	9.0 Hours	5.0 Hours	1.5 Days	No
JR4***	C660	180 Days 4 Years with Power Save	2.5 Hours	42 Hours	13.5 Hours	7.0 Hours	1.5 Days	No
JV0***	U100	180 Days 1.5 Years with Power Save	3.0 Hours	150 Hours	45 Hours	9.5 Hours	1 Day	No
JY0***	U600	180 Days 1.5 Years with Power Save	3.5 Hours	150 Hours	60 Hours	20 Hours	3 Days	No
JY80**	U680	180 Days 42 Months with Power Save	4.0 Hours	200 Hours	60 Hours	20 Hours	3 Days	No
JW0***	U70*	240 Days	4.0 Hours	200 Hours	60 Hours	30 Hours	3 Days	No

Usually, overhead office light is insufficient to achieve a full charge from a completely depleted power reserve. We recommend that you use natural outdoor light, or an incandescent light source 20 from the watch (see other columns for full charge times) for charging a watch in this state. However, office lighting is sufficient for keeping your watch continually charged.

 $^{1}W770$ Movement – Bluetooth® connection time power

Low Charge Warning

WATCH CARE

WATER RESISTANCE USAGE GUIDE

There are several different levels of Water Resistant watches in the CITIZEN Watch collection. The water resistant quality of your timepiece is outlined in the chart below. Compare your timepiece against the chart to ensure use befitting its water resistant characteristics.

"WATER RESISTANT" may sometimes be abbreviated to "WATER RESIST" or "WR"

				Water-Re	lated Use	
Inc	dication		Face-washing, Sweat, Raindrops, etc.	Swimming etc.	Marine Sports (skin diving)	Scuba Diving (with air tank)
Dial	Caseback	Water Resistant Characteristics	9/8/8			
No Indication	_	Not a water resistant timepiece and must be kept away from water.	×	×	×	×
Water Resistant	Water Resistant	An ordinary water resistant timepiece and can withstand sweat, rain drops, etc. in daily use.	0	×	×	×
WR50 or Water Resistant 50	Water Resistant 5 Bar	Suitable for ordinary use and still water swimming (pool).	0	0	×	×
WR100/200 or Water Resistant 100/200	Water Resistant 10/20 Bar	For frequent use with water, it is not specially designed for scuba diving.	0	0	0	×
200M (or deeper)	Water Resistant 200M (or deeper)	For skin diving and scuba diving (aqualung diving). Usable up to the respective indicated depths.	0	0	0	0

Always be sure the crown is in the closed position next to the case. If your model features a screw-down crown, be sure it is screwed in completely. O: indicates "OK" ×: indicates "AVOID" Water Balata d Haa

DO NOT OPERATE CROWN OR PUSHERS IF THE WATCH IS WET OR WHILE IN WET ENVIRONMENTS.

TEMPERATURE CARE

Avoid temperature extremes. Exposing your watch to high temperatures, such as placing it on the dashboard of a vehicle, or use in a hot tub, may cause the watch to malfunction, shorten battery life or damage certain components. Leaving the watch in extreme cold temperatures may cause irregular timekeeping until the watch returns to normal operating temperature.

WATCH CLEANING

For maximum performance, you should wipe your watch with a clean soft cloth, regularly. Stains, water spots and accumulated dirt on the case, crystal and band that are not removed may cause premature wear. If you use your watch in the shower, or in chlorinated or salt water, you should rinse it with fresh water and thoroughly dry it afterwards.

WATCH CARE

CARE FOR METAL BRACELETS

To extend the life and maintain the good appearance of a metal watch bracelet, the following are recommended:

- Be aware that since the watch and bracelet is worn next to the skin, it collects dust and perspiration and becomes soiled if not cleaned regularly. This is particularly true of the inner parts of the links or mesh of the bracelet.
- Soil and rust, when present in a bracelet, are dissolved by perspiration and can cause staining of cuffs and irritation of the skin in some instances.
- Heavy perspiration should be wiped off the watch and bracelet with a soft dry cloth. The bracelet should be cleaned occasionally by using a
 soft brush and warm soapy water after which the soap is thoroughly rinsed with clear water and the bracelet dried completely. The foregoing
 manner of cleaning should not be done if the watch is not water-resistant but should instead be done by your jeweler.

CARE FOR STRAPS

Leather:

- Heavy perspiration, if not removed from a leather strap, can wash out the natural oils and cause the leather to become dry and deteriorate.


 Any moisture should be blotted with a soft dry cloth or paper towel and the strap allowed to dry naturally.
- · Salt residue and soil can be removed from the leather by cleaning with a dampened soft cloth and mild soap or saddle soap.
- · Occasionally, the inside surface of the strap should be cleaned by using a soft cloth dampened with alcohol.
- The strap should always be worn a little loosely (one finger space between wrist and strap) to allow air to circulate thus allowing any
 moisture to evaporate.

Rubber:

- · Rubber (polyurethane) straps should be washed frequently with mild soap and warm water using a soft brush.
- Thorough cleaning, using the same method, should especially be done after use in salt water.
- · Solvents, oils, perspiration, tanning lotion and salt can cause rubber to deteriorate if not removed.

BRACELET SIZING GUIDE


CB CUT BAND (POLYURETHANE STRAPS)

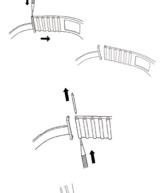

Be sure to cut along the clasp side of the ribbed

- Using a pin pusher or tweezers, press the tip of the spring bar and at the same time gently pull the band from the clasp.
- **2.** Push the spring bar out of the band and set it aside in a safe place.
- **3.** Using a medium size pair of scissors, cut the appropriate number of 'links' from the band.



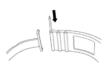





Recommended Tools

- Pin Pusher Tweezers
- Medium Size Scissors
- 4. Push the steel filler tube from the band.
- **5.** Reinsert the spring bar into the position from where the filler pin was removed.
- Press the tip of the spring bar, and at the same time, push the band back into the clasp.
- The band is now reassembled into the clasp. Repeat for the other side.

EX CENTER TAB SECURED EXPANSION

Recommended Tools

- Smooth Flat-Jawed Pliers
- Thin Blade




Planning the Adjustment

You may start your adjustment anywhere near the center of the watchband. This illustration shows the starting point as "*" with adjacent topshells and bottom boxes numbered.

Decide how many links you wish to remove. If you want to remove 3 links, remove topshells "★" and "3" and then work on bottom boxes "★" and "3".

These illustrations show the removal of three links, so the topshells and bottom boxes "★" and "3" will be worked on.

Topshell tabs and sidewall may have been distorted during removal. This distortion can detract from the appearance of the band. Use smooth flat-jawed pliers to restore flatness. Topshell will assemble more easily and look better.

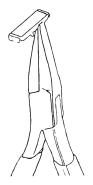



1. Expand the bottom of the band to expose the topshell tabs. Use a thin blade to straighten up all four tabs.




6. Remove loose front staple shown by arrow. Slide the separated sections back together. The rear staple may interfere unless it is moved away from the adjacent link with vour thumbnail.



2. When the tabs have been fully straightened, expand the band and the topshell will fall out. Save the topshell for step 9.



7. Replace the staple removed in step 6.

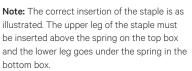



3. To shorten the bracelet, remove an additional topshell according to your plan. Bend down the bottom box end flaps diagonally below the two exposed links as shown.



8. Bend up the bottom box end flap.



4. When the end flaps have been bent fully flat, push in the direction of the arrows to separate the bracelet.



9. Restraighten tabs on loose topshell that you saved from step 2. Position topshell lightly on exposed top box.



5. The watchband is now in three sections. Save the circled extra links for future spare parts. The other sections are now ready for reassembly.


10. Expand the band as illustrated in step 1. Topshell will then sit completely on top box. Bend down tabs with thin blade to lock topshell in position.

SP SPLIT PIN ("COTTER PIN" STYLE)

Recommended Tools


- Jeweler's Pliers

Disassembly

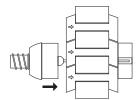

 Place the bracelet in the sizing tool, with the arrows pointing away from you. Align the pin hole on the side of the bracelet with the CITIZEN Tool sizing pin. Apply gentle pressure to start removal of the pin.




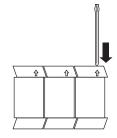


Assembly is opposite of disassembly.
 First connect the links together. Then
 reinsert the clip spring pin in the opposite
 direction of the arrows on the back side
 of the bracelet, as far as it will go using
 finger pressure.



Grasp the protruding pin with a pair of jeweler's pliers or tweezers to remove the clip spring pin.

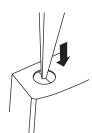

2. After the clip spring pin is inserted in the bracelet, use the flat end of a pair of tweezers to push the clip spring pin into the bracelet until the edge of the clip spring is flush with the edge of the bracelet.

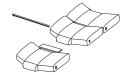

3. After the clip spring pin is removed, the links may be separated. Repeat these procedures to remove as many links as required. Be sure to balance the links removed from each side. If removing an uneven amount of links, remove more links from the 6:00 side of the bracelet. This will help to "balance" the watch on the wrist.

CS CLIP SPRING COUPLED TYPE

Recommended Tools

- Small ScrewdriverJeweler's Pliers
- Tweezers

Disassembly



1. Turn the bracelet upside down on a padded work surface. Place the pointed end of a pair of tweezers or the tip of a screwdriver in the dimple of the clip spring pin in the link. While pressing down on the bracelet with your fingers to keep it from moving, use gentle but constant pressure to push the clip spring out of the bracelet with the tweezers or screwdriver. Be sure to push in the direction of the arrow on the back of the bracelet.

Assembly




 Assembly is opposite of disassembly.
 First connect the links together. Then reinsert the clip spring pin in the opposite direction of the arrows on the back side of the bracelet, as far as it will go using finger pressure.



Grasp the protruding pin with a pair of jeweler's pliers or tweezers to remove the clip spring pin.



After the clip spring pin is inserted in the bracelet, use the flat end of a pair of tweezers to push the clip spring pin into the bracelet until the edge of the clip spring is flush with the edge of the bracelet.

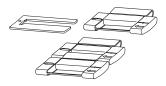


3. After the clip spring pin is removed, the links may be separated. Repeat these procedures to remove as many links as required. Be sure to balance the links removed from each side. If removing an uneven amount of links, remove more links from the 6:00 side of the bracelet. This will help to "balance" the watch on the wrist.

PC PIN AND SINGLE LOCKING TUBE (SPLIT PIPE)

Recommended Tools

- CITIZEN Sizing Tool CIT-SZTOOL
- Small Pliers
- Pin Pusher
- Jeweler's Plastic Mallet

Disassembly

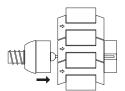

1. Place the bracelet in the CIT-SZTOOL, with the arrows on the back of the bracelet pointing away from you. Align the pin hole on the side of the bracelet with the CITIZEN tool sizing pin. Apply gentle pressure to start removal of the pin.

Note: Some bracelets with this type of pin do not have arrows on the back of the bracelet. If your bracelet does not have arrows, the pin may be removed from either side of the bracelet.



- 2. Once the pin is as far out as it will go with the CIT-SZTOOL, pull the pin out completely with a pair of pliers. Be careful to pull the pin in a straight motion.
- 3. After the pin is removed, the links will come apart. There will be a locking tube (split pipe) in the center of the bracelet. Push this out with a pin pusher or a pair of tweezers. Be sure not to damage or lose the locking tube (split pipe), otherwise the pin will not stay in the bracelet when assembled. Set the pin and locking tube (split pipe) in a safe place for assembly. Repeat these procedures to remove as many links as necessary. If removing an uneven number of links, be sure to remove the greater amount of links from the 6:00 side to balance the bracelet when worn on the wrist.

Assembly



1. Assembly is opposite of disassembly. Insert the locking tube (split pipe) in the center portion of the bracelet with a pair of tweezers.

Note: The locking tube (split pipe) may only go in one side of the center link.



- 2. Assemble the link, being careful not to tilt the bracelet as the locking tube (split pipe) may fall out. Hold the links tightly together with your fingers, and insert the pin as far as it will go with finger pressure.
- 3. While holding the bracelet together with your fingers, turn the bracelet on its side. Tap the pin into the bracelet with a plastic jeweler's mallet until the end of the pin is flush with the side of the bracelet.

SS SINGLE SCREW LINK TYPE



• 1mm Screwdriver (CTB-043-01MM)

Assembly

Tweezers




Locking tube

(split pipe)



1. Turn the watch on its side. Firmly grasp the bracelet in the area of the link you wish to remove. Insert the 1mm screwdriver tip into the slot on the screw head. While applying gentle downward pressure on the screwdriver, turn the screwdriver counter clockwise to loosen the screw. Continue to turn in a counter clockwise motion until you can feel that the screw is completely free turning.

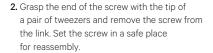




side. Insert the screw into the link either with a pair of tweezers or your fingers. The screw will only go into one side of the link.

1. Assemble the link, and turn the bracelet on its

2. With the bracelet still on its side, securely hold the bracelet between your fingers, and place the 1mm screwdriver tip into the screw slot on the end of the screw. While using gentle downward pressure on the screwdriver, turn the screw in a clockwise direction until you feel the screw stop and the top of the screw is just below the edge of the bracelet. Do not apply more than gentle pressure on the screwdriver as it could cause the screwdriver tip to slip off the screw end, which may scratch the side of the bracelet.

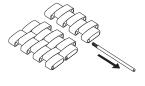

3. Once the screw is removed, the link will come apart. Repeat this for as many links as necessary. If removing an uneven number of links, remove the greater amount of links from the 6:00 side



3. Once the screw is screwed down in the link as far as it will go, give the screwdriver one final "twist" to securely tighten the screw. Be careful not to use too much force as the screw head could become damaged.

MODELS - AT40** **PCAT**

Mvmt. Cal. No. E65*

FEATURES

- · Light-Powered
- · Atomic Timekeeping
- · Perpetual Calendar
- Chronograph

BENEFITS

- · Environmentally Clean Energy Source
- · Radio-Controlled Accuracy
- · Accurate to the Year 2100
- Daily Alarm
- 1-Second Chronograph Measures up to 60 Minutes



Please view our interactive setting instructions at www.citizenwatch.com

NOTE: Under normal conditions, this timepiece will receive radio signals to automatically update the time and calendar for the 5 radio-controlled cities (zones) featured (LAX, DEN, CHI, NYC and LON.) The 'A-TM' (alternate) time zone is not radio-controlled but its time is based from the radio-controlled zones. There may be conditions in which the radio signal cannot be received. If a signal cannot be received or the 'A-TM' (alternate) time zone is chosen, the watch will operate normally, but not sync with the radio signal.

NOTE: After a complete loss of charge or an abnormal function is noticed, an ALL RESET PROCEDURE and O-POSITIONING is required. Be sure to set the time and date after performing these procedures.

RADIO RECEPTION

The timepiece will receive radio signals both automatically and on-demand. Both the time and calendar will update based on a chosen radio-controlled time zone (LAX, DEN, CHI, NYC or LON) and provided you are within that radio signal zone.

Automatic reception occurs first at 2:00 AM, 3:00 AM and then if needed, at 4:00 AM. If initial reception is successful, subsequent reception attempts (3:00 AM or 4:00 AM) will not be activated.

The "on-demand" reception feature allows the user to enter the reception mode at his/her convenience. This is helpful when changing time zones before the automatic update or if an automatic update was not successful.

NOTE: Radio updating can take up to 15 minutes to complete. During the update process, the watch must not be moved as this will prohibit a successful radio update.

For in-depth instructions on the radio reception feature, please refer to your owner's guide.

ALL RESET AND 0-POSITIONING PROCEDURE

- Pull the crown out one 'click.'
- · Rotate the crown to move the mode hand (6:00 sub dial) to CHR mode.
- · Pull the crown out an additional 'click.' The hour, 24 hour, minute and multi-function hands as well as the date will rotate to their zero positions currently stored in memory. The correct zero positions are:

Hour, minute, second and 24 hour: 12:00 (straight up) multi-function hand (2:00 sub dial): 6:00 (straight down) date: between 31 and 1, centered in date window

- · Press and hold the upper right (B) and lower right (A) buttons down simultaneously for 2 or more seconds, then release them. The hands will move back and forth and a "beep" sound will tone indicating the ALL RESET is successful
- Press and release the lower right button (A). The minute and hour hands will move slightly indicating they are active for setting.
- Rotate the crown to move the minute, hour and 24-hour hands until they point straight up (12:00). NOTE: quickly rotating the crown two 'clicks will activate rapid advancement. To stop rapid advancement, rotate the crown 1 'click
- · Press and release the lower right button (A). The second hand will move slightly indicating it is ready for setting.



- · Rotate the crown in either direction to move the second hand to the 12:00 position.
- · Press and release the lower right button (A). The multi-function hand (2:00 sub dial) will move back and forth indicating it is ready for setting
- Rotate the crown in either direction so that the multifunction hand points straight down (6:00) and the date indicates between "31" and "1" (centered in the date window.)
- Push the crown in two 'clicks' to the closed position next to the case. This completes the ALL RESET and 0-POSITIONING. You must now set the time and calendar

TO SET THE TIME AND CALENDAR

NOTE: You must first set one of the radio-controlled time zones prior to setting the 'A-TM' (alternate) time zone. even if you do not wish to use a radio-controlled time zone. Otherwise, the time displayed will not be correct for all zones.

NOTE: If you are using one of the radio-controlled time zones (LAX, DEN, CHI, NYC and LON), and you are in the signal area for that time zone, the time and date will update automatically upon receiving a successful radio update. There may be circumstances however for which you need to manually set the time and date such as after an ALL RESET and 0-POSITIONING.

- · Pull the crown out one 'click.' Rotate the crown clockwise or counterclockwise to the radio-controlled time zone shown nearest you. NOTE: The 'A-TM' (alternate) time zone is not radio-controlled.
- · Pull the crown one additional 'click' to the time setting position. The second hand will rotate to the SMT (daylight saving time) "on" or "off" setting position set in memory.
- · Press and release the upper right button (B) to move the second hand to indicate SMT "ON" or "OFF."
- · Press and release the lower right button (A). The second hand will rotate to the 12:00 position and the minute hand will move slightly indicating the minute, hour and 24-hour hands are active for setting
- Rotate the crown in either direction to set the current. time in the radio-controlled zone chosen. Pay particular attention to the 24-hour hand to ensure the correct AM or PM time is set (quickly rotating the crown two 'clicks' will activate rapid advancement).
- · Press and release the lower right button (A). The multi-function hand (2:00 sub dial) will move indicating the date is active for setting.
- · Rotate the crown one 'click' clockwise or counterclockwise to change the date (quickly rotating the crown two 'clicks' will activate rapid advancement).
- · Press and release the lower right button (A). The second hand will rotate to the current month of year and leap year position set in memory.
- · Rotate the crown clockwise to set the current month of year and leap year as outlined in the graphic below:



- Press and release the lower right button (A). The multi-function hand (2:00 sub dial) will rotate to the current day of week set in memory.
- Rotate the crown clockwise or counterclockwise to set the correct day of week.
- · Push the crown in two 'clicks' to the closed position next to the case. This completes setting the time and calendar

TO SET THE ALTERNATE TIME ZONE

NOTE: One of the radio-controlled time zones must be set prior to setting the alternate time zones.

- · Pull the crown out one 'click.' Rotate the crown clockwise or counterclockwise until the mode hand (6:00 sub dial) points to "A-TM." The hands will rotate to the current "alternate time" set in memory.
- Pull the crown out one additional 'click' to the time setting position. The second hand will rotate to the SMT (daylight saving time) "on" or "off" setting position set in memory and the minute hand will move back and forth slightly.
- · Press and release the upper right button (B) to move the second hand to indicate SMT (daylight saving time) "ON" or "OFF."
- Rotate the crown clockwise to advance or counterclockwise to decrement the time in one
- Press and release the lower right button (A) to advance the minutes in 15 minute increments.
- · Push the crown in two "clicks." This completes setting the alternate time zone

TO INITIATE ON DEMAND RECEPTION

There may be times when you need to initiate radio reception rather than waiting for the automatic

Be sure the mode hand (6:00 sub dial) is pointing to one of the radio-controlled cities (LAX, DEN, CHI, NYC or LON) and you are within that same radio signal reception region.

Press and hold the lower right button (A) for approximately 2 seconds and release. The second hand will rotate to the "RX" position.

Place the watch on a stable surface where it will not be disturbed during the update process. The update process can take up to 15 minutes to complete, depending on signal strength.

After the update process is complete (successful or failed), the watch will return to normal operation.

If you are having difficulty receiving radio reception and are in one of the radio-controlled zones featured on this timepiece, try a different location such as by a window that is facing your nearest radio transmission tower (as indicated in your instruction manual).

MODELS - AT80** WORLD CHRONOGRAPH A•T


Mvmt. Cal. No. H80*

FEATURES

- Light-Powered
- · Atomic Timekeeping
- · World Time
- Perpetual Calendar
- · Chronograph
- · Power Reserve Indicator

BENEFITS

- · Environmentally Clean Energy Source
- Radio-Controlled Accuracy
- · Time Adjustment in 26 Time Zones
- · Accurate to the Year 2100
- 1/20-Second Chronograph Measures up to 60 Minutes
- · Displays Remaining Charge

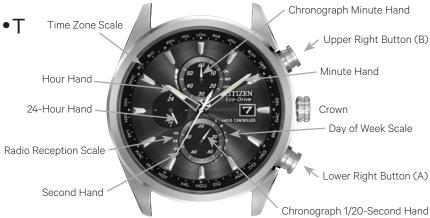



Please view our interactive setting instructions at www.citizenwatch.com

NOTE: Under normal conditions, this watch will receive radio signals to automatically update the time and calendar. There may be conditions in which the radio signal cannot be received. If a signal cannot be received, the watch will operate normally, but not sync with the radio signal.

NOTE: After a complete loss of charge or an abnormal display or function is noticed, an ALL RESET and O-POSITIONING PROCEDURE must be followed. Be sure to set the time and date after performing these procedures.

RADIO RECEPTION

The watch will receive radio signals both automatically and on-demand. Both the time and calendar will update based on the current time zone.

Automatic reception occurs first at 2:00 AM and 3:00 AM. If the 2:00 AM reception is successful, the 3:00 AM reception attempt will not occur.

The "on-demand" feature allows the user to activate radio reception manually. However, depending on the time of day, weather, radio interference, etc., the on-demand feature may not result in a successful radio signal update and the watch may have to be manually set, such as when changing radio signal zones.

NOTE: Based on signal strength, it can take from 2 to 30 minutes to complete the radio reception update process. During the update process, the watch must not be moved otherwise the transmission signal may be interrupted resulting in an unsuccessful time/calendar update.

For in-depth instructions on the radio reception feature, please refer to your owner's guide.

ALL RESET AND 0-POSITIONING PROCEDURE

- · Pull the crown out two 'clicks.'
- Press and hold the upper right (B) and lower right (A) buttons simultaneously for 4 seconds, then release them. The hands and date will move back and forth to indicate the ALL RESET is successful.
- Rotate the crown in either direction so the chronograph 1/20-second indicator (6:00 sub dial) is pointing to '00' (straight up).
- Press and release the upper right button (B). The second and minute hands will rotate counterclockwise to show a clear view of the 12:00 sub dial. The chronograph minute hand (12:00 sub dial) will then move slightly indicating the chronograph minute hand and date of month may be set.
- Rotate the crown clockwise or counterclockwise so that the date is centered between 31 and 1, and the chronograph minute hand (12:00 sub dial) is pointing to '60' (straight up).

• Press and release the upper right button (B). The minute and hour hands will move slightly.

Rotate the crown clockwise or counterclockwise to move the minute and hour hands to the 12:00 position, and the 24-hour hand (9:00 sub dial) to '24' NOTE: The 24-hour hand moves in conjunction with the hour and minute hands.

• Push the crown in two 'clicks.' You must now set the time and perpetual calendar.

TO SET THE TIME AND PERPETUAL CALENDAR

NOTE: After receiving a radio signal, the time and date will automatically set. There may be circumstances however for which you need to manually set the time and date such as after an ALL RESET and 0-POSITIONING.

- · Pull the crown out one 'click.'
- Rotate the crown clockwise or counterclockwise until the second hand indicates the time zone nearest your current location. The hour, minute and 24-hour hands will rotate to the current time set in memory for the chosen time zone.
- Press and release the upper right button (B) to move the chronograph minute hand (12:00 sub dial) to indicate daylight saving time ON or OFF.
- Press and hold the upper right button (B) for two seconds then release. The second hand will rotate to the 6:00 position and the chronograph minute hand (12:00 sub dial) will rotate to '60.'
- Pull the crown out one additional 'click' to the time setting position. The second hand will rotate to the 12:00 position, and the hour and minute hands will move slightly indicating the time may be set.
- Rotate the crown to set the correct time for the chosen time zone. Be sure to pay attention to the 24-hour hand (9:00 sub dial) to ensure the proper AM or PM time is set.
- Press and release the upper right button (B). The chronograph minute hand (12:00 position) will rotate slightly indicating the date of month may be set.

Rotate the crown clockwise or counterclockwise to set the current date of month. **NOTE:** The chronograph minute hand (12:00 sub dial) rotates 5 times for each change of date.

- Press and release the upper right button (B). The chronograph 1/20-second hand (6:00 sub dial) will rotate slightly indicating the current day of week may be set
- Rotate the crown clockwise to set the current day of week.
- Press and release the upper right button (B). The second hand will rotate slightly indicating the leap year may be set.

 Rotate the crown to set the current month and leap year. Each hour indice represents the month of year, while each hour indice and the following 3 minute indices represents the leap year.

Month of Year December October October September August April

eap Year Setting



 Push the crown in two 'clicks'. This completes setting the time and calendar.

Mav

TO CHANGE TIME ZONES

July

- Pull the crown out one 'click'. Rotate the crown clockwise or counterclockwise until the second hand indicates the time zone nearest your current location.
- Press and release the upper right button (B) to turn daylight saving time ON or OFF.
- Push the crown in one 'click.' This completes changing time zones.

TO USE THE 60 MINUTE CHRONOGRAPH

NOTE: After 30 seconds of timing, the chronograph 1/20-second hand will stop. Measurement will continue in memory and be reflected when the chronograph is stopped.

- Press and release the upper right button (B) to start the chronograph.
- Press and release the upper right button (B) to stop the chronograph.
- Press and release the lower right button (A) to reset the chronograph.
- To exit chronograph mode, press and release lower right button (A). The watch will resume normal operation.

For further instructions and additional features of the World Chronograph $A \bullet T$, please refer to your owner's manual or the technical support section on our website at www.citizenwatch.com.

MODELS - AT90** WORLD TIME A • T

Mvmt. Cal. No. H82*

FFATURES

- · Light-Powered
- Atomic Timekeeping
- · World Time
- · Perpetual Calendar
- · Power Reserve Indicator
- Dual Time
- Alarm

BENEFITS

- · Environmentally Clean **Energy Source**
- · Radio-Controlled Accuracy
- · Time Adjustment in 26 Time Zones
- · Accurate to the Year 2100
- · Displays Remaining Charge
- · Second Time Zone
- Daily Alarm



Please view our interactive setting instructions at www.citizenwatch.com

NOTE: Under normal conditions, this watch will receive radio signals to automatically update the time and calendar. There may be conditions in which the radio signal cannot be received. If a signal cannot be received, the watch will operate normally, but not sync with the radio signal.

NOTE: After a complete loss of charge or an abnormal display or function is noticed, an ALL RESET and O-POSITIONING PROCEDURE must be followed. Be sure to set the time and date after performing these procedures.

RADIO RECEPTION

The watch will receive radio signals both automatically and on-demand. Both the primary (home) time and calendar will be based on the current time zone chosen within the radio signal reception area.

Automatic reception occurs first at 2:00 AM and 3:00 AM. If the 2:00 AM reception is successful, the 3:00 AM reception attempt will not occur.

The "on-demand" feature allows the user to activate radio reception manually. However, depending on the time of day, weather, radio interference, etc., the ondemand feature may not result in a successful radio signal update and the watch may have to be manually set, such as when changing radio signal zones.

NOTE: Based on signal strength, it can take from 2 to 30 minutes to complete the radio reception update process. During the update process, the watch must not be moved otherwise the transmission signal may be interrupted resulting in an unsuccessful time/ calendar update

For in-depth instructions on the radio reception feature, please refer to your owner's guide.

ALL RESET AND 0-POSITIONING PROCEDURE

- · Pull the crown out two 'clicks.'
- Simultaneously press and hold the upper right (B) and lower right (A) buttons for 4 seconds, then release. (Following a "beep" tone, the hands and date will move back and forth, indicating a successful ALL RESET)
- · Rotate the crown in either direction so the dual time hour and minute hands (6:00 sub dial) are pointing to '24' (straight up).
- Press and release the upper right button (B). The function hand (12:00 sub dial) will then move slightly indicating the function hand and date of month may be set.

NOTE: Depending on the position of the primary time hour and minute hands, the primary time second hour and minute hands may rotate to show a clear view of

- · Rotate the crown clockwise or counterclockwise so that the date is centered between 31 and 1, and the function hand (12:00 sub dial) is pointing to Sunday.
- · Press and release the upper right button (B). The primary time minute and hour hands will move slightly.
- · Rotate the crown so that the primary time hour and minute hands are pointing to the 12:00 position (straight up).
- · Press and release the upper right button (B). The second hand will move slightly.



Charge Level/

Time Zone Scale

Day of Week Scale

Primary Time

24-Hour Hand

Second Hand

Hour Hand

· Push the crown in two 'clicks.' You must now set the primary time and perpetual calendar.

TO SET THE PRIMARY (HOME) TIME AND PERPETUAL CALENDAR

NOTE: After receiving a radio signal, the primary (home) time and date will be automatically set. The secondary (dual time) is based off the primary (home) time.

There may be circumstances for which you need to manually set the primary (home) time and date, such as after an ALL RESET and 0-POSITIONING.

- · Pull the crown out one 'click'.
- Rotate the crown clockwise or counterclockwise until the second hand indicates the time zone nearest your current location. The primary time hour, minute and 24-hour hands will rotate to the current time set in memory for the chosen time zone.
- · Press and release the upper right button to turn daylight saving time 'ON' (SMT) or 'OFF' (STD) as indicated by the function hand (12:00 sub dial).
- Press and hold the lower right button (A) for two seconds to set daylight saving time to automatic updating () or manual updating ().
- Press and hold the upper right button (B) for two seconds then release. The second hand will rotate to the 6:00 position.
- · Pull the crown out one additional 'click' to the time setting position. The second and function hands will rotate to the 12:00 position and the primary time hour and minute hands will move slightly indicating the time may be set.
- · Rotate the crown to set the correct time for the chosen time zone. Be sure to pay attention to the 24-hour hand (9:00 sub dial) to ensure the proper AM or PM time is set.
- · Press and release the upper right button (B). The function hand (12:00 position) will rotate slightly indicating the date of month may be set.
- Rotate the crown clockwise or counterclockwise to set the current date of month. NOTE: The function hand (12:00 sub dial) rotates 5 times for each change of date.
- Press and release the upper right button (B). The function hand (12:00 sub dial) will rotate slightly indicating the current day of week may be set.
- · Rotate the crown clockwise to set the current day
- · Press and release the upper right button (B). The second hand will rotate slightly indicating the month and leap year may be set. Referring to the graphic below, rotate the crown to set the current month and leap year.

Month of Year

December

Leap Year Setting



· Press and release the upper right button (B). Rotate the crown clockwise to set the current minute.

Function Hand

Primary Time Minute Hand

Crown

Secondary (Dual) Time/Alarm

Hour Hand (24-Hour Format)

-Upper Right Button (B)

Secondary (Dual) Time/

Alarm Minute Hand

Lower Right Button (A)

• Push the crown in two 'clicks'. This completes setting the time and calendar.

TO CHECK THE ACTIVE PRIMARY AND SECONDARY (DUAL TIME) ZONES

- With the crown in the closed position next to the case, press and release the upper right button (B). The primary (home) time zone will be displayed
- · Press and release the upper right button (B). The secondary (dual) time zone will be displayed
- · Press and release the upper right button (B) to resume normal operation.

TO CHANGE PRIMARY (HOME) TIME ZONE

- · Pull the crown out one 'click'. The second hand will rotate to indicate the current primary (home) time zone and the function hand (12:00 sub dial) will rotate to indicate the current daylight saving.
- · Rotate the crown to change time zones.
- · If needed, press and release the upper right button (B) to change the daylight saving time setting to 'ON' (SMT) or 'OFF' (STD) as indicated by the function hand (12:00 sub dial).
- · Press and hold the lower right button (A) for two seconds to set daylight saving time to automatic updating (\blacksquare) or manual updating (\blacksquare).
- · Push the crown in one click. This completes changing primary (home) time zones.

TO CHANGE SECONDARY (DUAL) TIME ZONE

NOTE: The secondary (dual) time zone is based on the time set for the primary (home) time zone.

NOTE: The secondary (dual) time (6:00 sub dial) is displayed in a 24-hour format.

- Pull the crown out one 'click'. The second hand will rotate to indicate the current primary (home) time zone and the function hand will rotate to indicate the current daylight saving time setting.
- Press and release the lower right button (A). The secondary (dual) time hands will rotate indicating the secondary (dual) time zone can be changed.
- · Rotate the crown to move the second hand to reflect the desired secondary (dual) time zone.
- · If needed, press and release the upper right button (B) to change the daylight saving time setting to 'ON' (SMT) or 'OFF' (STD) as indicated by the function hand (12:00 sub dial).
- Press and hold the lower right button (A) for two seconds to set daylight saving time to automatic updating (\blacksquare) or manual updating (\square).
- · Push the crown in one 'click'. This completes changing the secondary (dual) time zone.

For instructions on using additional features of the World Time A•T please refer to the full instruction manual or the technical support section on our website at www.citizenwatch.com.

MODELS - AV*** CALIBRE 2100 SERIES


Mvmt. Cal. No. E210

FEATURES

- · Light-Powered
- · Rechargeable Battery
- 12-Hour Chronograph
- Alarm
- Power-Reserve Meter

BENEFITS

- · Environmentally Clean Energy Source
- · No Battery Changes
- 1/5-Second Sweep Hand
- · Sounds at Set Time Every 12 Hours
- Indicate Charge Level of Energy Cell

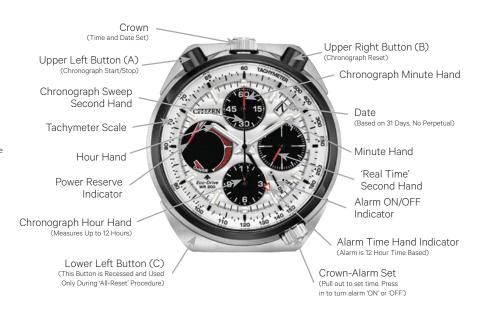



Please view our interactive setting instructions at www.citizenwatch.com

IMPORTANT NOTE: After a complete loss of power, a sharp knock, static electricity or magnetism, you may find your watch is not operating correctly. If this occurs, you will need to fully recharge your watch and perform the ALL RESET procedure as outlined below.

NOTE: Your watch may feature a screw down crown. If so, unscrew the crown to release it from the case before performing the ALL RESET procedure, setting the time or calender. Be sure to screw the crown into the case after completing any of these procedures.

ALL RESET PROCEDURE

- Your watch may feature a screw down crown at the 12:00 position. If so, unscrew the crown to release it from the case.
- When the second hand reaches the 12:00 position, pull the 12:00 positioned crown out two 'clicks'.
- Simultaneously press and hold the lower left and upper right buttons for two seconds and release.
 NOTE: The lower left button is recessed into the case and will require a narrow object such as a wooden tooth pick.
- The alarm tone will sound and the recharge indicator hand will move to level 3 to indicate the ALL RESET procedure is complete.
- Push the 12:00 positioned crown in two 'clicks' to the closed position next to the case. The charge level will move back and forth and the real time second hand will start to move in one second increments. NOTE: If your model features a screw down crown, be sure to screw the crown into the case.

NO SET THE TIME

- When the 'real time' second hand reaches the 12:00 position, pull the 12:00 positioned crown out two 'clicks'.
- Rotate the 12:00 positioned crown clockwise until you see the date start to charge. Use this time shown as a night time reference and continue to rotate the crown until your current time is shown.
 This will ensure the date changes at "night" rather than during the "day".
- Push the 12:00 positioned crown in two 'clicks' to the closed position.

TO SET THE CALENDAR

NOTE: The calendar is based on a 31-day month and therefore must be corrected for each month having less than 31 days.

- · Pull the 12:00 positioned crown out one 'click.'
- Rotate the 12:00 positioned crown counterclockwise until the correct date is shown.
- Push the 12:00 positioned crown in one 'click' to the closed position.

TO SET THE ALARM

When activated (turned on) the alarm will sound at the set time once every 12-hours for approximately 20 seconds. The alarm accuracy may have a variance of 3 to 5 minutes before or after the set time.

- Pull the 4:00 positioned crown out one 'click'.
- Rotate the 4:00 positioned crown clockwise to move the alarm indicator hand 1/2 hour past the desired set time.
- Rotate the 4:00 positioned crown counterclockwise to the desired set time.
- Push the 4:00 positioned crown in one 'click' to the closed position.

TO ACTIVATE (TURN ON) OR DEACTIVATE (TURN OFF) THE ALARM.

- With the 4:00 positioned crown in the closed position, press and release the crown to move the alarm indicator hand to 'on' or 'off'.
- When the alarm sounds, press and release the 4:00 positioned crown to move the indicator hand to the 'off' position. If the alarm is allowed the ring without manually turning the alarm to 'off', it will sound in another 12 hours.

NOTE: While the 4:00 positioned crown requires a firm push to turn the alarm on or off, it does not require the effort the chronograph stop/start button requires (upper left button).

TO SET THE 12-HOUR CHRONOGRAPH

NOTE: When chronograph timing has reached 12-hours, the chronograph will stop. If this happens you will need to press and release the upper right button to reset the chronograph before commencing new timing.

- Firmly press and release the upper left button to start the chronograph. The chronograph sweep second hand will start to move in 1/5 second increments.
- Firmly press and release the upper left button to stop the chronograph.
- Firmly press and release the upper right button to reset the chronograph.

POWER RESERVE INDICATOR

This watch features a power reserve indicator to give the user an approximate charge level of the energy cell. The indicator will "jump" levels as the watch is charged or energy is depleted. Approximate charge level indications are shown in the graphics below.

Level: 3



When Power Reserve indicator hand is in this zone, there is approximately 7 to 8 months power reserve.

Level: 2



When Power Reserve indicator hand is in this zone, there is approximately 5 to 7 months power reserve.

Level: 1



When Power Reserve indicator hand is in this zone, there is approximately 1 to 5 months power reserve.

Level: CHARGE



When Power Reserve indicator hand is in this zone, there is approximately 1 to 7 days power reserve.

For use and setting of additional features such as the alarm, timer and race modes, please refer to the full instruction manual or the technical support section of our website at www.citizenwatch.com.

MODELS - BL*** PERPETUAL CALENDAR

Mvmt. Cal. No. E71* and No. E76*

Recessed Push Button Crown Crown

FEATURES

- · Light Powered
- · Rechargeable Battery
- · Perpetual Calendar
- Independent Hour Adjustment

BENEFITS

- · Environmentally Clean Energy Source
- · No Battery Changes
- Programmed to Year 2100
- Quick and Accurate Time Zone Change

January:



Please view our interactive setting instructions @ www.citizenwatch.com

IMPORTANT NOTE: If the watch reaches a low or no charge state, or abnormal function is noted, please follow the ALL RESET PROCEDURE and BASE POSITION ADJUSTMENT prior to setting the actual time and date. Time and Calendar setting is done electronically by turning the crown.

ALL RESET PROCEDURE

 Pull the crown out two 'clicks', and press in recessed button (on the side of the case at the 2:00 position) for 2 to 3 seconds and release. The hour, minute, and second hands will move, then stop. ALL REST PROCEDURE is now complete and BASE POSITION ADJUSTMENT can be made.

BASE POSITION ADJUSTMENT

- After the ALL RESET PROCEDURE, with the crown still pulled out two 'clicks', turn the crown and move the hour and minute hands to the 12:00 position.
- Press the crown in and pull it out one 'click' and then turn the crown clockwise and move the second hand to the zero mark. Turn the crown counterclockwise quickly two or three 'clicks' and Date will change automatically every 5 seconds, until the crown is turned one 'click' in either direction to stop its advance. Move the Date to the number 1. BASE POSITION ADJUSTMENT is now completed.
- Press the crown in and wait for the second hand to move in two second steps (signaling memory is set). Proceed with the Time and Calendar setting procedures.

TO SET THE TIME


- The CITIZEN Eco-Drive perpetual calendar watch is preset at the factory, but because it has crossed time zones and the international date line, you will probably need to set it once to be set for life. Just follow these simple instructions.
- Pull the crown out to the first 'click'. The second hand will move to the month/leap year position that has been previously set. Make sure that it is set to the correct month/leap year as follows:

REGARDING THE MONTH

February:	Between 2:0	00 and 3:00)
December:	Between 12:	00 and 1:0	0
Year	Passages	Year	Passages
2000	Leap Year	2004	Leap Year
2001	1st Year	2005	1st Year
2002	2nd Year	2006	2nd Year
2003	3rd Year	2007	3rd Year

Between 1:00 and 2:00

If the month/leap year position needs to be adjusted, turn the crown clockwise. The second hand moves one step for each 'click'. Set the second hand to the correct month/leap year position.

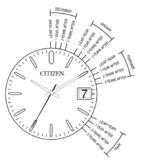

- If the date needs to be adjusted, turn the crown counterclockwise. The date advances one day forward for each 'click'
- To set the time, pull the crown out to the second 'click' and adjust the hands.
- After setting is complete, return the crown to the original position. The watch will resume normal operation.

TO READ THE CALENDAR MEMORY

 Pull the crown out one 'click'. The second hand becomes the Month/Leap Year indicator. The hour markers, 1-12 acts as Month Number Indicators. The first 3 minute markers after each hour mark are used to indicate the number of years after a I eap Year. **EXAMPLE:** If the second hand moves to the 12 marker exactly, the Month would be December of a leap year. If the second hand moves to three 'ticks' after 12, that would indicate that the memory is set to December and the Year is set to 3 years after a Leap Year.

TO SET THE CALENDAR

- Pull the crown out one 'click', the second hand will move to a Month/Leap Year position and stop.
- To change the Month/Leap Year indication, turn the crown clockwise one 'click'. The second hand moves forward one 'tic'. Set the second hand to correct indication according to the Calendar Memory guide shown to the left.
- To change the Date, turn crown one 'click' counterclockwise and the Date moves one Day forward. If the crown is turned counterclockwise quickly 2 or 3 'clicks', the date will change automatically every 5 seconds until the crown is turned 1 'click' in either direction to stop its advance. After setting, press crown in and screw down tight.
- Since the Calendar is perpetual, once it is set correctly it changes Month, Year setting and Date automatically until the year 2100.

TO CHANGE TO A DIFFERENT TIME ZONE

- Crown is unscrewed (if crown is screw lock type) but NOT pulled out during this adjustment.
- Press in and release recessed push button at the 2:00 position on the side of the case and turn the crown clockwise. The hour and minute hands will move forward one hour.
- Turn the crown counterclockwise and the hands will move backward one hour. The second hand continues moving while Time Zone is changed so the accuracy of the time is not affected.

MODELS – BL5*** PERPETUAL CHRONOGRAPH

Mvmt. Cal. No. E81*

FEATURES

- · Light-Powered
- Time
- Pernetual Calendar
- Chronograph
- Dual Time
- Alarm

BENEFITS

- · Environmentally Clean Energy Source
- Displays 12/24-Hour Systems
- Accurate to the Year 2100
- 1/20-Second Chronograph Measures up to 60 Minutes
- Second Time Zone
- Daily Alarm



Please view our interactive setting instructions at www.citizenwatch.com

NOTE: If you suspect a malfunction, first check the O-position of the hands by pulling the crown out two 'clicks'. If the hands and date do not move to their O-position, it will be necessary to set them for proper operation.

After a full recharge from complete power loss or if abnormal operation is noted, an ALL RESET PROCEDURE and 0-POSITIONING CORRECTION will be needed. The second hand on this watch moves in one second step increments to indicate that the charge level is sufficient for normal time keeping operation. If the reserve power drops to a level where more charging is needed, the second hand moves to the CHARGE position on the dial as a reminder. When the watch is sufficiently charged, the second hand will resume the single second step movement. Refer to your Instruction Manual for a complete charging guide.

ALL RESET PROCEDURE


- Turn the crown to set the Mode hand to the chronograph (CHR) mode.
- Pull the crown out two 'clicks' (0-position correction mode). Each of the hands and date moves to their respective 0-positions stored in memory and then stops.
- Press the upper right (A) and lower right (B) buttons simultaneously, then release. Following a confirmation tone, each of the hands performs a demonstration movement in the order of the function, 24-hour, hour, minute and second hands to indicate that the ALL RESET PROCEDURE is finished
- Continue with the 0-POSITIONING CORRECTION PROCEDURES.

0-POSITIONING CORRECTION OF FUNCTION HAND AND DATE

- Pull the crown out to one 'click' in the chronograph (CHR) mode to correct the function hand and date.
- Click (turn) the crown to the left to align the date.
- Clicking the crown once causes the function hand to make four revolutions and the date to be corrected by one day.
- Turning the crown rapidly ('clicking' continuously two or more times) causes the function hand to advance continuously. When stopping the function hand, 'click' the crown once to the right or left. When the function hand is not stopped manually, it stops automatically after advancing 31 days.
- The 12:00 position immediately after the date changes to the '1st' in the 0-position of the function hand. After correcting the date to the '31st' by turning the crown, press the upper right button (A) to finely correct the function hand so that the function hand is aligned at the 0-position after the date changes to the '1st'.

0-POSITIONING CORRECTION OF 24-HOUR, HOUR, MINUTE AND SECOND HANDS

- Turn the crown clockwise or counterclockwise to move the Mode hand to the Chronograph (CHR) position.
- · Pull the crown out two 'clicks'.
- Pressing the upper right button (A) causes the second hand to be corrected by one second at a time each time it is pressed. Pressing and holding the upper right button (A) down causes the second hand to advance rapidly.

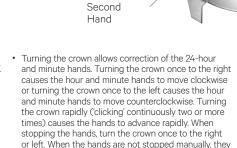

24-Hour Hand

TO SET THE TIME

 Turn the crown clockwise or counterclockwise to move the Mode hand to the time (TME) position.

stop automatically after being corrected by 12 hours.

- Pull the crown out two 'clicks'. The second hand moves to the O-position and stops. If the second hand stops at any other position, you must perform an ALL RESET PROCEDURE and O-POSITIONING CORRECTION.
- Turning the crown changes the position of the hour, minute and 24-hour hands electronically. Turning the crown clockwise moves the hands forward or counterclockwise moves the hands backward. Turning the crown quickly causes the hands to move in a continuous or rapid set manner. Turning the crown one 'click' in either direction while the hands are in the 'rapid set' mode will cause the hands to stop.
- Be sure to set time to correct AM/PM by referring to the 24-hour hand. After setting time, push the crown in to finalize time setting.

TO SET THE CALENDAR


- The calendar is set while the mode hand is in the time (TME) position.
- Pull the crown out one 'click'. The sweep second hand becomes the month indicator and moves to an hour marker (1-12) to indicate the month number.

EXAMPLE: If the sweep second hand moves to hour marker 4, it would indicate that the month is April. At the same time, the function hand moves to a position on the upper right dial to indicate whether the year is a leap year or 1, 2 or 3 years after a leap year. The 0-position of the function hand indicates a leap year. Leap years +1, +2 and +3 are indicated by the three markers following the 0-position.

- To correct the month number, press and release the lower right button (B) until the sweep second hand indicates the correct month (numeric). To correct the leap year indication, press and release the upper right button (A). To change the date, turn the crown counterclockwise one 'click' to move the date forward one day at a time. Turning the crown counterclockwise quickly will cause the date to 'rapid set' or change continuously. To stop the advance, turn the crown forward or backward one 'click'.
- Push the crown in to finalize the calendar setting. Once the calendar is set correctly and the watch is kept charged up, automatic operation of the month, date and leap year indication will continue until the year 2100.

TO USE THE CHRONOGRAPH

- Turn the crown to move the mode hand to the chronograph (CHR) mode.
- Press the upper right button (A) to start or stop the chronograph. A confirmation beep will signal when the

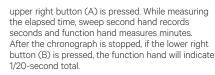

Mode Hand

Function Hand

Crown

Upper Right Button (A)

Lower Right Button (B)

- To return the chronograph hands to 12:00 after the chronograph is stopped, press and hold down the upper right button (A).
- The chronograph will measure up to a maximum of 59 minutes and 59.99 seconds in 1/20-second increments and then stop at the 0-position.

TO SET THE LOCAL TIME

- The local time (L-TM) function allows the time to be set and displayed for a different time zone other than your own.
- Turn the crown to set the mode hand to local time (L-TM) mode.
- Pull the crown out two 'clicks' to the time setting position.
- Turn the crown clockwise one 'click'. The hour, minute and 24-hour hands move forward one hour (always refer to 24-hour hand to set AM/PM correctly). Turning the crown counterclockwise one 'click' will cause the hands to move backward one hour. If while changing the time to a different time zone in the clockwise direction, 12:00 midnight is passed, date will advance one day. If the time is changed in the counter clockwise direction and 12:00 midnight is passed, the date will be corrected, but this may take 2 or 3 minutes for the change to occur.

TO USE THE ALARM

- The alarm time should be set while referring to the 24-hour clock to assure that AM/PM setting is correct. When set, it will sound for 15 seconds at the alarm set time each day. The sounding may be stopped at any time by pressing either the upper right (A) or lower right (B) buttons.
- The alarm can only be set according to the time set in the normal (TME) mode.
- Turn the crown to move the mode hand to the alarm (ALM) mode. The second hand will move to the ON or OFF position and the hour, minute and 24-hour hand will move to the previously set alarm time.
- Pull the crown out two 'clicks' to the time setting position.
 The alarm will automatically be set to the ON position.
- Set alarm time by turning the crown clockwise to move the hands forward and counterclockwise to move the hands backward. Be sure to refer to the 24-hour hand so that correct AM/PM time is set.
- While in alarm mode with the crown still pulled out, you may change alarm set to ON or OFF by pressing and releasing the upper right button (A).
- Push the crown in to finalize alarm setting.
 While the crown is in the normal position in alarm mode, if the upper right button (A) is pressed, alarm monitor tone will sound.

MODELS – BL5***
PERPETUAL CALENDAR CHRONOGRAPH

Mvmt. Cal. No. E82*

FEATURES

- · Light-Powered
- Time
- · Perpetual Calendar
- Chronograph
- Dual Time
- Alarm

BENEFITS

- Environmentally Clean Energy Source
- Displays 12/24-Hour Systems
- · Accurate to the Year 2100
- 1/20-Second Chronograph Measures up to 60 Minutes
- · Second Time Zone
- · Daily Alarm



Please view our interactive setting instructions at www.citizenwatch.com

NOTE: If you suspect a malfunction or the hands are in an incorrect position, first check the 0-position of the hands by pulling the crown out one click and rotate it to move the mode hand (6:00 sub dial) to indicate (CHR). Pull the crown out an additional 'click' to the setting position. If the hands and date do not move to the correct 0-positions (pointing straight up to 12:00 with the date at '17), it will be necessary to perform the ALL RESET and 0-POSITIONING procedures.

After a full recharge from complete power loss or if abnormal operation is noted, an ALL RESET and O-POSITIONING CORRECTION will be needed prior to setting the time and calendar.

ALL RESET AND 0-POSITIONING PROCEDURE

- Pull the crown out 1'click.' Turn the crown to set the mode hand (6:00 sub dial) to the chronograph [CHR] position.
- Pull the crown out an additional 'click' (O-position correction mode). Each of the hands and date moves to their respective O-positions stored in memory and then stop. (NOTE: this may take a few minutes to complete.)
- Simultaneously press and hold the upper right (B) and lower right (A) buttons for two seconds then release. Following a confirmation tone, the minute, chronograph second, and chronograph minute hands will move back and forth slightly indicating the ALL RESET procedure was successful.
- Press and release the upper right button (B). The minute hand will move slightly indicating the hour, minute and 24-hour hands may now be set to their 0-position.
- Rotate the crown so that the hour, minute and 24-hour hands are pointing straight up (12:00). (NOTE: the 24-hour hand moves in conjunction with the hour hand.)
- Press and release the upper right button (B). The second hand will move slightly indicating it may now be set to its 0-position. Rotate the crown to move the chronograph second hand to the 12:00 position.
- Press and release the upper right button (B). The chronograph minute hand (upper right sub dial) will move slightly indicating it and the date are active for 0-positioning.
- Rotate the crown to set date of the date of month to '31.' (Rotating the crown quickly will engage the rapid advance function. To stop the rapid advance function, rotate the crown one 'click'.)
- Continue to rotate the crown slowly until '1' is shown in the center of the date window and the chronograph minute hand (upper right sub dial) indicates 12:00.
- Push the crown in two 'clicks' to the closed position next to the case. This completes the O-positioning procedure. You must now set the time and calendar.

TO SET THE TIME AND CALENDAR

- Pull the crown out 1 'click' and rotate the crown clockwise or counterclockwise to move the mode hand (6:00 sub dial) to the time (TME) position.
- Pull the crown out one an additional 'click' (two 'clicks' out) to the time/calendar setting position.

Chronograph Second Hand
 Press and release the upper right button (B). The second hand will move to the 0-position set in

memory then stop. The minute hand will move

slightly indicating it is active for setting.

Time Second/

24-Hour Hand

Hour Hand

NOTE: If the second hand stops at any other position, you must perform an ALL RESET and 0-POSITIONING CORRECTION.

- Rotate the crown clockwise (right) to set the current time. Pay particular attention to the position of the 24-hour hand (upper left sub dial) to ensure the correct AM or PM time is set. (Rotating the crown quickly will engage the rapid advance function. To stop the rapid advance function, rotate the crown one 'click'.)
- Press and release the upper right button (B). The chronograph minute hand (upper right sub dial) will move slightly indicating the leap year designation may be set.
- Rotate the crown clockwise (right) to adjust the chronograph minute hand (upper right sub dial) to indicate the current leap year designation.



- Press and release the upper right button (B). The second hand will make a full rotation and stop at the last month of year in memory indicating the month of year may now be set.
- Rotate the crown clockwise to align the second hand to indicate the current month of the year. Each hour location will correspond to a month.



- Press and release the upper right button (B).
 The chronograph minute hand (2:00 sub dial) will make one rotation counterclockwise then return indicating the date of month may be set.
- Rotate the crown clockwise to set the current date of the month. (NOTE: the function hand (upper right sub dial) will rotate 4 revolutions for each date change.)
- Press the crown in two 'clicks' to the closed position next to the case. This completes setting the time and calendar.

TO USE THE CHRONOGRAPH

The chronograph will measure up to a maximum of 59 minutes and 59.99 seconds in 1/20-second increments and then stop at the 0-position. **NOTE:** Be sure to reset the chronograph after each use to conserve power.

 Pull the crown out one 'click' and rotate it to move the mode hand (6:00 sub dial) to the chronograph (CHR) position. The second hand will move to the 12:00 position indicating the watch is in chronograph mode. • Push the crown in one 'click' to the closed position next to the case.

Chronograph Minute/

1/20-Second Hand

Upper Right

Minute Hand

Button (B)

Crown

Lower Right

Button (A)

Mode Hand

- Press and release the upper right button (B) to start
 or stop the chronograph. A confirmation beep will
 signal when the upper right button (B) is pressed.
 While measuring the elapsed time, the chronograph
 minute hand (2:00 sub dial) records elapsed minutes
 and 1/20th of a second. After the chronograph is
 stopped, if the lower right button (A) is pressed and
 held, the chronograph minute hand will indicate the
 1/20 of a second.
- To return the chronograph hands to 12:00 after the chronograph is stopped, press and hold down the upper right button (B) for approximately 2 seconds.

TO USE THE ALARM

Once set and activated, the alarm will sound for 15 seconds at the set time every 24-hours based on the time set. It cannot be set for the travel (LTM) time.

- Pull the crown out 1 'click' and rotate the crown clockwise or counterclockwise to move the mode hand (6:00 sub dial) to the alarm (ALM) position. The hands will move to the following positions:
- Second hand: moves to the 30 second (6:00) position hour, minute and 24-hour hands: moves to indicate the last set alarm time.
- Pull the crown out an additional 'click' (two 'clicks' out) to activate the alarm setting mode.

Rotate the crown clockwise (right) to set the desired alarm time. Be sure to pay particular attention to the 24-hour hand (upper left sub dial) to ensure the correct AM or PM time is set.

- To activate the alarm, press and release the upper right button (B) to change the position of the chronograph second hand to indicate 'on' (8:30) or 'off' (7:30)
- Push the crown in two 'clicks' to the closed position next to the case. This completes the alarm setting.

TO ACTIVATE OR DEACTIVATE THE ALARM

Once the alarm time is set, you may wish to activate or deactivate the alarm.

- Pull the crown out 1 'click' and rotate the crown clockwise or counterclockwise to move the mode hand (6:00 sub dial) to the alarm (ALM) position.
- Pull the crown out an additional 'click' (two 'clicks' out) to activate the alarm setting mode.
- Press and release the upper right button (B) to change the position of the second hand to indicate 'on' (8:30) or 'off' (7:30).
- Press the crown in two 'clicks' to the closed position next to the case. This completes the alarm activation/deactivation procedure.

MODELS - BL80** **CALIBRE 8700 SERIES**

Mvmt. Cal. No. E870

FEATURES

- · Light-Powered
- Time
- Perpetual Calendar
- Alarm Dual Time

BENEFITS

- · Environmentally Clean Energy Source
- Displays 12/24-Hour Systems
- · Accurate to the Year 2100
- Daily Alarm
- Second Time Zone





Please view our interactive setting instructions at www.citizenwatch.com

NOTE: If you suspect a malfunction, first check the O-position of the hands as outlined in the O-positioning CHECK PROCEDURE. If the hands and date do not move to their respective O-positions, it will be necessary to set them for proper operation.

After a full recharge from complete power loss or if abnormal operation is noted, an ALL RESET and 0-POSITIONING CORRECTION will be needed.

The second hand on this watch moves in one second increments to indicate that the charge level is sufficient for normal time keeping operation. If it is not moving in one second increments, be sure to charge your watch fully as outlined in your Instruction Manual.

0-POSITIONING CHECK PROCEDURE

- · Pull the crown out one 'click.'
- · Turn the crown so that either tip of the mode hand is pointing to the local time mode (L-TM).
- Push the crown back in one 'click' to the closed position next to the case.
- · Press the upper right button (A) for 10 or more seconds until the hands move to the O-position stored in memory. Release the upper right button (A). The correct 0 position for each hand is as
 - Hour, minute and second hand pointing to '12:00'
 - 24-hour hand pointing to '24'
 - Function hand pointing to 'SUN'
 - Date indicating '1'

If any of the hands do not indicate their respective 0-position, it will be necessary to perform the all reset and 0-positioning correction procedure.

Press the upper right button (A) to resume normal operation in the local time mode.

ALL RESET AND 0-POSITIONING **CORRECTION PROCEDURE**

- · Pull the crown out one 'click.
- · Turn the crown so that either tip of the mode hand is pointing to the local time mode (L-TM).
- · Push the crown back in one 'click' to the closed position next to the case
- · When the hands have stopped moving, pull the crown out two 'clicks.
- Press the upper right (A) and lower right (B) buttons simultaneously for two to three seconds, then release. Following a confirmation tone, each of the hands performs a 'demonstration' in the order of the function, minute and second hands to indicate that the 'all reset' of the movement has completed.
- Press the upper right button (A). The minute hand will move to indicate the hour, minute and 24-hour hands can be set. Turn the crown clockwise or counterclockwise to set the hour and minute hand to 12:00 and the function hand to '24' (the 24-hour hand moves in conjunction with the hour hand and cannot be set independently).

Turning the crown rapidly ('clicking' continuously two or more times) causes the hands to advance continuously until the crown is again turned.

- · Press the upper right button (A) again. The function hand will move indicating that is the hand that can now be set. Turn the crown clockwise or counterclockwise so that function hand points to 'SUN' and the date is set for 1. Turning the crown rapidly ('clicking' continuously two or more times) causes the hand to advance continuously until the crown is again turned.
- Press the upper right button (A). The second hand will move indicating the second hand can now be set.
- · Turn the crown clockwise to move the second hand to the '12:00' position.
- · Push the crown in two 'clicks' to the closed position next to the case. This completes the all reset and 0-positioning correction.
- · Continue with to set the time.

TO SET THE TIME

- · Pull the crown out one 'click.'
- · Turn the crown so that either tip of the mode hand is pointing to the time mode (TME).
- Pull the crown out an additional 'click' to the time setting position. The second hand will move to the
- · Turn the crown to change the position of the hour, minute and 24-hour hands electronically. Turning the crown clockwise moves the hands forward and counterclockwise moves the hands backward Turning the crown quickly causes the hands to move in a continuous or rapid set manner. Turning the crown one 'click' in either direction while the hands are in the "rapid set" mode will cause the hands to stop.
- · Be sure to set time to the correct AM/PM by referring to the 24-hour hand. After setting time, push the crown in to finalize time setting.

TO SET THE CALENDAR

- · Pull the crown out one 'click.'
- · Turn the crown so that either tip of the mode hand is pointing to the calendar mode (CAL)
- · Pull the crown out an additional 'click' to the calendar setting position. The function hand will move to indicate the leap year set in memory. The positions are as follows:
 - 'LY'= indicates the current year is a leap year
 - '+1' indicates 1 year past a leap year
 - '+2' indicates 2 years past a leap year
 - '+3' indicates 3 years past a leap year

Turn the crown clockwise or counterclockwise to set the correct leap year position.

· Press the upper right button (A). The second hand will move to indicate the month stored in memory. Turn the crown clockwise to set the current month.

- Press the upper right button (A). The function hand will move to the middle of the day indicator indicating the date can be set. Turning the crown clockwise will advance the date, while turning the crown counterclockwise will move the date backward. Turning the crown quickly causes the hands to move in a continuous or rapid set manner. Turning the crown one 'click' in either direction while the hands are in the "rapid set" mode will cause the hands to stop. Set the date for the current date.
- Press the upper right button (A). The function hand will move to the day of the week stored in memory. Turn the crown clockwise or counterclockwise to set the current day of the week.
- Push the crown to the closed position next to the case. This completes setting the calendar.

TO SET THE ALARM

The alarm is based on a 24-hour time period and can be set to sound at the same time each day.

- · Pull the crown out one 'click.'
- Turn the crown so that either tip of the mode hand is pointing to the alarm mode (ALM). The hour, minute and 24-hour hands will move to the current alarm time set position.
- · Pull the crown out an additional 'click' to the alarm time setting position. The alarm will automatically be activated and the Function hand will move to
- · Rotate the crown either clockwise or counterclockwise to set the desired alarm time, paying close attention to the 24-hour hand to ensure the proper AM or PM alarm time is set.
- · Press the lower right button (B) to turn the alarm ON or OFF.
- · Push the crown to the closed position next to the case.

TO SET THE LOCAL TIME

The local time (L-TM) function allows the time to be set and displayed for a different time zone other than your own. It can be set in 1 hour increments only.

- · Pull the crown out one 'click.
- Turn the crown so that either tip of the mode hand is pointing to the Local Time mode (L-TM).
- · Pull the crown out an additional 'click' to the local time setting position.
- Turn the crown clockwise to advance the time by one hour, or counterclockwise to move the time back
- · Once you have the local time set, push the crown in two 'clicks' to the closed position next to the case.

MODELS - BN503* PROMASTER ALTICHRON

Mvmt. Cal. No. J29*

FEATURES

- · Light-Powered
- · Altimeter
- · Electronic Compass
- · Power Reserve Indicator

BENEFITS

- · Environmentally Clean Energy Source
- · Measures Range of -985 Feet to 32,500 Feet
- · Indicates Magnetic North
- · Displays Remaining Charge



Please view our interactive setting instructions at www.citizenwatch.com

ALL RESET AND ZERO POSITIONING OF ALTITUDE INDICATORS

After a complete discharge of energy and subsequent full recharge or a malfunction is noted it is necessary to perform an ALL RESET and ZERO POSITIONING of the altimeter hands. Following the ALL RESET and ZERO POSITIONING procedure, the time and calendar must be set.

- · Rotate the crown (4:00 position) counterclockwise to unlock the crown from the case.
- Pull the crown (4:00 position) out two 'clicks'. The altimeter 1,000 ft hand will make a full rotation and altimeter 10,000 ft hand (9:00 sub dial) will rotate to its zero position set in memory.
- · If needed, rotate the crown (4:00 position) so that the hour and minute hands are not obstructing your view of the 12:00 position.
- Simultaneously press and hold the upper left (A) and lower left (B) buttons for four seconds, then release. All three altimeter indicator hands will rotate slightly indicating a successful all reset.
- · The altimeter 25 ft hand will move to show a clear view of the 12:00 position and the altimeter 1,000 ft hand will move slightly indicating it is ready for zero positioning.
- Press and release the upper left button (A) to move altimeter 1,000 ft hand to the 12:00 position. NOTE: Pressing and holding the upper left button (A) will rapidly advance the hand.
- · Press and release the lower left button (B). The altimeter 25 ft hand will move to the 12:00 position and the altimeter 1,000 ft hand will move to provide a clear view of the 12:00 position. The altimeter 25 ft hand will move slightly indicating it is ready for zero positioning.
- Press and release the upper left button (A) to move the altimeter 25 ft hand to the 12:00 position. NOTE: Pressing and holding the upper left button (A) will rapidly advance the hand.
- Press and release the lower left button (B). The altimeter 1,000 ft hand will move to the 12:00 position and the altimeter 10,000 ft hand (9:00 sub dial) will move slightly indicating it is ready for zero positioning.
- · Press and release the upper left button (A) to move the altimeter 10,000 ft hand (9:00 sub dial) to the 6:00 position. NOTE: Pressing and holding the upper left button (A) will rapidly advance the hand.
- Push the crown (4:00 position) in two 'clicks'. The altimeter 10,000 ft hand (9:00 sub dial) will rotate to show the current power reserve level.
- · While applying gentle pressure toward the case, rotate the crown clockwise to lock it into the case.
- · You must now set the time and calendar

TO SET THE TIME AND CALENDAR

NOTE: The calendar feature is based on a 31 day month and must be manually adjusted for months shorter than 31 days

NOTE: Do not adjust the calendar when the time shown is between 10:00 PM to 12:00 AM. The calendar gearing is engaging and manual adjustment may result in damaging sensitive components.

- Rotate the crown (4:00 position) counterclockwise to unlock the crown from the case.
- · When the second hand reaches the 12:00 position,

Second Hand pull the crown (4:00 position) out two 'clicks'. The altimeter 1,000 ft hand will make a full rotation and

altimeter 10,000 ft hand (9:00 sub dial) will rotate to

Hour Hand

Atmospheric

Level Hand

- Rotate the crown (4:00 position) counterclockwise until you see the date start to change
- Using the time shown as night time reference, continue rotating the crown (4:00 position) counterclockwise to set the current time. Setting in this manner will ensure the correct 'AM' or 'PM' time is set.
- Push the crown (4:00 position) in one 'click'.

its zero position set in memory.

- Rotate the crown (4:00 position) clockwise to set the current date.
- · For most accurate setting, in accordance with a time signal, push the crown (4:00 position) in one 'click' While applying gentle pressure toward the case, rotate the crown clockwise to lock it into the case.

TO CALIBRATE THE ALTIMETER

NOTE: Altimeter accuracy is affected by weather, location, temperature, etc. For accurate altimeter measurement, you must calibrate it for each use. You may find your current altitude on certain maps, the internet or other measurement instruments.

- Press and release the lower left button (B). The altimeter 25 ft hand will move back and forth slightly and the altimeter 10,000 ft hand will rotate to the 6:00 position.
- After a brief period of atmospheric pressure measurement, the altimeter hands will rotate to reflect the current measured altitude.
- If altitude indication is incorrect and for more accurate altitude measurement, you must calibrate the altimeter to your current location
- Press and hold the lower left button (B) for approximately three seconds, then release. The 10,000 ft hand will rotate to '+' indication.
- · If your current altitude is lower than shown, press and release the lower left button (B) to change to the '-' indication. If your current altitude is higher than shown, press and release the lower left button (B) to change to the '+' indication.
- Press and release the upper left button (A) to rotate the altimeter 25 ft and 1,000 ft hands. The 25 ft hand should be set to the nearest 25 ft increment indication. Ex: Current altitude is 89 ft. Position the altimeter 25 ft hand to indicate '100'.
- If you need to clear calibration, simultaneously press and release both the upper left (A) and lower left (B) buttons. Return to the fourth step.
- Press and hold the lower left button (B) for approximately three seconds, then release. This completes altimeter calibration.
- Press and release the lower left button (B) to exit the altimeter function.

TO USE THE ALTIMETER

NOTE: Altimeter measurements are intended as approximate indications. Please refer to the full instruction booklet for complete information

NOTE: To ensure there is sufficient power for altimeter and compass functions, be sure the power reserve indicator is at level 2 or higher.



NOTE: Altitude cannot be measured while in a pressurized aircraft.

NOTE: Atmospheric pressure measurements take place continuously during the first five minutes of altimeter operation. After five minutes, atmospheric pressure measurement is taken once every three minutes.

- Press and release the lower left button (B). The altimeter 25 ft hand will move back and forth slightly and the altimeter 10,000 ft hand will rotate to the 6:00 position.
- · After a brief period of atmospheric pressure measurement, the altimeter hands will rotate to reflect the current measured altitude measurement.
- · During altimeter operation, you may engage the compass feature for approximately 30 seconds. Be sure you have calibrated the compass to ensure accurate indication.
- · With the watch in a flat and level position, press and release the upper left button (A) to start the compass function. The altimeter 1,000 ft hand will rotate to indicate approximate magnetic north.
- · After approximately 30 seconds, the altimeter 1,000 ft hand will return to altimeter function.
- Press and release the lower left button (B) to stop the altimeter function. The altimeter 25 ft and 1.000 ft hands will return to the 12:00 position. The altimeter 10.000 ft hand will rotate to reflect the current power reserve level. NOTE: The altimeter function will stop automatically after 12 hours.

TO USE THE COMPASS

NOTE: The compass function indicates magnetic north, not true north. To determine true north, the declination must be set as described in the full instruction manual

NOTE: The compass must be calibrated prior to use to ensure accurate indication. Refer to the full instruction booklet for compass calibration procedures.

NOTE: Areas that may emit strong magnetic fields such as high tension lines, airports, vehicles, or electronic equipment such as a cell phone or computer, the compass function may not correctly indicate magnetic north.

NOTE: During compass operation, be sure to keep the watch as still as possible and in a 'flat' (level) position.

- With the watch in a flat (level) position, press and release the upper left button (A). The compass hand will rotate to show the approximate magnetic north direction. You may now determine approximate compass directions. NOTE: Compass functions will stop automatically after 30 seconds.
- Unscrew the scale rotation crown (2:00 position). Rotate the crown so that the north indication of the scale lines up with the compass hand.
- Press and release the upper left button (A) to stop the compass function. Using gentle pressure towards the case, screw the scale rotation crown (2:00 position) into the case.

For complete instructions on using the Altimeter, Compass and other settings of the Promaster Altichron, please refer to the full instruction manual or the support section of our website at www.citizenwatch.com

MODELS - BX10** OR FC800* WORLD TIME PERPETUAL

Mvmt. Cal. No. E784

FEATURES

BENEFITS

- · Light-Powered
- · Environmentally Clean Energy Source
- World Time
- · Time Adjustment in 26 Time Zones
- Perpetual Calendar
- · Accurate to the Year 2100





Please view our interactive setting instructions at www.citizenwatch.com

NOTE: If the watch reaches a low or no charge state, or abnormal function is noted, please follow the ALL REST PROCEDURE and BASE POSITION ADJUSTMENT prior to setting the actual time and date.

Time and Calendar settings are done electronically by turning the crown.

ALL RESET PROCEDURE

- · Pull the crown out two 'clicks'. The hour, minute, and second hands will move to the current reference positions stored in memory, then stop.
- · Press in the recessed button (on the side of the case at 2:00 position) for 2 to 3 seconds and release. ALL RESET PROCEDURE is now complete and BASE POSITION ADJUSTMENT can be made.

BASE POSITION ADJUSTMENT

After the ALL RESET PROCEDURE, with the crown still pulled out two 'clicks', turn the crown and move the hour and minute hands to the 12:00 position.

NOTE: If you rotate the crown quickly a few times, the hands will move continuously. To stop the rapid movement, rotate the crown.

· Press the crown in one 'click' and then turn the crown clockwise and move the second hand to the zero mark.

NOTE: If you rotate the crown quickly a few times, the second hand will move continuously. To stop the rapid movement, rotate the crown

Turn the crown counterclockwise adjust the Date. Move the Date to the number 1. Rotating the crown while pressing and holding the recessed button will make fine position adjustments.

NOTE: Turn the crown quickly two or three 'clicks' and the Date will change automatically every 5 seconds. Turn the crown in one 'click' in either direction to stop its advance.

· Press the crown in and wait for the second hand to move in two second steps (signaling memory is set). Proceed with the Time and Calendar setting

BASE POSITION ADJUSTMENT is now completed.

TO READ THE CALENDAR MEMORY

The CITIZEN Eco-Drive perpetual calendar watch is preset at the factory, but because it has crossed time zones and the international date line, you will probably need to set it onces to be set for life. Just follow these simple instructions.

· Press and hold the upper right recessed button for 2 seconds or until the second hand makes a full rotation. The second hand will then indicate the current year and month in setting

The hour markers, 1-12 acts as Month Number indicators. The first 3 minute markets after each hour mark are used to indicate the number of years after a Leap Year.

EXAMPLE: If the second hand moves to the 12 marker exactly, the Month would be December of a leap year. If the second hand moves to the three 'ticks' after the 12, that would indicate that the memory is set to December and the Year is set to 3 years after a Leap Year.

REGARDING THE MONTH

January: Between 1:00 and 2:00 Between 2:00 and 3:00 February: December: Between 12:00 and 1:00

Year	Passages	Year	Passages
2000	Leap Year	2004	Leap Year
2001	1st Year	2005	1st Year
2002	2nd Year	2006	2nd Year
2003	3rd Year	2007	3rd Year



TO SET THE CALENDAR

· Press the upper right recessed button while the crown is in the closed position.

NOTE: Execute the next step within 10 seconds.

· Press and hold the upper right recessed button for 2 seconds or until the second hand makes a full rotation. The second hand will then indicate the current year and month in setting

NOTE: Execute the next step within 30 seconds.

· Rotate the crown clockwise to adjust the year and month setting.

NOTE: If you rotate the crown clockwise quickly a few times, the second hand will move continuously. To stop the rapid movement, rotate the crown.

To change the Date, turn the crown one 'click' counterclockwise and the Date moves one Day forward.

NOTE: If the crown is turned counterclockwise quickly two or three 'clicks' and the Date will change automatically every 5 seconds. Turn the crown in one 'click' in either direction to stop its advance.

- · Press the upper right recessed button when finished.
- · Since the Calendar is perpetual, once it is set correctly, it changes Month, Year setting, and Date automatically until the year 2100.

TO SET THE DST (DAYLIGHT SAVING TIME)

· Press the upper right recessed button while the crown is in the closed position.

NOTE: Execute the next step within 10 seconds.

- Rotate the crown to switch the summer time (DST) setting (SMT ON/OFF). The hour and minute hands will start moving as the setting is changed.
- · Press the upper right recessed button when finished.

TO SET THE TIME

- To set the time, pull the crown out two 'clicks'. The second hand points to 12:00 and stops.
- · Rotate the crown to set the hour and minute

NOTE: If you rotate the crown quickly a few times, the hands will move continuously. To stop the rapid movement, rotate the crown.

- Change the hour until you see the date window change. This indicates AM time. Use this indication to determine the correct time.
- · After setting is complete, push in the crown two 'clicks'. The watch will resume normal operation.

TO CHANGE TO A DIFFERENT TIME ZONE

- · Pull the crown out one 'click'. The second moves to point to the time zone currently set.
- · Rotate the crown clockwise until the second hand points to the time zone desired. The hour and minute hands will move as you adjust.
- · When the hands and indication stop, push the crown in one 'click' to finish.

MODELS - BZ10** **PROXIMITY**

Mvmt. Cal. No. W770

FFATURES

- · Light-Powered
- Chronograph
- · Perpetual Calendar

- Bluetooth® 4.0
- CITIZEN Proximity App
- · Time/Date Sync
- · Call Filtering

BENEFITS

- · Environmentally Clean Energy Source
- 1-Second Chronograph Measures up to 60 Minutes
- · Accurate to the year 2100
- Power Reserve Indicator
 Displays Remaining Charge
 - · Low Energy Powered by Eco-Drive
 - · Free Convenient Technical Updates

 - · Updates Across Time Zones via GSM Phone Signal Phone Plays a Tone Within 10 Meter Sync Range
 - Visual and Vibration for Calls, Email, SMS, Facetime® and Calendar Events





Please view our interactive setting instructions at www.citizenwatch.com

NOTE: After a complete loss of power or an abnormal function is noticed, an ALL RESET and O-POSITIONING is required. Be sure to set the time and date after performing these procedures.

NOTE: This watch features a 'power save' function. After 30-minutes of insufficient exposure to light sufficient for charging, the watch enters 'power save' mode and the second hand will stop. Although the second hand is not moving, the correct seconds are stored in memory. Power save mode is automatically canceled when the watch is either exposed to light sufficient for charging or a notification from a connected compatible cellular device is received.

TO CHANGE OPERATING MODES

- · Pull the crown out one 'click.
- · Rotate the crown clockwise or counterclockwise so that either side of the mode hand at the 6:00 sub dial indicates the desired operating mode.
- · Push the crown in one 'click'. This completes changing operating modes.

ALL RESET AND 0-POSITIONING PROCEDURE

- · Pull the crown out one 'click.
- Rotate the crown clockwise or counterclockwise to set either side of the mode hand at the 6:00 sub dial to the 'CHR' (chronograph) mode.
- · Pull the crown out one additional 'click'.
- · Simultaneously press and hold both the lower right button (A) and upper right button (B) for 4 or more seconds, then release. An alarm tone will sound, the watch will vibrate and the hands will move indicating a successful all reset.
- Press and release the lower right button (A). The hands and date will move to their zero positions stored in memory. The correct zero positions are:
 - Hour, minute and second hands: 12:00
 - 24-hour hand (10:00 sub dial): 24
 - Multi-Function hand (2:00 sub dial): 6:00
 - Date of month: Between 31 and 1
- · Rotate the crown clockwise or counterclockwise to set the date between 31 and 1 with the function hand at the 2:00 sub dial pointing straight down to the 6:00
- · Press and release the lower right button (A). The minute and hour hands will rotate slightly indicating they are active for setting.
- · Rotate the crown to move the hour and minute hands to the 12:00 position and the 24-hour hand to '24'

NOTE: The 24-hour hand moves in conjunction with the hour hand and cannot be set independently

- Press and release the lower right button (A). The second hand will rotate slightly, indicating it is active for setting.
- · Rotate the crown clockwise to move the second hand to the 12:00 position.

- · Push the crown in one 'click'. Rotate the crown clockwise to set the mode hand at the 6:00 sub dial to the 'TME' (time) mode.
- · Push the crown in one additional 'click' to the closed position next to the case. This completes the All Reset and O-Positioning. You must now set the time and perpetual calendar.

TO SET THE TIME AND PERPETUAL CALENDAR

NOTE: If the watch is paired and actively connected with a compatible cellular phone and automatic time updating is enabled on the App, the time and calendar will update without user intervention based on the time and calendar set on the compatible cellular phone. There may be circumstances however that you need to manually set the time.

- · Pull the crown out one 'click.
- Rotate the crown clockwise or counterclockwise to set either side of the mode hand at the 6:00 sub dial to the 'TME' (time) mode.
- Pull the crown out one additional 'click.'
- · Press and hold the lower right button (A) for two to three seconds until you see the second hand rotate to the 12:00 position, then release. The function hand at the 2:00 sub dial will rotate slightly and then the minute hand will rotate indicating the time may be set.
- · Rotate the crown clockwise or counterclockwise to set the time. Be sure to pay attention to the 24-hour hand at the 10:00 sub dial to ensure the proper AM or PM time is set.
- Press and release the lower right button (A). The function hand at the 2:00 sub dial will rotate indicating the date of month may be set.
- · Rotate the crown clockwise or counterclockwise to set the current date of month. NOTE: The function hand makes 5 rotations for each date change.
- Press and release the lower right button (A) The second hand will rotate to indicate the month and leap year settings stored in memory.
- Rotate the crown clockwise to set the current month and leap year. Each hour indice represents the month, while the hour indice and the 3 minute indices immediately following the hour indice indicate the leap year or years past a leap year.

Month of Year



Leap Year Setting



- · Press and release the lower right button (A). The multi-function hand at the 2:00 sub dial will rotate indicating the day of week may be set.
- · Rotate the crown clockwise to set the day of week.

- Press and release the lower right button (A). The hour and minute hands will rotate slightly indicating they are active for setting.
- · Rotate the crown clockwise to correct for the minutes elapsed during the setting process
- · Press the crown in two 'clicks'. This completes setting the time and perpetual calendar

TO SET THE LOCAL (SECONDARY) TIME

- · Pull the crown out one 'click.'
- · Rotate the crown clockwise or counterclockwise to set either side of the mode hand at the 6:00 sub dial to the 'L-TM' (local/secondary time) mode.
- · Pull the crown out one additional 'click.
- Rotate the crown clockwise or counterclockwise to set the time in 15-minute increments. Be sure to pay attention to the 24-hour hand at the 10:00 sub dial to ensure the proper AM or PM time is set.
- · Push the crown in two 'clicks

TO USE THE ALARM

NOTE: Once set and activated (turned 'on'), the alarm will sound once per day for up to 15 seconds. The alarm will sound at the same time each day unless deactivated (turned 'off')

- · Pull the crown out one 'click.'
- · Rotate the crown clockwise or counterclockwise to set either side of the mode hand at the 6:00 sub dial to the 'ALM' (alarm) mode.
- Pull the crown out one additional 'click.' The second hand will rotate to the 12:00 position, the function hand at the 2:00 sub dial will rotate to indicate the alarm 'on' or 'off' setting and the hour and minute hands will rotate to indicate the alarm
- · Press and release the lower right button (A) to turn the alarm 'ON' or 'OFF'
- Press and hold the lower right button (A) for two to three seconds until you see the minute hand rotate, then release.
- · Rotate the crown clockwise or counterclockwise to set the desired alarm time. Be sure to pay attention to the 24-hour hand at the 10:00 sub dial to set the proper AM or PM time.
- · Push the crown in one 'click'.
- · Rotate the crown clockwise to set the mode hand at the 6:00 sub dial to the 'TME' (time) mode.
- Push the crown in one additional click. This completes setting the alarm
- · When the set alarm time is reached, the alarm will tone until one of the buttons is pressed and released or for a maximum of 15 seconds.

For complete operating and compatible cellular phone pairing and use instructions, please refer to the W770 movement instruction guide found in the setting instruction section under the support link of our website at www.citizenwatch.com

MODELS – CB503* OR CB584* NAVIHAWK

Mvmt. Cal. No. E660

FEATURES

- Light-Powered
- · Atomic Timekeeping
- · World Time
- · Perpetual Calendar
- Alarm
- Chronograph
- · Power Reserve Indicator

BENEFITS

- · Environmentally Clean Energy Source
- · Radio-Controlled Accuracy
- · Accurate to the Year 2100
- · Daily Alarm
- 1-Second Chronograph Measures up to 60 Minutes
- · Displays Remaining Charge





Please view our interactive setting

NOTE: Under normal conditions, this timepiece will receive radio signals to automatically update the time and calendar. There may be conditions in which the radio signal cannot be received. If a signal cannot be received, the watch will operate normally, but not sync with the radio signal.

NOTE: After a complete loss of charge or an abnormal function is noticed, an ALL RESET PROCEDURE and 0-POSITIONING is required. Be sure to set the time and date after performing these procedures.

RADIO RECEPTION

The timepiece will receive radio signals both automatically and on-demand. Both the time and calendar will update based on a chosen radio controlled time zone and provided you are within that radio signal zone.

Automatic reception occurs first at 2:00 a.m., 3 a.m. and then if needed, at 4:00 a.m. If initial reception is successful, subsequent reception attempts (3:00 a.m. or 4:00 a.m.) will not be activated.

The "on-demand" reception feature allows the user to enter the reception mode at his/her convenience. This is helpful when changing time zones before the automatic update or if an automatic update was not successful.

NOTE: Radio updating can take up to 15 minutes to complete. During the update process, the watch must not be moved as this will prohibit a successful radio update.

For in-depth instructions on the radio reception feature, please refer to your owners guide.

ALL RESET AND 0-POSITIONING PROCEDURE

- Pull the crown out one 'click'
- Rotate the crown to move the mode hand (6:00 sub dial) to "CHR" mode.
- Pull the crown out an additional 'click.' The hour, 24-hour, minute and multi-function hands as well as the date will rotate to their zero positions currently stored in memory.
- · The correct zero positions are
 - Hour, Minute, Second and 24-hour: 12:00 (straight up)
 - Multi-function hand (2:00 sub dial): 6:00 (straight down)
 - 24-Hour hand (10:00 sub dial): 12:00 (straight up)
 - Date: between 31 and 1, centered in date window
- Press and release both the lower right button (A) and the upper right button (B) simultaneously. The hands will slightly move back and forth and a "beep" sound will tone, indicating the ALL RESET is successful.
- Press and release the lower right button (A) to change the hand/indications needing to be corrected. Each time your press the (A) button, the target changes as follows.

Function hand/date indication -> Hour/minute/24-hour hands -> Second hand -> (back to the top)

The hands and indications will move slightly when selected, showing that they are ready to be adjusted.

NOTE: The function hand (2:00 sub dial) points to "60" (straight up) when the hour, minute, second, and 24-hour hands are the target of adjustment.

 Rotate the crown to adjust the hand/indications. The hour, minute, and 24-hour hands move at the same time. Date indication changes for every 5 rotations of the function hand.

NOTE: Quickly rotating the crown two 'clicks' will activate rapid advancement. To stop rapid advancement, rotate the crown 1 'click' in either direction.

- Press and release the lower right button (A) to select the next hand/indications needing correction. Make adjustments by turning the crown, as was done in the previous step.
- When all hand/indications are correct, push in the crown one 'click'. Rotate crown until mode hand (6:00 sub dial) is pointed to "TME".
- Push the crown in one 'click' to the closed position next to the case. This completes the ALL RESET and O-POSITIONING. You must now set the time and calendar.

TO SET THE TIME AND CALENDAR

NOTE: You must first set one of the radio controlled time zones prior to setting the time, even if you do not wish to use a radio controlled update. Otherwise, the time displayed will not be correct for all zones.

NOTE: If you are using one of the radio controlled time zones, and you are in the signal area for that time zone, the time and date will update automatically upon receiving a successful radio update. There may be circumstances however for which you need to manually set the time and date such as after an ALL RESET and 0-POSITIONING.

- Pull the crown out one 'click'. Rotate the crown to move the mode hand (6:00 sub dial) to "TME" mode.
- Pull the crown out one additional 'click'. The second hand will rotate to the time zone in memory and stop. Rotate the crown clockwise or counterclockwise to move the second hand to your current time zone location.
- Press and release the upper right button (B) to move the second hand to indicate SMT "ON" or "OFF."
- Push the crown in one 'click'. Rotate the crown to move the mode hand (6:00 sub dial) to "SET" mode. Pull the crown out one additional 'click'.
- Press and release the lower right button (A). The minute and hour hands will move slightly indicating the minute, hour, and 24-hour hands are active for setting.
- Rotate the crown in either direction to set the current time in the time zone chosen. Pay particular attention to the 24-hour hand to ensure the correct AM or PM time is set. (Quickly rotating the crown two 'clicks' will activate rapid advancement.)
- Press and release the lower right button (A). The multifunction hand (2:00 sub dial) will move indicating the date is active for setting.
- Rotate the crown one 'click' clockwise or counterclockwise to change the date (quickly rotating the crown two 'clicks' will activate rapid advancement.)
- Press and release the lower right button (A). The second hand will rotate to the current month of year and leap year position set in memory.
- Rotate the crown clockwise to set the current month of year and leap year as outlined in the graphic below:

Months of Year

November December January October February September April July March May

Leap Year Setting



- Press and release the lower right button (A).
 The multifunction hand (2:00 sub dial) will rotate to the current day of week set in memory
- Rotate the crown clockwise or counterclockwise to set the correct day of week.
- Press and release the lower right button (A). The second hand will rotate to the 12:00 position and the minute hand will move slightly indicating the minute, hour and 24-hour hands are active for setting.
- Rotate the crown clockwise to adjust the minute hand if the time has differed while setting other options.
- Push the crown in two 'clicks' to the closed position next to the case. This completes setting the time and calendar.

CHANGING TO AN ALTERNATE TIME ZONE

NOTE: ONE OF THE RADIO CONTROLLED TIME ZONES MUST BE CORRECTLY SET PRIOR TO CHANGING TO THE ALTERNATE TIME ZONE.

- Pull the crown out one 'click'. Rotate the crown clockwise or counterclockwise until the mode hand (6:00 sub dial) points to "TME."
- Pull the crown out one additional 'click' to the time setting position. The second hand will rotate to the current time zone in memory and stop. Rotate the crown clockwise or counterclockwise to move the second hand to the alternate time zone location.
- Press and release the upper right button (B) to move the second hand to indicate SMT (daylight savings time) "ON" or "OFF."
- Push the crown in two "clicks. This completes setting the alternate time zone.

TO INITIATE ON DEMAND RECEPTION

There may be times when you need to initiate radio reception rather than waiting for the automatic update to occur.

Be sure the mode hand (6:00 sub dial) is pointing "TME" and you are within a radio signal reception region.

- Press and hold the lower right button (A) for approximately 2 seconds and release, or until the second hand rotates to the "RX" position.
- Place the watch on a stable surface where it will not be disturbed during the update process. The update process can take up to 15 minutes to complete, depending on signal strength.
- After the update process is complete (successful or failed), the watch will return to normal operation.

If you are having difficulty receiving radio reception and are in one of the radio controlled zones featured on this timepiece, try a different location such as by a window that is facing your nearest radio transmission tower (as indicated in your instruction manual.)

For further instructions and details of the many additional features of the Perpetual Chronograph AT, please refer to your owners manual or the technical support section our website at www.citizenwatch.com

MODELS - CC200* SATELLITE WAVE F100

Mvmt. Cal. No. F100

FEATURES

- · Light-Powered
- · Satellite Timekeeping
- · World Time
- · Perpetual Calendar
- · Power Reserve Indicator

BENEFITS

- · Environmentally Clean Energy Source
- · Worldwide Reception Area
- · Time Adjustment in 40 Time Zones
- · Accurate to the Year 2100
- Displays Remaining Charge
- Light Level Power Indicator
 Determines Light Energy Reaching the Dial



Please view our interactive setting instructions at www.citizenwatch.com

TO INITIATE SATELLITE RECEPTION

Satellite reception is not automatic and must be manually initiated. Once initiated, satellite reception will complete within three to twenty seconds.

Satellite reception will normally be successful outdoors in areas in which there is a clear view of the sky. Some factors that affect satellite reception are, tall buildings, trees, electrical interference and weather.

- · With the crown in the closed position next to the case, press and hold the lower right button (A) for two seconds, then release.
- · The second hand will rotate to indicate the last signal reception result, then rotate to the "RX" position (12:00). Signal reception now commences.
- Position the watch so that it is away from your torso and the dial is directed towards an unobstructed view of the sky. Optimum positioning is with the dial pointed straight up, rather than at an angle to the sky.
- Upon a successful update, the second hand will rotate to the 1:00 position indicating 'OK'.
- Upon an unsuccessful update, the second hand will rotate to the 11:00 position indicating 'NO'.
- · Normal operation will automatically resume two seconds after reception results are indicated.
- · This completes initiating satellite reception.

TO CHECK SATELLITE RECEPTION RESULTS

It is important to note that Satellite reception results will be stored in memory for six days after the last signal reception attempt. If it has been longer than six days since the last signal reception attempt, reception results will reflect 'NO' even if the last reception was successful.

· With the crown in the closed position next to the case, press and release the lower right button (A).

The second hand will rotate to either the 1:00 position indicating 'OK' for successful reception updating, or to the 11:00 position indicating 'NO' for unsuccessful reception updating.

Press and release the lower right button (A) to return to normal operation. NOTE: normal operation will automatically resume after 10 seconds if the lower right button (A) is not pressed.

ALL RESET AND 0-POSITIONING PROCEDURE

If an abnormal operation occurs or a full recharge is done after a complete loss of power, an ALL RESET and O-POSITIONING will need to be performed.

- · First, pull the crown out two 'clicks
- Simultaneously press and hold both the lower right button (A) and upper right button (B) for three to four seconds, then release. The second hand will rotate to the 12:00 position. The hour and minute hands will make a full revolution indicating a successful all reset, and then move to their zero positions set in memory. The world time will be set to LON, the leap year will be set to January of a leap year and daylight savings time (SMT) will be set to OFF for all cities/time zones.
- · Rotate the crown until the date is showing between 31 and 1, and the function hand (8:00 sub dial) indicates 'S' for Sunday (lower 'S' on the sub dial.)
- · Press and release the lower right button (A). The hour hand will move slightly indicating the hour hand may
- Rotate the crown to set the hour hand to the 12:00 position.

· Press and release the lower right button (A). The minute hand will move slightly indicating it may be set.

Second Hand

Rotate the crown to set the minute hand to the 12:00 position.

City/Time

Zones Scale

Hour Hand

Function Hand

- Press and release the lower right button (A). The second hand will move slightly indicating the second hand may now be set.
- Rotate the crown to set the second hand to the 12:00 position.
- · Push the crown in two 'clicks'.
- · This completes the ALL RESET and ZERO POSITIONING. You must now set the time and perpetual calendar.

TO SET THE TIME AND PERPETUAL CALENDAR

- Pull the crown out one 'click'. The second hand will rotate to indicate the currently active city/time zone and the function hand (8:00 sub dial) will rotate to indicate the current daylight saving time (SMT) setting.
- · If needed, rotate the crown to move the second hand to indicate the city/time zone nearest your location. The function hand (8:00 sub dial) will rotate to indicate the current daylight saving time setting. The hour and minute hands will rotate to the time set for the chosen city/time zone.
- · Press and release the lower right button (A) to turn daylight saving time 'ON' or 'OFF' as indicated by the function hand (8:00 sub dial).
- Press and hold the upper right button (B) until the second hand moves to the 30-second position, then release. The function hand (8:00 sub dial) will rotate to indicate the current day of week set in memory
- · Pull the crown out one additional 'click'. The second hand will rotate to the 12:00 position and the minute hand will move slightly indicating the minutes may be set.
- · Rotate the crown clockwise or counterclockwise to set the current minute.
- Press and release the lower right button (A). The hour hand will move slightly indicating the hour may now be set.
- Rotate the crown clockwise until you see function hand (8:00 sub dial) start to rotate. Using the time shown as 'night time' reference, rotate the crown to set the current hour. Example: if the hour shown is 12:00 as the function hand (8:00 sub dial) starts to rotate, refer to this as 12:00 AM. NOTE: the function hand will continue to rotate until the date change has completed.
- Press and release the lower right button (A). The function hand (8:00 sub dial) will move back and forth indicating the current date of month may now be set.
- · Rotate the crown clockwise or counterclockwise to change the date of month. NOTE: The function hand makes five revolutions for each date change
- Press and release the lower right button (A). The second hand will rotate to the current leap year position set in memory.
- Rotate the crown to set the current month and leap year.

Referring to the graphic on the next column, each hour indice represents the month of year and that it is a leap year, while each of the following three minute indices following represents the years after leap year.





Lower Right Button (A)

Upper Right Button (B)

Minute Hand

Date of Month

Crown

- Press and release the lower right button (A). The function hand (8:00 sub dial) will move slightly indicating the day of week may be set.
- Rotate the crown clockwise or counterclockwise to set the current day of week.
- Press and release the lower right button (A). The second hand will rotate to the 12:00 position and the minute hand will move slightly indicating the minute may now be set.
- Rotate the crown clockwise or counterclockwise to correct for the minutes elapsed during the setting of the calendar and day of week.
- · Push the crown in two 'clicks'

TO ADJUST FOR DAYLIGHT SAVING TIME (SMT)

The Satellite time signal does not include information to automatically adjust for daylight saving time (SMT) that may be observed in your region. Daylight saving time (SMT) must be manually adjusted for each city/time zone.

- Pull the crown out one 'click'. The second hand will rotate to indicate the currently active city/time zone and the function hand (8:00 sub dial) will move to indicate the current daylight saving time (SMT) 'ON' or 'OFF' setting.
- Press and release the lower right button (A) to turn daylight saving time (SMT) 'ON' or 'OFF'
- If needed, rotate the crown to another city/time zone and adjust daylight saving time (SMT) as outlined in the
- After adjusting daylight saving time (SMT) for multiple cities/time zones, be sure to rotate the crown to return to the city/time zone nearest your location.
- · Push the crown in one 'click'

TO USE THE LIGHT-LEVEL INDICATOR AND CHECKING POWER RESERVE

- The light level indicator is an approximate representation of light energy reaching the dial. Optimal charging is achieved when level five or level six is indicated. NOTE: The light level indicator is not intended to be used as a light meter.
- With the crown in the closed position next to the case, press and release the upper right button (B). The function hand (8:00 sub dial) will rotate to indicate the current power reserve level while the second, minute and hour hands will rotate to one of hours 12 to 6 indicating the current light energy reaching the dial.



· Press and release the upper right button to resume normal operation. NOTE: normal operation will resume automatically after approximately 10 seconds if the upper right button (B) is not pressed.

For additional instructions on using the Satellite Wave F100, please refer to the full instruction manual or the technical support section of our website at www.citizenwatch.com. CITIZEN

MODELS - CC300** SATELLITE WAVE-WORLD TIME GPS

Mvmt. Cal. No. F150

FEATURES

- · Light-Powered
- · World Time
- Perpetual Calendar
- Power Reserve Indicator

BENEFITS

- · Environmentally Clean Energy Source
- · Time Adjustment in 40 Time Zones
- · Accurate to the Year 2100
- · Displays Remaining Charge
- - · Second Time Zone



Please view our interactive setting instructions at www.citizenwatch.com

SATELLITE GPS TIME/CALENDAR RECEPTION (RX-GPS)

Satellite GPS time/calendar reception (RX-GPS) will adjust the time zone, time and calendar, including leap year settings based on your current location. Once initiated, Satellite GPS time/calendar reception (RX-GPS) will complete within two minutes. Average reception time is less than one minute. Signal reception will normally be successful outdoors in areas in which there is a clear view of the sky. Some factors that affect signal reception are proximity to a structure, airports, military facilities, tall buildings, trees, electrical interference and atmospheric conditions.

With the crown in the closed position next to the case, press and hold the upper right button (B) for 4 to 5 seconds until you see the second hand move to the eight-second position indicating 'RX-GPS', then release. Satellite GPS signal reception

now commences.

NOTE: While the button is pressed, the function hand (8:00 sub dial) will rotate to indicate the current power reserve, the hour and minute hands will to first rotate to indicate the light level indication, then return to indicate the set time, the function hand (8:00 sub dial) rotates to indicate the day of week set and finally the second hand will rotate to the 'RX-GPS' position.

- Position the watch so that it is away from your torso and the dial is directed towards an unobstructed view of the sky. Optimum positioning is with the dial pointed straight up, rather than at an angle to the sky.
- · Upon a successful update, the second hand will rotate to show the current time zone for two seconds, then the time and calendar (including leap year setting) will be updated. Normal operation now resumes.

NOTE: If you are in an area that observes daylight saving time (SMT), you must manually adjust for daylight saving time. Refer to the section "To Adjust for Daylight Saving

- Upon an unsuccessful update, the second hand will rotate to the 57-second position indicating 'NO'. Normal operation resumes after two seconds.
- This completes Satellite GPS time zone, time and calendar reception.

SATELLITE TIME/CALENDAR RECEPTION (RX-TME)

- Satellite time/calendar reception (RX-TME) will adjust the time and calendar, including leap year settings based on the time zone chosen on the watch. Location information is not received through this reception. Once initiated, satellite time and calendar reception (RX-TME) will complete within three to thirty seconds
- Signal reception will normally be successful outdoors in areas in which there is a clear view of the sky. Some factors that affect signal reception are proximity to a structure, tall buildings, airports, military facilities, trees, electrical interference and atmospheric conditions.
- If needed, pull the crown out one click and rotate the crown to move the second hand to indicate the city/time zone nearest your location. Now, push the crown in one click to the closed position next to the case.
- · With the crown in the closed position next to the case, press and hold the lower right button (A) for two to three seconds, then release.
- The second hand will rotate to indicate the last signal reception result, then rotate to the 52-second position indicating 'RX-TME'. Signal reception now commences
- Position the watch so that it is away from your torso and the dial is directed towards an unobstructed view of the sky. Optimum positioning is with the dial pointed straight up, rather than at an angle to the sky.
- Upon a successful update, the time and calendar, including leap year is updated and the second hand will rotate to indicate 'OK' at the three second position. Normal operation will resume after two seconds.

 Upon an unsuccessful update, the second hand will rotate to the 57-second position indicating 'NO'. Normal operation will resume after two seconds.

Second Hand

RX-TME Indication

LAX

City/Time Zone Scale

Hour Hand

Function Hand

This completes satellite time and calendar reception. NOTE: if you are in an area that observes daylight saving time, you must manually adjust for daylight saving time. Refer to the section "To Adjust for Daylight Saving Time (SMT)

TO ADJUST FOR DAYLIGHT SAVING TIME (SMT)

- The Satellite time and Satellite GPS time signals do not include information to automatically adjust for daylight saving time (SMT) that may be observed in your region Daylight saving time (SMT) must be manually adjusted for each city/time zone.
- Pull the crown out one 'click'. The second hand will rotate to indicate the currently active city/time zone and the function hand (8:00 sub dial) will move to indicate the current daylight saving time (SMT) 'ON' or 'OFF' setting.
- Press and release the lower right button (A) to turn daylight saving time (SMT) 'ON' or 'OFF'
- If needed, rotate the crown to another city/time zone and adjust daylight saving time (SMT) as outlined in the previous step.
- After adjusting daylight saving time (SMT) for multiple cities/time zones, be sure to rotate the crown to return to the city/time zone nearest your location.
- Push the crown in one 'click'

TO MANUALLY SET THE TIME AND PERPETUAL CALENDAR

- Pull the crown out one 'click'. The second hand will rotate to indicate the currently active city/time zone and the function hand (8:00 sub dial) will rotate to indicate the current daylight saving time (SMT) setting.
- If needed, rotate the crown to move the second hand to indicate the city/time zone nearest your location The function hand (8:00 sub dial) will rotate to indicate the current daylight saving time setting. The hour and minute hands will rotate to the time set for the chosen city/time zone.
- Press and release the lower right button (A) to turn daylight saving time 'ON' or 'OFF' as indicated by the function hand (8:00 sub dial).
- Press and hold the upper right button (B) until the second hand moves to the 30-second position, then release. The function hand (8:00 sub dial) will rotate to indicate the current day of week set in memory.
- Pull the crown out one additional 'click'. The second hand will rotate to the 12:00 position and the minute hand will move slightly indicating the minutes may be set.
- Rotate the crown clockwise or counterclockwise to set the current minute.
- Press and release the lower right button (A). The hour hand will move slightly indicating the hour may now be set.
- Rotate the crown clockwise until you see function hand (8:00 sub dial) start to rotate. This indicates the date change mode has commenced. Using the time shown as 'night time' reference, rotate the crown to set the current hour. Example: if the hour shown is 12:00 as the function hand (8:00 sub dial) starts to rotate, refer to this as 12:00 AM. Note: the function hand will continue to rotate until the date change has completed.
- Press and release the lower right button (A). The function hand (8:00 sub dial) will move back and forth indicating the current date of month may now be set
- Rotate the crown clockwise or counterclockwise to change the date of month. Note: The function hand makes five revolutions for each date change
- Press and release the lower right button (A). The second hand will rotate to the current leap year position set in memory

· Rotate the crown to set the current month and leap year. Referring to the graphic below, each hour indice represents the month of year and that it is a leap year. Each of the three minutes following the hour indice represents the years after



AKL NOU SYD

CITIZEN



RX-GPS Indication

Upper Right

Minute Hand

Date of Month

Lower Right Button (A)

Button (B)

Crown

- Press and release the lower right button (A). The function hand (8:00 sub dial) will move slightly indicating the day of week may be set
- Rotate the crown clockwise or counterclockwise to set the current day of week
- Press and release the lower right button (A). The second hand will rotate to the 12:00 position and the minute hand will move slightly indicating the minute may now be set.
- Rotate the crown clockwise or counterclockwise to correct for the minutes elapsed during the setting of the calendar and day of week
- Push the crown in two 'clicks'. This completes setting the time and calendar

ALL RESET AND 0-POSITIONING PROCEDURE

- If an abnormal operation occurs or a full recharge is done after a complete loss of power, an ALL RESET and 0-POSITIONING will need to be performed prior to setting the time and calendar or using the Satellite time/calendar (RX-TME) or Satellite GPS time/calendar (RX-GPS) feature.
- · First, pull the crown out two 'clicks'
- Simultaneously press and hold both the lower right button (A) and upper right button (B) for three to four seconds, then release. The second hand will rotate to the 12:00 position. The hour and minute hands will make a full revolution indicating a successful all reset, and then move to their zero positions set in memory. The world time will be set to LON, the leap year will be set to January of a leap year and daylight saving time (SMT) will be set to 'OFF' for all cities/time zones
- Rotate the crown until the date is showing between '31' and '1', and the function hand (8:00 sub dial) indicates 'S' for Sunday (lower 'S' on the 8:00 sub dial.)
- Press and release the lower right button (A). The hour hand will move slightly indicating the hour hand may now be set. The minute hand may move as well to provide a clear view of the 12:00 position.
- · Rotate the crown to set the hour hand to the 12:00
- Press and release the lower right button (A). The minute hand will move slightly indicating it may be set.
- Rotate the crown to set the minute hand to the 12:00 position.
- Press and release the lower right button (A). The second hand will move slightly indicating the second hand may
- Rotate the crown to set the second hand to the 12:00 position.
- Push the crown in two 'clicks'.
- This completes the ALL RESET and ZERO POSITIONING. You must now set the time and perpetual calendar manually, through Satellite time/calendar reception (RX-TME) or through Satellite GPS Time/Calendar reception (RX-GPS)

For additional instructions of using these and other features of the Satellite Wave-World Time GPS please refer to the full instruction manual or the technical support section of our web site at www.citizenwatch.com

MODELS - CC900** SATELLITE WAVE F900

Mvmt. Cal. No. F900

FFATURES

- Light-Powered
- · World Time
- · Perpetual Calendar
- Chronograph
- Power Reserve Indicator
- Dual Time
- Alarm

BENEFITS

- · Environmentally Clean Energy Source
- - Time Adjustment in 40 Time Zones
 - · Accurate to the Year 2100
 - 1/20-Second Chronograph Measures up to 24 Hours
- Light Level Power Indicator Displays Remaining Charge
 - · Determines Light Energy Reaching the Dial

 - · Second Time Zone

Secondary Time and Alarm Hands (24-hour format) Please view our interactive setting



Satellite GPS time/reception (RX-GPS) will adjust the time zone primary time and calendar, including leap year settings based on your current location. The secondary time (6:00 sub dial) is based on the primary time. Once initiated, Satellite GPS time/calendar reception (RX-GPS) will complete within two minutes. Average reception time

is less than one minute. Signal reception will normally be successful outdoors in areas in which there is a clear view of the sky. Some factors that affect signal reception are proximity to structures, tall buildings, airports, military facilities, trees, electrical interference and atmospheric

Satellite GPS Time/calendar reception (RX-GPS) consumes reserve power at an accelerated rate. Be sure your watch is sufficiently charged before proceeding.

- Be sure the watch is in time (TME) mode (3:00 sub dial). If it is not in time (TME) mode, pull the crown out one 'click' and rotate the crown to change to time (TME) mode. Push the crown in one 'click' to the closed position next to the case.
- With the crown in the closed position next to the case, press and hold the upper right button (B) for two to three seconds until you see the second hand move to the eight-second position to indicate 'RX-GPS', then release. Signal reception now commences. **NOTE:** The second hand will first rotate to indicate the current time zone, make a full revolution, then finally to the eight-second position indicating 'RX-GPS'.
- Position the watch so that it is away from your torso and the dial is directed towards an unobstructed view of the sky Optimum positioning is with the dial pointed straight up, rather than at an angle to the sky.
- Upon a successful update, the second hand will rotate to show the GPS detected time zone for two-seconds, then the time and perpetual calendar, including leap year setting will be updated. Normal operation will then resume. NOTE: If you are in an area that observes daylight saving time (SMT), you must manually adjust for daylight saving time. Refer to the section "To Adjust for Daylight Saving Time".
- Upon an unsuccessful update, the second hand will rotate to the 57-second position to indicate 'NO'. Normal operation will resume after two seconds
- This completes Satellite GPS time/calendar reception (RX-GPS).

SATELLITE TIME/CALENDAR RECEPTION (RX-TME)

Satellite time/calendar reception (RX-TME) will adjust the primary time and calendar, including leap year settings based on the time zone chosen on the watch. The secondary time (6:00 sub dial) is based on the primary time. Once initiated, satellite time/calendar reception (RX-TME) will complete within three to thirty seconds.

Signal reception will normally be successful outdoors in areas in which there is a clear view of the sky. Some factors that affect signal reception are proximity to structures, tall buildings, airports, military facilities, trees, electrical interference and atmospheric conditions. Satellite time/calendar reception (RX-TME) consumes reserve power at an accelerated rate. Be sure your watch is sufficiently charged before proceeding.

- Be sure the mode hand (3:00 sub dial) indicates time (TMF) mode. If not, pull the crown out one 'click' and rotate the crown to change to time (TME) mode, then push the crown in one 'click'
- Be sure the watch is set for your current time zone. With the watch in 'TME' mode, Pull the crown two 'clicks'. The second hand will rotate to indicate the currently active city or time zone. If needed, rotate the crown to move the second hand to indicate the city or time zone nearest your location. Now, push the crown in two 'clicks' to the closed position next to the case.
- With the crown in the closed position next to the case, press and hold the lower right button (A) for two to three seconds then release. The second hand will rotate to indicate the last reception result, then rotate to the 52-second position to indicate 'RX-TME'. Signal reception now commences.
- · Position the watch so that it is away from your torso and the dial is directed towards an unobstructed view of the sky Optimum positioning is with the dial pointed straight up, rather than at an angle to the sky.
- Upon a successful update, the time and calendar, including leap year is updated based on the chosen time zone and the second hand will rotate to the three second position to indicate 'OK'. Normal operation will resume after two seconds.

NOTE: If you are in an area that observes daylight saving time

(SMT), you must manually adjust for daylight saving time. Refer to the section "To Adjust for Daylight Saving Time". Upon an unsuccessful update, the second hand will rotate to

RX-TME

Reception Indication

City or Time

Primary Time Hour Hand

Multi-Function Hand

Zone Scale

Second Hand

the 57-second position to indicate 'NO'. Normal operation will resume after two seconds.

This completes Satellite time/calendar reception (RX-TME).

TO ADJUST FOR DAYLIGHT SAVING TIME

- The Satellite time/calendar (RX-TME) and Satellite GPS time/ calendar (RX-GPS) signals do not include information to automatically adjust for daylight saving time (SMT) that may be observed in your region. Daylight saving time (SMT) must be manually adjusted for each city or time zone.
- Be sure the mode hand (3:00 sub dial) is showing 'TME' mode. If not, pull the crown out one click and rotate the crown to change to 'TME' mode. Push the crown in one 'click'.
- Pull the crown out two 'clicks'. The second hand will rotate to indicate the currently active primary time city or time zone and the function hand (9:00 sub dial) will move to indicate the current daylight saving time (SMT) 'ON' or 'OFF' setting.
- Press and release the lower right button (A) to turn daylight saving time (SMT) 'ON' or 'OFF' for the primary time for the chosen city or time zone. **NOTE:** this also updates the daylight saving time setting for the secondary time for the same time zone.
- If needed, rotate the crown to another city or time zone and adjust daylight saving time (SMT) as outlined in the previous step.
- Press and release the upper right button (B) to change to the secondary time mode as indicated by the hands at the 6:00 sub dial. The secondary time hour and minute hands will move to indicate the secondary city or time zone is active. The second hand will indicate the currently active city or time zone for the secondary time.
- If the secondary time city or time zone chosen is different than from the primary time, press and release the lower right button (A) to turn daylight saving time (SMT) 'ON' or 'OFF' for the secondary time. **NOTE:** this also updates the daylight saving time setting for the primary time for the same time zone
- If needed, rotate the crown to another city or time zone and adjust daylight saving time (SMT) as outlined in the previous step
- Press and release the upper right button (B) to return to the primary time mode. The hour and minute hands will move to indicate the primary time mode is active.
- · If needed, rotate the crown to return to the primary time city or time zone nearest your location.
- Push the crown in two 'clicks'. This completes adjusting daylight saving time

TO MANUALLY SET THE TIME AND PERPETUAL CALENDAR

- First, be sure the watch is in the time mode (TME) and the city or time zone is set for your current time zone. Pull the crown out one 'click' to the mode change position. Rotate the crown to move the mode hand (3:00 sub dial) to the time (TME) mode.
- Pull the crown out one additional 'click' Rotate the crown to move the second hand to indicate your current time zone.
- Push the crown in one 'click' back to the mode change position. Rotate the crown to move the mode hand (3:00 sub dial) to the 'SET' or setting mode.
- Pull the crown out one additional 'click' to activate setting
- Press and hold the lower right button (A) for two to three seconds, then release. The second hand will make a full rotation and the minute hand will move indicating the hour and minutes may be set.
- To ensure proper AM/PM time is set, rotate the crown to move the hour and minute hands past 12:00 until you see the function hand at the 9:00 sub dial starts to rotate and the date changes. This indicates the AM position. Using this time as a nighttime reference, continue rotating the crown until the current time is set.
- Press and release the lower right button (A). The function hand at the 9:00 sub dial will move indicating the date of month
- Rotate the crown clockwise or counterclockwise to set the current date of month. NOTE: The function hand makes five revolutions for each date change.



CITIZEN

Date of Month Leap Year Setting

RX-GPS Reception Indication

Upper Right

Primary Time

Minute Hand

Mode Hand

Lower Right

Button (A)

Crown

Button (B)

- Press and release the lower right button (A). The second hand will rotate to the current leap year position set in memory, then move back and forth indicating the leap year may be set.
- Rotate the crown to set the current month and leap year. Referring to the graphic below each hour indice represents the month of year and that it is a leap year. Each of the three minutes following the hour indice represents the years after a leap year.
- Press and release the lower right button (A). The function hand at the 9:00 sub dial will move indicating the day of week may be set.
- Rotate the crown clockwise or counterclockwise to set the current day of week
- Press and release the lower right button (A). The second hand will rotate to the 12:00 position and the minute hand will move slightly indicating the minutes may now be set.
- Rotate the crown clockwise to correct for the minutes elapsed during the setting of the calendar and day of week
- Push the crown in one 'click'. Rotate the crown to move the mode hand (3:00 sub dial) to the time (TME) mode
- Push the crown in one additional 'click'. This completes manually setting the time and calendar. NOTE: If you are in an area that observes daylight saving time (SMT), you must manually adjust for daylight saving time. Refer to the section "To Adjust for Daylight Saving Time"

ALL RESET AND 0-POSITIONING PROCEDURE

If an abnormal operation occurs or a full recharge is done after a complete loss of power, an ALL RESET and 0-POSITIONING will need to be performed prior to setting the time and calendar.

- · First, pull the crown out one 'click'. Rotate the crown to move the mode hand (3:00 sub dial) to chronograph (CHR) mode.
- Pull the crown out one additional 'click'. The second hand will rotate to the 12:00 position.
- Simultaneously press and hold both the lower right button (A) and upper right button (B) for three to four seconds, then release. Following a beep tone, the second hand will rotate to the zero position stored in memory. The hour, minute and secondary time hands move indicating a successful all reset. The world time will be set to LON, the day of week to Sunday, alarm time to 12:00AM, alarm set to off, the leap year will be set to January of a leap year and daylight saving time (SMT) will be set to 'OFF' for all cities/time zones.
- Rotate the crown until the date is showing between '31' and '1', and the function hand (9:00 sub dial) is pointing straight up to the 12:00 position.
- Press and release the lower right button (A). The secondary time minute hand (6:00 sub dial) will move indicating the secondary time hour and minute hands may be set
- Rotate the crown to set the secondary minute and hour hands straight up to the '24' position.
- Press and release the lower right button (A). The primary time minute hand will move slightly indicating the primary time hour and minute hands may be set.
- Rotate the crown to set the primary time hour and minutes hands straight up to the 12:00 position.
- Press and release the lower right button (A). The second hand will move slightly indicating the second hand may now be set.
- Rotate the crown to move the second hand straight up to the 12:00 position.
- Push the crown in two 'clicks'. The second hand will make a full revolution, then the hour and minute hands will advance two to three "hours", then return to the 12:00 position.
- This completes the ALL RESET and ZERO POSITIONING. You mus now set the time and perpetual calendar manually, through Satellite time/calendar reception (RX-TME) or through Satellite GPS time/calendar reception (RX-GPS)

For additional instructions on using these and other features of the Satellite Wave F900 please refer to the full instruction manual or the technical support section of our web site at www.citizenwatch.com

MODELS – JY00** SKYHAWK A•T

Mvmt. Cal. No. U60*

FEATURES

- · Light-Powered
- · Atomic Timekeeping
- · World Time
- Dual Alarms
- Chronograph
- · Perpetual Calendar
- · Analog/Digital Displays
- 99-Minute Countdown Timer
- · Power Reserve Indicator

BENEFITS

- Environmentally Clean Energy Source
- · Radio-Controlled Accuracy
- · Time Adjustment in 43 Cities
- · Two Independent Alarms
- 1/100-Second Chronograph Measures up to 24 Hours
- · Accurate to the Year 2100
- · Shows Month, Day and Date
- · Sounds Signal When Time is Up
- · Displays Remaining Charge





Please view our interactive setting instructions at www.citizenwatch.com

NOTE: Under normal conditions, this watch will receive radio signals to automatically update the time and calendar. There may be conditions in which the radio signal cannot be received. If a signal cannot be received, the watch will operate normally, but not update.

NOTE: After a complete loss of charge or an abnormal display or function is noticed, an ALL RESET PROCEDURE and 0-POSITIONING CHECK AND CORRECTION is required. Be sure to set the time and date after performing these procedures.

NOTE: This watch features an EL backlight which will illuminate the digital displays. This is activated by pressing the upper right button (B).

RADIO RECEPTION

The watch will receive radio signals both automatically and on-demand. Both the time and calendar will update based on the current time zone.

Automatic reception occurs first at 2:00 AM and then if needed, at 3:00 AM and 4:00 AM. If the 2:00 AM reception signal is successful, subsequent updating will not be activated. The 4:00 AM automatic update time may be user set to an alternate time if so desired.

The "on-demand" feature allows the user to enter the reception mode at their convenience. This is helpful when changing time zones before the automatic update or if an automatic update was not successful.

NOTE: Depending on signal strength, it can take up to 15 minutes to complete the update. During the update process, the watch must not be moved otherwise the transmission signal may be interrupted resulting in an unsuccessful time/calendar update.

For in-depth instructions on the radio reception feature, please refer to your owner's guide.

ALL RESET PROCEDURE

- Pull the crown out one 'click' and rotate so that the mode hand points to CHR.
- Pull the crown out another 'click' to the setting position.
- Press the upper right (B) and lower right (A) buttons down simultaneously for 3 seconds, then release them. All digital segments in the displays will be highlighted and the hands will move back and forth to indicate the ALL RESET is successful.
- Press the crown in to the closed position. You must now continue with the 0-POSITIONING CHECK AND CORRECTION PROCEDURE.

0-POSITIONING CHECK AND CORRECTION

- Pull the crown out one 'click' and rotate so that the mode hand points to CHR.
- Pull the crown out another 'click' to the setting position.
 Each hand will move to the 0-position set in memory and (0) will show in digital display 2. The

correct 0-position for the charge level/frequency hand is the center of the U in 'EUR,' while all other hands should be pointing straight up (12:00 or 2400 hours). If all hands point to their respective 0-position, press the crown in two 'clicks' to the closed position. If any of the hands do not indicate their correct 0-position, you will need to continue this procedure.

- Press and hold the upper right button (B) for two or more seconds, then release. This activates the 0-positioning mode. CHA will flash in digital display 2.
- Turn the crown clockwise or counterclockwise until the charge/frequency hand points to the center of EUR on the frequency scale.
- Press and release the upper right button (B). The digital display 2 will show UTC. Turn the crown clockwise or counterclockwise until both the UTC hour and minute hands point to 24.
- Press and release the upper right button (B). The digital display 2 will show HR. Turn the crown clockwise or counterclockwise until the hour hand points to 12:00 and the 24-hour hand points to 24.
- Press and release the upper right button (B). The digital display 2 will show MIN. Turn the crown clockwise or counterclockwise until the minute hand points to 12:00.
- Press and hold the upper right button (B) for two or more seconds, then release and push the crown to the closed position next to the case. The analog hands will move to the time set in memory and CHR will show in digital display 2. You must now set the time either through 'on-demand' reception or manually.

ON-DEMAND RADIO RECEPTION

NOTE: On-demand radio reception is used after an ALL RESET and may be used when traveling or after daylight saving time.

- Pull the crown out one 'click.' Turn the crown clockwise or counterclockwise to turn the mode hand to the TME mode.
- Press and release the lower right button (A) or upper right button (B) until a city in your time zone is shown.
- Simultaneously press and release the lower right button (A) or upper right button (B). This will update digital display 1 and the analog hands to your current time zone.
- Push the crown in one 'click.' Press and hold the lower right button (A) for two or more seconds until you hear a beep. The second hand will move to the RX position at 12:00, the charge level/frequency hand will move to the current signal available, digital display 1 will show 'RDY,' digital display 2 will show 'RX.' Place the watch in a stable position so that it is not moved. It can take up to 15 minutes to complete the update process.

- Upon detection of a radio signal, the second hand will move to indicate the signal strength.
- If a signal is detected and updating is successful digital display 1 will show 'OK' and the second hand will resume normal function.
- If no signal is detected, digital display 1 will show 'NO' and the second hand will resume normal function. If no signal can be detected, you will need to proceed with manually setting the time.

TO MANUALLY SET THE TIME

NOTE: After receiving a radio signal, the time will automatically set. There may be circumstances however for which you need to manually set the time such as after an ALL RESET or you are in an area that inhibits signal reception.

- Pull the crown out one 'click.' Rotate the crown clockwise or counterclockwise until the mode hand points to TME.
- Press and release either the upper right button (B) or lower right button (A) until a city in your time zone is shown in digital display 1.
- Pull the crown out an additional 'click' to activate the time setting mode. The second/transmission strength indicator hand will move to 12:00 and SMT will flash in digital display 1.
- Press and release the lower right button (A) to activate or deactivate SMT (daylight saving time).
- Press and release the upper right button (B). The seconds will flash in digital display 1. Press and release the lower right button (A) to set the seconds
- Press and release the upper right button (B).
 The minutes will flash in digital display 1. Turn the crown clockwise or counterclockwise to set the current minute.
- Press and release the upper right button (B). The hours will flash in digital display 1. Turn the crown clockwise or counterclockwise to set the current hour.
- Press and release the upper right button (B). The AM/PM (12-hour) or 24-hour indiction will flash in digital display 1. Press and release the lower right button (A) to set 12-hour or 24-hour time.
- Push the crown in one 'click.' Simultaneously press and release the lower right button (A) and upper right button (B) until you hear a beep. Digital display 2 will change to the time zone shown in digital display 1 and the analog hands will move to the time in that time zone.
- Push the crown in one 'click' to the closed position next to the case. This completes setting the time.

MODELS – JY80** NAVIHAWK A•T

Mvmt. Cal. No. U680

FFATURES

- · Light-Powered
- · Atomic Timekeeping
- · World Time
- · Chronograph
- · 99-Minute Countdown Timer
- · Perpetual Calendar
- · Power Reserve Indicator
- Dual Time
- Dual Alarms

BENEFITS

- Environmentally Clean Energy Source
- · Radio-Controlled Accuracy
- · Time Adjustment in 43 Cities
- 1/100-Second Chronograph Measures up to 24 Hours
- · Sounds Signal When Time is Up
- · Accurate to the Year 2100
- · Displays Remaining Charge
- · Second Time Zone
- Two Independent Alarms





Please view our interactive setting instructions at www.citizenwatch.com

NOTE: Under normal conditions, this watch will receive radio signals to automatically update the time and calendar. There may be conditions in which the radio signal cannot be received. If a signal cannot be received, the watch will operate normally, but not update.

NOTE: After a complete loss of charge or an abnormal display or function is noticed, an ALL RESET PROCEDURE and 0-POSITIONING CHECK AND CORRECTION is required. Be sure to set the time and date after performing these procedures.

NOTE: This watch features an EL backlight which will illuminate the digital displays. This is activated by pressing the upper right button (B).

RADIO RECEPTION

The watch will receive radio signals both automatically and on-demand. Both the time and calendar will update based on the current time zone.

Automatic reception occurs first at 2:00 AM and then if needed, at 3:00 AM then 4:00 AM. If the 2:00 AM reception signal is successful, subsequent updating will not be activated. The 4:00 AM automatic update time may be user set to an alternate time if so desired.

The "on-demand" reception feature allows the user to enter the reception mode at their convenience. This is helpful when changing time zones before the automatic update or if an automatic update was not successful.

NOTE: Depending on signal strength, it can take up to 15 minutes to complete the update. During the update process, the watch must not be moved otherwise the transmission signal may be interrupted resulting in an unsuccessful time/calendar update.

For in-depth instructions on the radio reception feature, please refer to your owner's guide.

ALL RESET PROCEDURE

- Pull the crown out one 'click' and rotate so that the mode hand points to 'CHR'.
- Pull the crown out another 'click' to the setting position.
- Press the upper right (B) and lower right (A) buttons down simultaneously for 3 seconds, then release them. All digital segments in the displays will be highlighted and the hands will move back and forth to indicate the ALL RESET is successful
- Press the crown in to the closed position. You must now continue with the 0-POSITIONING CHECK AND CORRECTION PROCEDURE.

0-POSITIONING CHECK AND CORRECTION

- Pull the crown out one 'click' and rotate so that the mode hand points to 'CHR'.
- Pull the crown out another 'click' to the setting position. Each hand will move to the O-position set in memory and (0) will show in digital display 2. The correct O-position for the charge level/ frequency hand is the center of the 'H' in 'CHN',

while all other hands should be pointing straight up (12:00 or 2400 hours) If all hands point to their respective 0-position, press the crown in two 'clicks' to the closed position. If any of the hands do not indicate their correct 0-position, you will need to continue this procedure.

- Press and hold the upper right button (B) for two or more seconds, then release. This activates the 0-positioning mode. 'CHA' will flash in digital display 2.
- Turn the crown clockwise or counterclockwise until the charge/frequency hand points to the center of 'CHN' on the frequency scale.
- Press and release the upper right button (B). The digital display 2 will show 'UTC'. Turn the crown clockwise or counterclockwise until both the UTC hour and minute hands point to 24.
- Press and release the upper right button (B). The digital display 2 will show 'HR'. Turn the crown clockwise or counterclockwise until the hour hand points to 12:00 and the 24-hour hand points to 24.
- Press and release the upper right button (B). The digital display 2 will show 'MIN'. Turn the crown clockwise or counterclockwise until the minute hand points to 12:00.
- Press and hold the upper right button (B) for two or more seconds, then release and push the crown to the closed position next to the case. The analog hands will move to the time set in memory and 'CHR' will show in digital display 2. You must now set the time either through 'on-demand' reception or manually.

ON-DEMAND RADIO RECEPTION

NOTE: On-demand radio reception is used after an ALL RESET and may be used when traveling or after daylight saving time.

- Pull the crown out one 'click'. Turn the crown clockwise or counterclockwise to turn the mode hand to the 'TME' mode.
- Press and release the lower right button (A) or upper right button (B) until a city in your time zone is shown.
- Simultaneously press and release the lower right button (A) and upper right button (B). This will update digital display 1 and the analog hands to your current time zone.
- Push the crown in one 'click'. Press and hold the lower right button (A) for two or more seconds until you hear a beep. The second hand will move to the 'RX' position at 12:00, the charge level/frequency hand will move to the current signal available, digital display 1 will show 'RDY', digital display 2 will show 'RX'.
- Place the watch in a stable position so that it is not moved. It can take up to 15 minutes to complete the update process.
- Upon detection of a radio signal, the second hand will move to indicate the signal strength.

- If a signal is detected and updating is successful digital display 1 will show 'OK' and the second hand will resume normal function.
- If no signal is detected, digital display 1 will show 'NO' and the second hand will resume normal function. If no signal can be detected, you will need to proceed with manually setting the time.

TO MANUALLY SET THE TIME

NOTE: After receiving a radio signal, the time will automatically set. There may be circumstances however for which you need to manually set the time such as after an ALL RESET or you are in an area that inhibits signal reception.

- Pull the crown out one 'click'. Rotate the crown clockwise or counterclockwise until the mode hand points to 'TME' (time mode).
- Press and release either the upper right button (B) or lower right button (A) until a city in your time zone is shown in digital display 1.
- Pull the crown out an additional 'click' to activate the time setting mode. The second/transmission strength indicator hand will move to 12:00 and 'SMT' (daylight saving time) will flash in digital display 1.
- Press and release the lower right button (A) to activate or deactivate 'SMT'(daylight saving time)
- Press and release the upper right button (B). The seconds will flash in digital display 1. Press and release the lower right button (A) to set the seconds to 0.
- Press and release the upper right button (B).
 The minutes will flash in digital display 1. Turn the crown clockwise or counterclockwise to set the current minute.
- Press and release the upper right button (B).
 The hours will flash in digital display 1. Turn the crown clockwise or counterclockwise to set the current hour.
- Press and release the upper right button (B). The AM/PM (12-hour) or 24-hour indiction will flash in digital display 1. Press and release the lower right button (A) to set 12-hour or 24-hour time.
- Push the crown in one 'click'. Simultaneously press and release the lower right button (A) and upper right button (B) until you hear a beep. Digital display 2 will change to the time zone shown in digital display 1 and the analog hands will move to the time in that time zone
- Push the crown in one 'click' to the closed position next to the case. This completes setting the time.

For instructions on setting the calendar and details of the many additional features of the Navihawk A*T, please refer to the full instruction manual or the technical support section of our website at www.citizenwatch.com

MODELS – JW00* PROMASTER SST

Mvmt. Cal. No. U70*

FEATURES

- Light-Powered
- · World Time
- Chronograph
- · Analog/Digital Displays
- · 99-Minute Countdown Timer
- Race Chronograph

BENEFITS

- · Environmentally Clean Energy Source
- · Time Adjustment in 43 Cities
- 1/1000-Second Chronograph Measures up to 24 Hours
- · Shows Month, Day and Date
- Sounds Signal When Time is Up
- · Split Lap Time
- · Recalls up to 20 Laps
- Average Speed Calculation





Please view our interactive setting instructions at www.citizenwatch.com

NOTES: If a low/no charge state is reached, or another malfunction is experienced, an ALL RESET and O-POSITIONING will be required.

ALL RESET AND 0-POSITIONING PROCEDURE

- Press and release the lower left button (C) until in the chronograph (CHR) mode.
- · Pull the crown out one 'click.'
- Press and hold the upper right button (B), lower right button (A) and lower left button (C) simultaneously for 3 seconds, then release. All segments of the digital display will show, the hands will move back and forth and finally the digital display will show:

Top section: 0000 Middle Section: 00000 Lower Section: --0 --

- Press and hold the upper right button (B) for 2 or more seconds, then release. The digital display will show "CRS" and the 1-second chronograph hand will move back and forth.
- Press and release the upper right button (B) repeatedly to move the 1-second chronograph hand to 60 (straight up).
- Press and release the lower left button (C).
 The 'main time' second hand will move counter clockwise three rotations and the digital display will show 'CRM'. The 1/100-second chronograph hand will move back and forth.
- Press and release the upper right button (B) repeatedly until the 1/10 and 1/100 second chronograph hands point straight up to 00 (12:00 position).
- Press and release the lower left button (C). The hour hand will move back and forth and the digital display will show "HR".
- Press and release the upper right button (B) or lower right button (A) to move the hour and 24-hour hands straight up to the 12:00 position.
- Press and release the lower left button (C). The 'main time' second hand will rotate clockwise three rotations and the digital display will show "MIN."
- Press and release the upper right button (B) or lower right button (A) to move the minute and 'main time' second hand to the 12:00 position.
- Push the crown in one 'click'. The 'main time' and calendar must be set.

TO SET THE 'MAIN TIME' AND CALENDAR

NOTE: The analog and world times are driven by the time set in the main time/calendar mode.

- Press and release the lower left button (C) until the calendar is shown in the digital display.
- · Pull crown out one 'click.' The city will flash.
- Press and release either the upper right button (B) or lower right button (A) to change the city to your time zone.
- Press and release lower left button (C). 'OFF' or 'ON' will flash (DST).
- Press and release lower right button (A) to turn DST (daylight saving time) 'ON' or 'OFF'.
- Press and release lower left button (C). The seconds will flash.
- Press and release lower right button (A) to reset seconds to '00' (seconds will start from 00).
- Press and release lower left button (C). The minutes will flash
- Press and release either the upper right button (B) or lower right button (A) to change the minutes.
 NOTE: The upper right button (B) will advance the minutes while lower right button (A) will decrement the minutes.
- Press and release lower left button (C). The hours will flash.
- Press hours to ensure the proper AM or PM time is set.
- Press and release lower left button (C). The '12' or '24H' indicator will flash.
- Press and release the lower right button (A) to change from 12-hour (12) to 24-hour (24H) display.
- Press and release the lower left button (C). The month of year will flash.
- Press and release either the upper right button (B) or lower right button (A) to change month.
 NOTE: The upper right button (B) will advance the month while the lower right button (A) will decrement the month.
- Press and release the lower left button (C). The date of month will flash.
- Press and release either the upper right button
 (B) or lower right button (A) to change the date
 of month. NOTE: The upper right button (B) will
 advance the date while the lower right button (A)
 will decrement the date.

- Press and release the lower left button (C).
 The year will flash.
- Press and release either the upper right (B) or lower right (A) button to change the year. NOTE: The upper right button (B) will advance the year while the lower right button (A) will decrement the year.
- Return the crown to the closed position by pushing it in one 'click' to the closed position next to the case. The analog hands will change to the time just set and the current year, month, date and day of week will show in the digital display.

TO USE THE CHRONOGRAPH

NOTE: The 'main time' second hand does not reflect chronograph timing. Be sure to refer to the 1-second, 1/10-second and 1/100-second chronograph hands as well as the digital display when referring to chronograph operations.

- Press and release the lower left button (C) until in the chronograph (CHR) mode.
- Press and release the upper right button (B) to engage the chronograph. Along with the digital display, the 1-second, 1/10- and 1/100-second chronograph hands will commence timing operations. NOTE: The 1/10- and 1/100-second chronograph hands will operate for a period of 1 minute when the chronograph is active and the upper right button (B) is pressed and released.
- To activate the 'split time' model, press and release the lower right button (A) while the chronograph is active. The digital display will pause visible timing allowing reference to the split time. Visible timing will resume after 10 seconds.
- Press and release the upper right button (B) to stop the chronograph.
- Press and release the lower right button (A) to reset the chronograph to zero.

For use and setting of additional features such as the alarm, timer and race modes, please refer to the full instruction manual or the technical support section of our website at www.citizenwatch.com.

BRACELET SIZING TOOLS AVAILABLE FROM CITIZEN

These specialty bracelet sizing tools can be ordered at the prices listed below directly from CITIZEN. (These tools are only for sale. No co-op funds can be used.)



CIT-SZTOOL Plier Type Sizing Tool \$50.00



BST-008MM Replacement Pin 8mm for Sizing Tool \$2.85





CTB-050 Band Pin Pusher \$5.00



5 YEAR LIMITED WARRANTY

CITIZEN WATCH COMPANY OF AMERICA, INC. WARRANTY PROGRAM AND SERVICE GUIDE

Only valid for purchases made in the United States, Canada, United Kingdom, Ireland, Caribbean and Mexico ("Territory") from retailers (including Duty Free Shops and Military Exchanges) authorized by CITIZEN Watch Company of America, Inc., CITIZEN Watch Canada Ltd., CITIZEN Watch United Kingdom, Ltd., or CITIZEN de Mexico, S.A. de C.V. ("CITIZEN", in their respective markets), as Authorized Retailer.

* Additional 1 year warranty valid only for U.S. Residents with purchases made in the United States and Caribbean from CITIZEN Watch Company of America Authorized Retailers as well as CITIZEN Watch Company of America Authorized Travel Retail Duty Free Channels and Military Exchanges. Service Centers located in other parts of the world will only provide warranty service under the one-year International Warranty.

See website for full details.

Serial No.: No. de Fabricatión:	
Model No.: Número de Modelo:	
Country: País:	address: Nombre y Dirección de la Relogería:
Owners name: Nomb	ore de poseedor:

CITIZEN warranty program is designed to provide real value to the customer and a strong competitive edge to you, the retailer. Our unparalleled warranty program gives you a vehicle to build and strengthen a relationship with the consumer which may continue long after the initial sale.

FIVE YEAR LIMITED WARRANTY

Every CITIZEN watch purchased in the United States, Canada, United Kingdom, Ireland, Caribbean and Mexico ("Territory") from a CITIZEN Authorized Dealer is accompanied by a Five Year Limited Warranty giving superior protection and peace of mind to the consumer. There is never a charge for warranty service.

Register your watch on citizenwatch.com to get an additional year of warranty.

CITIZEN's unparalleled warranty program and excellent after-sales service is designed to support our retailers in providing superior quality and lasting value to the consumer.

CASEBACK MARKING

The casebacks on CITIZEN watches offer a variety of information you may need when requesting parts, service, setting instructions or other information:

EDGE ENGRAVED CASEBACK



CENTER ENGRAVED CASEBACK



When Requesting Replacement Parts:

When requesting parts from CITIZEN, you will be asked for both the movement caliber and case numbers. The sequence of characters needed is ABCD-1234567. These numbers will ensure we supply the correct part(s) for your needs. Certain parts are not available for direct sales and must be installed by an Authorized CITIZEN Service Center.

When Requesting Setting/ Operating Instructions:

You will be asked for the Movement Caliber Number which is the first 4 characters of the Caliber/Case Number.

When Completing Your Warranty Coupon:

You will need both the Movement Caliber/Case Number and the Manufacturer's Serial Number.

When Determining if Your Watch is Water Resistant:

Water resistance is offered in varying degrees based on the design and application of your timepiece. The caseback will indicate the degree of water resistance for your timepiece. If there is no indication of water resistance, you should be careful not to expose your timepiece to moisture as it is not water resistant. Please refer to the Water Resistance guide found in our Frequently Asked Questions section in the technical support section of our website at citizenwatch.com.

When Trying to Locate the Caseback Opening Location:

The last digit following the country of origin will indicate the proper opening location for press or snap-on type casebacks. We recommend only qualified technicians remove the caseback of our timepieces. Certain types of watches should only be opened by an Authorized Service Center such as Radio-Controlled, Satellite, Aqualand and other models marked "Factory Service Only." Removal of the caseback by anyone other than an Authorized CITIZEN Service Center may void the warranty.

SETTING INSTRUCTIONS

To view the Setting Instructions for your particular CITIZEN watch, visit citizenwatch.com and enter your Movement Caliber Number in the relevant field.

> To locate the Movement Caliber Number on your watch's caseback, see the diagrams on the previous page.

You may also choose from a selection of video instructions or printable pdf for additional help with setting your watch.

NEW! MOBILE APP



Download the My CITIZEN App

Access your setting instructions and register your new timepiece with just a few quick scans of your watch. You can also store your purchase information and receive helpful notifications.





The Apple® iPhone® App graphic and logo are registered of Apple, Inc. Google Play® is a trademark of Google, Inc.

WEBSITE



Instructions and video tutorials for how to set and operate advanced features of your watch can be found on our website: citizenwatch.com/support

UNITED STATES SERVICE CENTERS



CITIZEN SERVICE HEADQUARTERS

COA, ATTN: CS DEPT 1000 West 190th Street, Dept. R. Torrance, CA 90502-1040 (800) 321-1023 (ext. 4234) (310) 532-TIME (8463) (ext. 4234)

Website: www.citizenwatch.com **Email for Customer Service:** CustomerService_us@citizenwatch.com

SERVICE CENTERS

ATLANTA:

Hurley Roberts Service Co.

6990-C Peachtree Industrial Blvd. Norcross, GA 30071 (770) 263-8669 / (800) 896-8669 Website: www.hurleyrobertsservice.com Email: customerservice@hurleyrobertsservice.com DALLAS:

CITIZEN Service Agency

Eastside Atrium 800 E. Campbell Road, Suite 200 Richardson, TX 75081 (972) 234-4900 Website: www.citizenwatchserv.com

Email: customerservice@citizenwatchserv.com

PUERTO RICO:

N. T. Precision

Calle Tetuan 151 Frente Camara Comercio Viejo San Juan, Puerto Rico 00902 (787) 724-7288

NO DIVE WATCH SERVICE AT THIS LOCATION

NO RADIO-CONTROLLED, SATELLITE OR PROXIMITY MODELS SERVICED AT THESE LOCATIONS.

SPECIFICATIONS AND MODEL CODES

BL8144-54H \$575.00— Model Number • Suggested Retail

42mm SSP SC —— Size · Case Code · Crystal Material

SSP HDP SP WR100 — Bracelet Code \cdot Clasp Type \cdot Sizing \cdot Water Resistance

MODEL NUMBER

В 5 4 Н DIAL COLOR **BAND TYPE WATCH TYPE CASE COLOR** Code Code Code Description Description Description Description Code 0,1,2,3,4 Non-Metal A,B,C White A,B,C,D,J,Q,R Men's Analog 0,1 Silver-Tone Bracelet E,F,G,H,S,T Ladies' Analog 2,3 Gold-Tone or D,N,Y Mother-of-Pearl Metal Bracelet 5,6,7,8 Rose Gold-Tone Men's Mechanical E,F,G Black Ν 9 Expansion Band 4 Two-Tone Ρ Ladies' Mechanical H,J,K Gray 5,6,7,8,9 Black, Blue, L,M Blue Gray or Other P,Q,R,S,T,U Champagne W,X,Z Other

CASE &	BRACELET/STRAP CODE	CLAS	P TYPE		
Code D	Description	Code	Description	0	
BM	Base Metal	BBA	Bangle Bracelet		
BMP	Base Metal with Ion Plating		(Adjustable)		
CER	Ceramic	DIZI	Dualda		
CMBC	Cermet and Binderless Cemented Carbide	BKL	Buckle		
CROC	Genuine Crocodile	CLP	Push and Slide ————		
LTHR	Leather	DC	Deployment Clasp —		
LTNY	Leather and Nylon				
NYLN	Nylon	DCP	Deployment Clasp with		
NYPU	Nylon and Polyurethane		Push Button	- 424	ſ
PU	Polyurethane, Rubber or Silicone	EXP	Expansion Band —		
PUL	Polyurethane Coated Leather			1000	
SPPU	Stainless Steel with Ion Plating and Polyurethane, Rubber	FC	Fold Over Clasp —————		
	or Silicone	FCL	Fold Over Safety Clasp——		
SS	Stainless Steel	FCP	Fold Over Clasp with	- 1	
SSC	Stainless Steel with Surface Hardening Treatment	101	Push Button		
SCCM	Stainless Steel with Surface Hardening Treatment and Cermet	HDP	Fold Over Clasp with Hidden Double Push Button	1 000 00 00 00 00 00 00 00 00 00 00 00 0	
SSCP	Stainless Steel and Ceramic		Double Fusit Duttoff————		
0000	with Ion Plating	JLC	Jewelry Clasp————		
SSCR	Stainless Steel Case with Ceramic	II D	المناب والمعارض المعارض المعار	A	
SSP	Stainless Steel with Ion Plating	JLP	Jewelry Clasp with Push Button ———————————————————————————————————		
SSPU	Stainless Steel and Polyurethane, Rubber or Silicone				
SSR	Stainless Steel and Resin	SCP	Safety Fold Over Clasp with Push Button		
SSTI	Stainless Steel and Titanium		WITH USH DULLOH		
TI	Titanium	SLC	Sliding Clasp ————		
TIC	Super Titanium™. Titanium with Surface Hardening Treatment				
TIP	Titanium with Ion Plating				
TIPC	Super Titanium™. Titanium with Ion	Plating	and Surface Hardening Treatr	ment	
TPUC	Super Titanium™. Titanium with Su	urface H	Hardening Treatment and		

Polyurethane, Rubber, or Silicone

WATER RESISTANCE

Code	Description
WR	Accidentally Splashing
WR50	Still Water Swimming
	(no showering)
WR100	Swimming & Showering
WR200	Swimming, Showering, Snorkeling
WR300	Swimming, Showering, Snorkeling
200M	Scuba Diving
300M	Scuba Diving
1000M	Scuba Diving

CRYSTAL MATERIAL

Code	Description
СМ	Anti-Reflective Coated Mineral Crystal
CS	Anti-Reflective Coated Sapphire Crystal
MC	Mineral Crystal
SC	Sapphire Crystal

SIZING TYPE

Code	Description	
------	-------------	--

СВ	Cut Band
CS	Clip Spring Coupled
DS	Dual Screw Coupled
EC	Clip Pin Secured Expansion
EX	End or Center Tab
	Secured Expansion
PC	Pin and Single Locking Tube
PD	Pin and Dual Tube
PS	Split Pin ("Cotter Pin" Style)
SP	Split Pin
SS	Single Screw Link

CITIZEN

CITIZEN Watch America, Inc.,

1000 West 190th Street Torrance, CA 90502-1040

For Orders, Repairs and Parts:

(800) 321-1023 Fax (310) 532-8101 London • Los Angeles • Mexico City • New York • Toronto • Tokyo

CITIZEN, ECO-DRIVE, THE GLOBE LOGO and PROMASTER are registered trademarks of, and SUPER TITANIUM is a trademark of, CITIZEN Watch Holdings Co., Ltd. Swarovski® is a registered trademark of Swarovski Aktiengesellschaft. Use of Blue Angels name and logo is with the permission, but not endorsement, of the U.S. Navy. CORDURA® is a registered trademark of INVISTA for durable fabrics. Watch specifications subject to change; differences in manufacturing could result in slight variations.

Item No. F19-CATALOG. Printed in United States

www.citizenwatch.com

013205140600

©2019 CITIZEN Watch Company of America, Inc.